



VEHICLE LIFT AND SUPPORT LOCATIONS

IN029-01

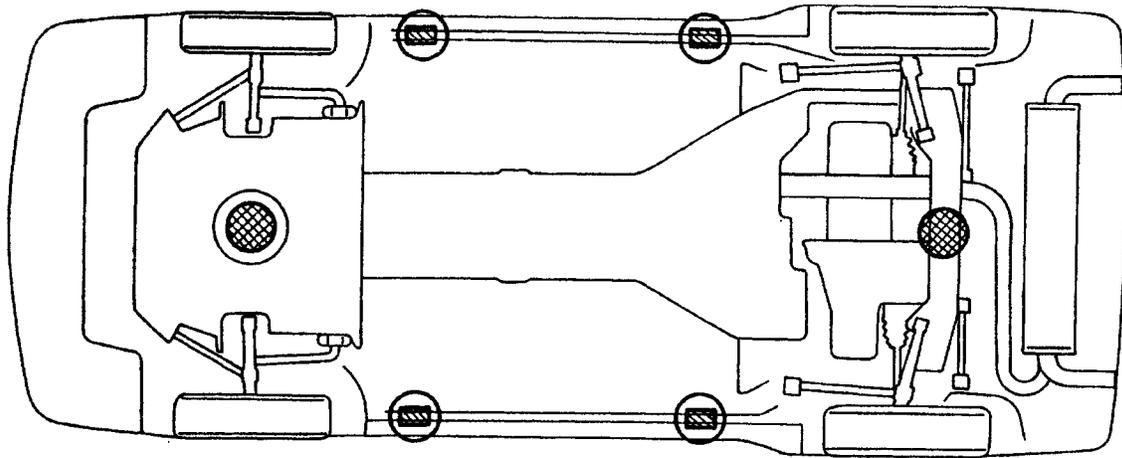

Front ←

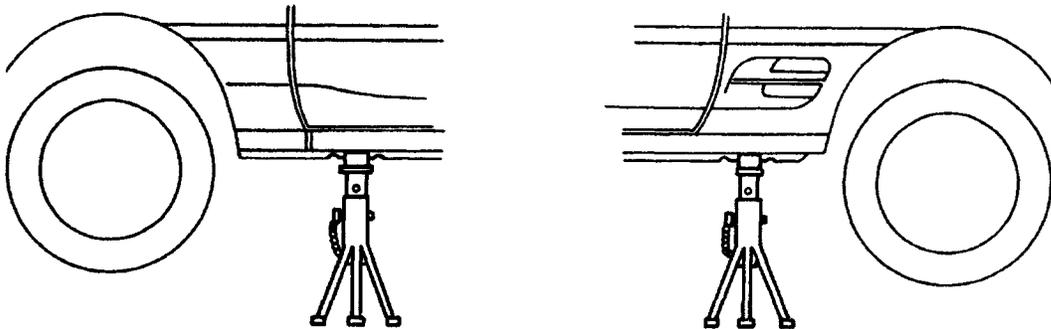

- JACK POSITION** _____ ●
 - Front Jack up support of front under cover center
 - Rear Rear suspension crossmember
- PANTOGRAPH JACK POSITION** _____ ○
- SUPPORT POSITION**
 - Safety stand ▨