

# ABBREVIATIONS USED IN THIS MANUAL

IN008-01

ABS	Anti-Lock Brake System	Max.	Maximum
A/C	Air Conditioner	M P	Multipurpose
Approx.	Approximately	M/T	Manual Transaxle
A/T	Automatic Transaxle	OD, O/D	Overdrive
ATF	Automatic Transmission Fluid	O/S	Oversize
BTDC	Before Top Dead Center	P & BV	Proportioning and Bypass Valve
CALI F.	Vehicles Sold in California	PCV	Positive Crankcase Ventilation
CB	Circuit Breaker	PS	Power Steering
CD	Compact Disc	RH	Right-Hand
DP	Dash Pot	RR	Rear
ECU	Electronic Control Unit	SRS	Supplemental Restraint System
ELR	Emergency Locking Retractor	SSM	Special Service Materials
EX	Exhaust (manifold, valve)	SST	Special Service Tools
Ex.	Except	STD	Standard
FI PG	Formed in Place Gasket	SW	Switch
FL	Fusible Link	TD C	Top Dead Center
FR	Front	T-VIS	Toyota-Variable Induction System
IN	Intake (manifold, valve)	U / D	Underdrive
IG	Ignition	U / S	Undersize
J/B	Junction Block	VSV	Vacuum Switching Valve
LED	Light Emitting Diode	w/	With
LH	Left-Hand	w/o	Without

V00851