
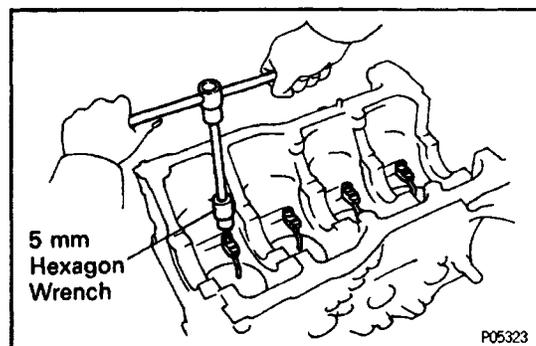


OIL NOZZLE COMPONENTS FOR REMOVAL AND INSTALLATION

80084-02

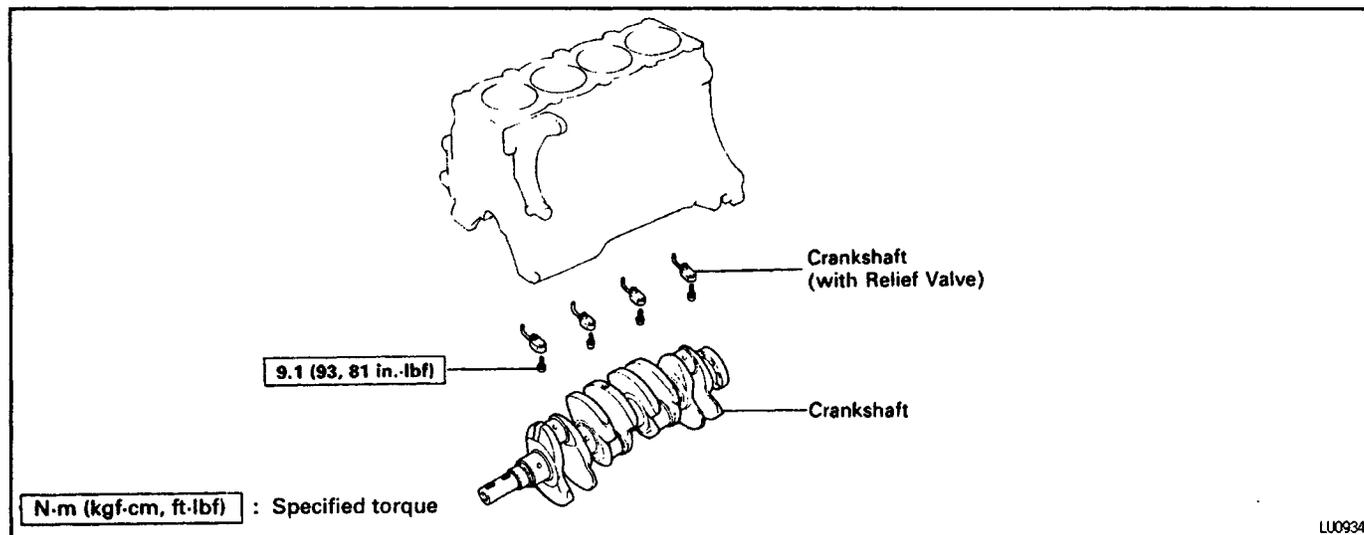


OIL NOZZLES REMOVAL

80108-01

1. REMOVE OIL CRANKSHAFT
(See Cylinder Block under Engine Mechanical)
2. REMOVE OIL NOZZLES

Using a 5 mm hexagon wrench, remove the bolt and oil nozzle. Remove the four nozzles.

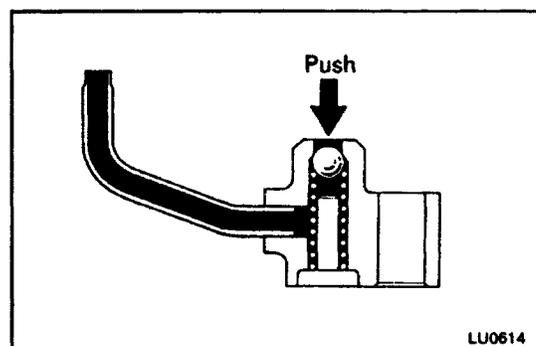


OIL NOZZLES INSPECTION

80108-01

INSPECT RELIEF VALVE

Push the valve with a wooden stick to check if it is stuck.

If stuck, replace the relief valve.

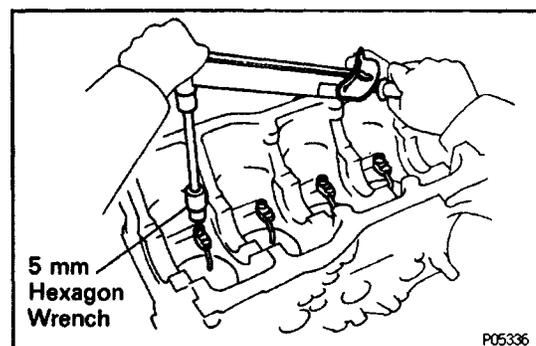

OIL NOZZLES INSTALLATION

80108-01

1. INSTALL OIL NOZZLES
Using a 5 mm hexagon wrench, install the oil nozzle with the bolt. Install the four nozzles.
Torque: 9.1 N-m (93 kgf-cm, 81 in.-lbf)
2. INSTALL CRANKSHAFT
(See Cylinder Block under Engine Mechanical)