

# PREPARATION

EG14U-01

## SST (SPECIAL SERVICE TOOLS)

|   |  |                           |
|---|--|---------------------------|
|    | 09032-00100 Oil Pan Seal Cutter                          |                           |
|    | 09226-10010 Crankshaft Front & Rear Bearing Replacer     | Crankshaft front oil seal |
|    | 09228-06500 Oil Filter Wrench                            |                           |
|    | 09616-30011 Steering Worm Bearing Adjusting Screw Wrench | Oil pump pulley           |
|    | 09620-30010 Steering Gear Box Replacer Set               |                           |
|    | (09627-30010) Steering Sector Shaft Bushing Replacer     | Oil pump oil seal         |
|  | (09631 -00020) Handle                                    | Oil pump oil seal         |

EG14V-01

## RECOMMENDED TOOLS

|   |                                 |                       |
|---|---------------------------------|-----------------------|
|  | 09090-04000 Engine Sling Device | For suspending engine |
|  | 09200-00010 Engine Adjust Kit   |                       |
|  | 09905-00013 Snap Ring Pliers    |                       |

EG14W-01

## EQUIPMENT

|                    |  |
|--------------------|--|
| Oil pressure gauge |  |
| Torque wrench      |  |

0014X-01

**LUBRICANT**

| Item  | Capacity  | Classification  |
|---|---|---|
| Engine oil<br>Dry fill<br>Drain and refill<br>w/ Oil filter change<br>w/o Oil filter change | 4.6 liters (4.9 US qts, 4.0 Imp. qts)<br><br>4.2 liters (4.4 US qts, 3.7 Imp. qts)<br>3.8 liters (4.0 US qts, 3.3 Imp. qts) | API grade SG, Energy-Conserving II<br>multigrade and recommended<br>viscosity oil |

0014Y-01

**SSM (SPECIAL SERVICE MATERIALS)**

|   |                     |
|---|---------------------|
| 08826-00080 Seal packing or equivalent                                      | Oil pan             |
| 08833-00080 Adhesive 1344,<br>THREE BOND 1344,<br>LOCTITE 242 or equivalent | Oil pressure switch |