

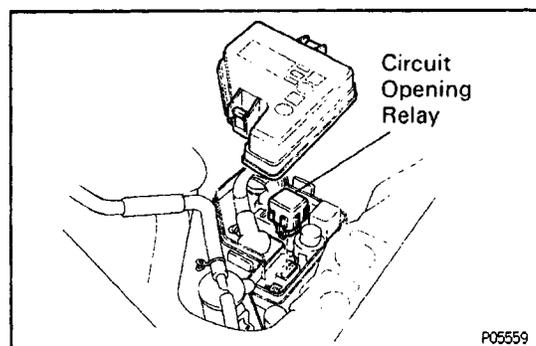


CIRCUIT OPENING RELAY

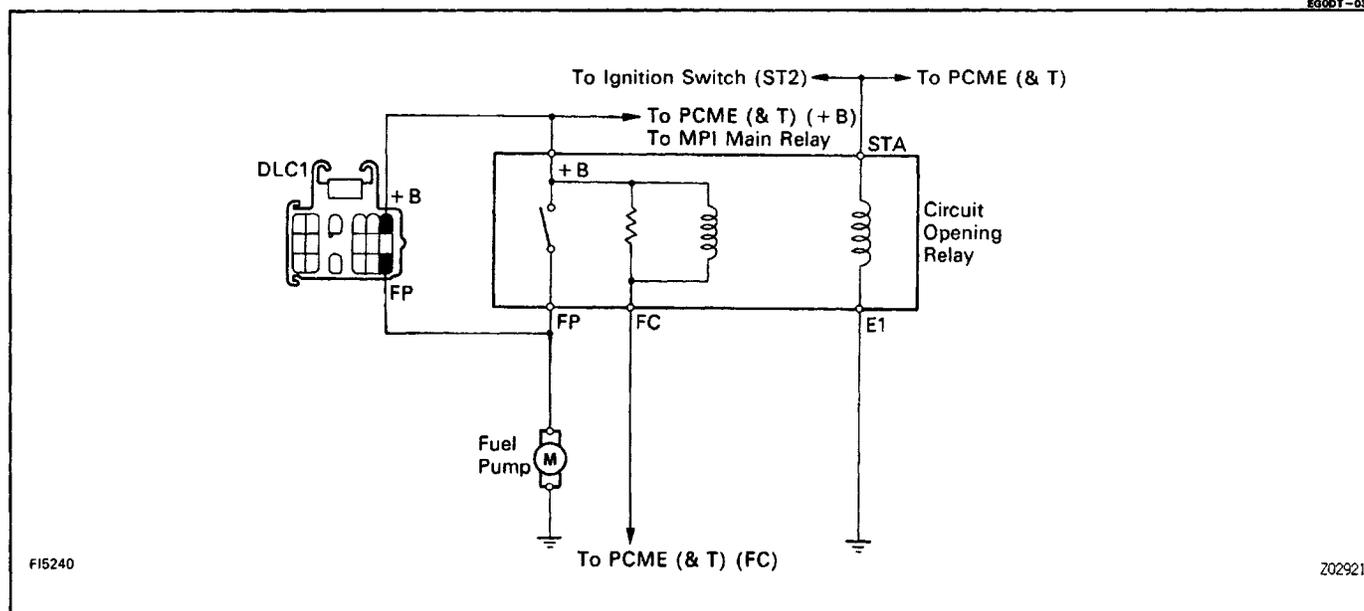

CIRCUIT OPENING RELAY ("C/OPN") INSPECTION

7. REMOVE CIRCUIT OPENING RELAY

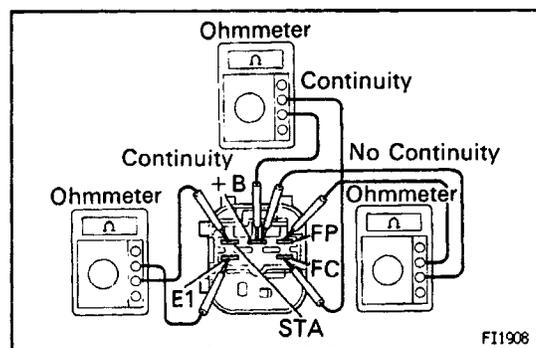

2. INSPECT CIRCUIT OPENING RELAY

A. Inspect relay continuity

- Using an ohmmeter, check that there is continuity between terminals STA and E1.
- Check that there is continuity between terminals +B and FC.
- Check that there is no continuity between terminals +B and FP.

If continuity is not as specified, replace the relay.

B. Inspect relay operation

- Apply battery voltage across terminals STA and E1.
- Using an ohmmeter, check that there is continuity between terminals +B and FP.

If operation is not as specified, replace the relay.

3. REINSTALL CIRCUIT OPENING RELAY

