


SUB-OXYGEN SENSOR (Calif.)

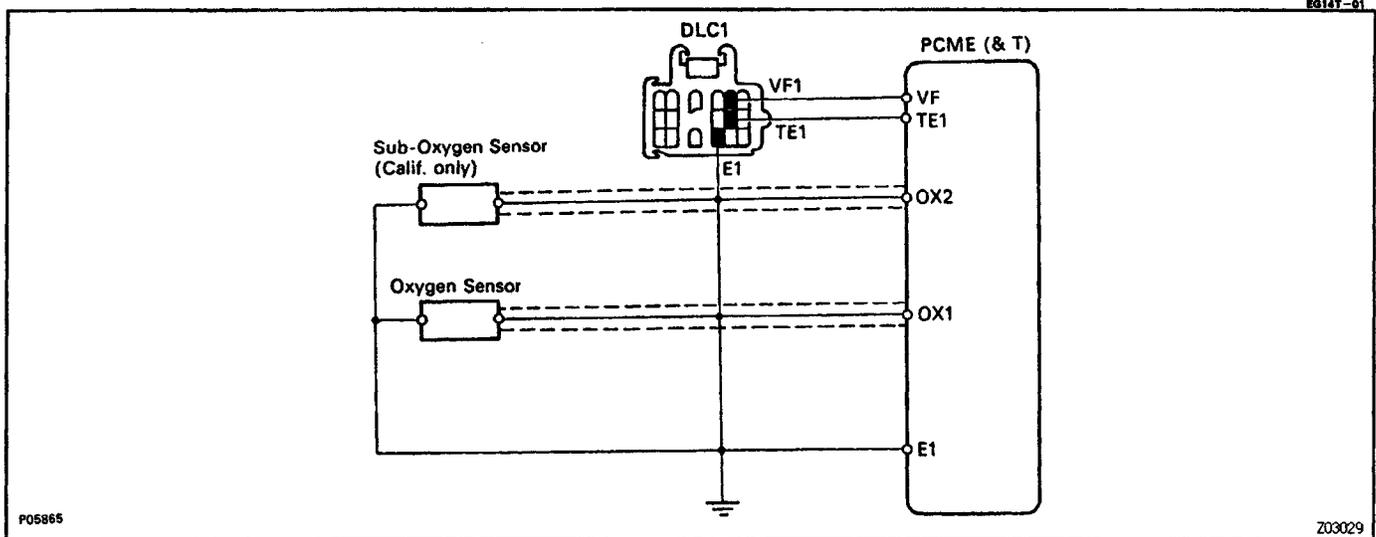

SUB-OXYGEN SENSOR INSPECTION

INSPECT SUB-OXYGEN SENSOR

EQ0E7-02

HINT: Inspect only when code No.27 is displayed.

- (a) Cancel the diagnostic code. (See Diagnosis System)
- (b) Warm up the engine until it reaches normal operating temperature.
- (c) (M/T)
 - Drive for 5 minutes or more at a speed less than 80 km/h (50 mph) in 4th or 5th gear.
 (A/T)
 - Drive for 5 minutes or more at a speed less than 80 km/h (50 mph) in D range.
- (d) Following the conditions in step (c), fully depress on the accelerator pedal for 2 seconds or more.
- (e) Stop the vehicle and turn the ignition switch OFF.
- (f) Carry out steps (b), (c) and (d) again to test acceleration. If code No.27 appears again, check the sub-oxygen sensor circuit. If the circuit is normal, replace the sub-oxygen sensor.