


IGNITION MAIN RELAY


IGNITION MAIN RELAY ("IGN")

INSPECTION

1. REMOVE IGNITION MAIN RELAY

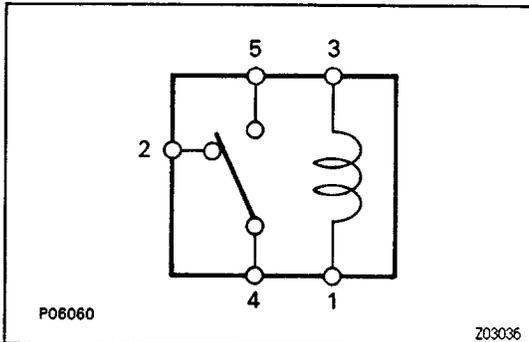

2. INSPECT IGNITION MAIN RELAY

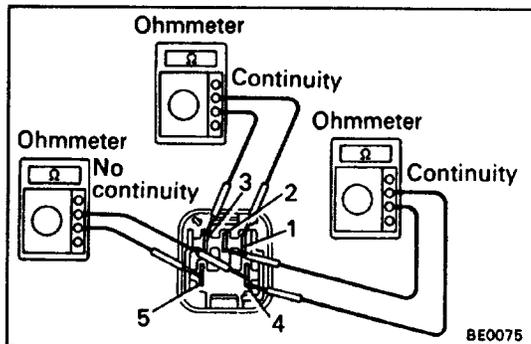

A. Inspect relay continuity


- Using an ohmmeter, check that there is continuity between terminals 1 and 3.
- Check that there is continuity between terminals 2 and 4.
- Check that there is no continuity between terminals 4 and 5.

If continuity is not as specified, replace the relay.

B. Inspect relay operation

- Apply battery voltage across terminals 1 and 3.
- Using an ohmmeter, check that there is continuity between the 2 and 4.
- Check that there is continuity between terminals 4 and 5.

If operation is not as specified, replace the relay.

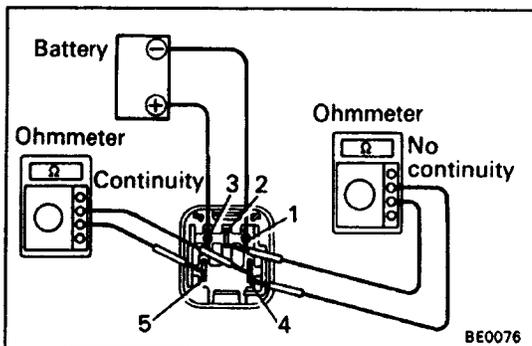

3. REINSTALL IGNITION MAIN RELAY