



## PRECAUTION

1. Do not leave the ignition switch on for more than 10 minutes if the engine does not start.

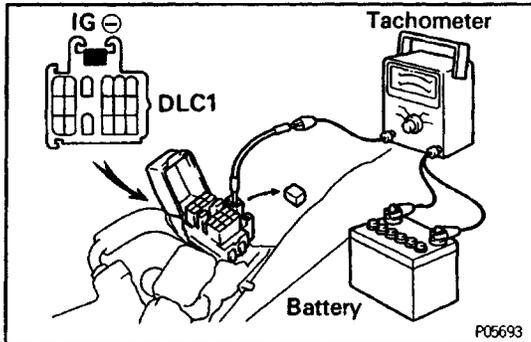

2. With a tachometer connected to the system, connect the test probe of the tachometer to terminal IG (-) of the data link connector 1.

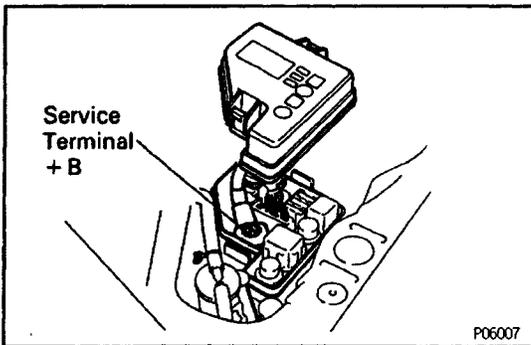

3. With a tachometer connected to the system, connect the power source probe of the tachometer to service terminal +B of the engine compartment relay box.

4. As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your before use.
5. Never allow the tachometer terminals to touch ground as it could result in damage to the igniter and/or ignition coil.
6. Do not disconnect the battery while the engine is running.
7. Check that the igniter is properly grounded to the body.