


4. INSPECT STARTER RELAY


A. Inspect relay continuity

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 3.
 - (b) Check that there is no continuity between terminals 2 and 4.
- If continuity is not as specified, replace the relay.

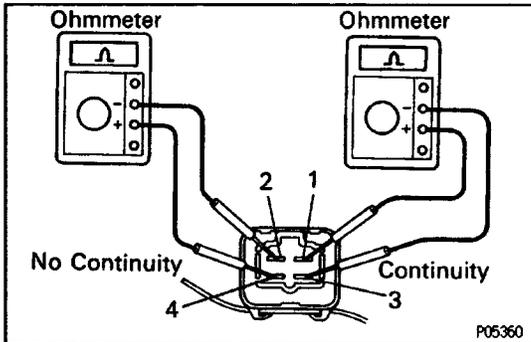

6. Inspect relay operation

- (a) Apply battery voltage across terminals 1 and 3.
 - (b) Using an ohmmeter, check that there is continuity between terminals 2 and 4.
- If operation is not as specified, replace the relay.

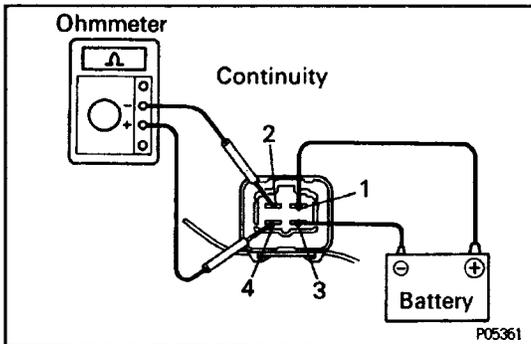

5. REINSTALL STARTER RELAY

6. REINSTALL LUGGAGE COMPARTMENT FLOOR MAT

7. RECONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY

CLUTCH START SWITCH

(See MX section)

8T013-01

PARK/NEUTRAL SWITCH (PNS)

(See AX section)

8T014-01