



# STARTER RELAY

## COMPONENTS FOR REMOVAL AND INSTALLATION

ST032-01

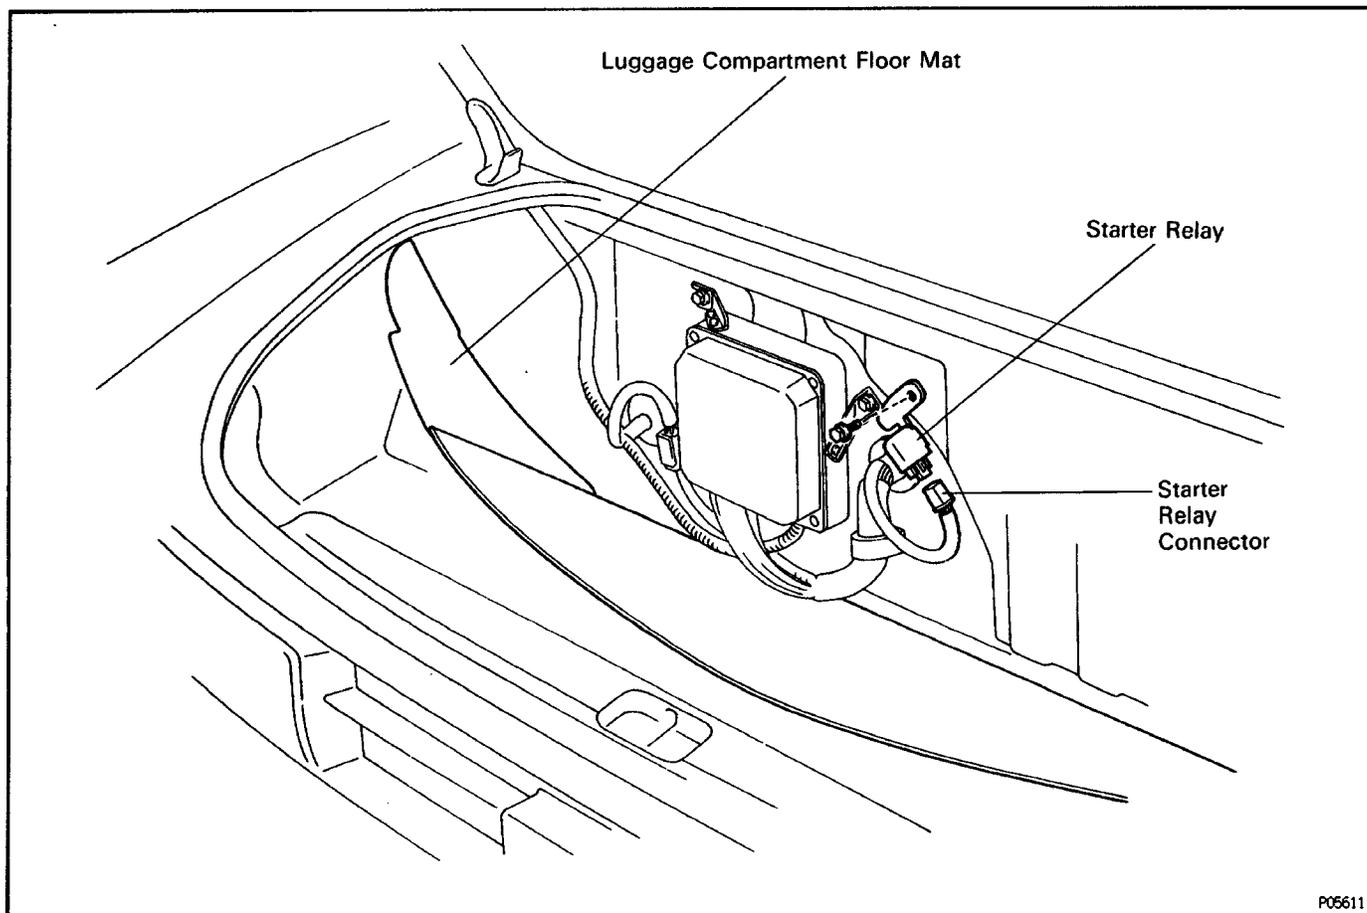

P05611

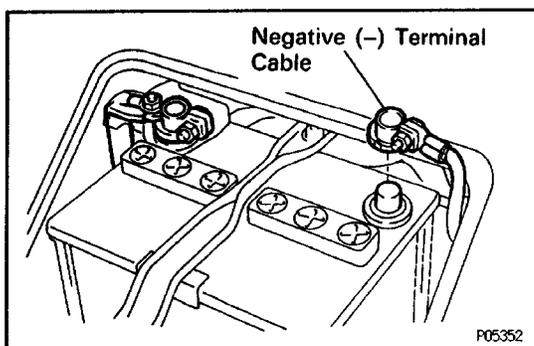

P05352

ST030-01


## STARTER RELAY INSPECTION

(See Components for Removal and Installation)

1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY

**CAUTION:** Turn the ignition switch to "LOCK". Disconnect the negative terminal from the battery. Wait at least 20 seconds before proceeding with work.


2. DISCONNECT FRONT SIDE OF LUGGAGE COMPARTMENT FLOOR MAT FROM PARTITION PANEL
3. REMOVE STARTER RELAY

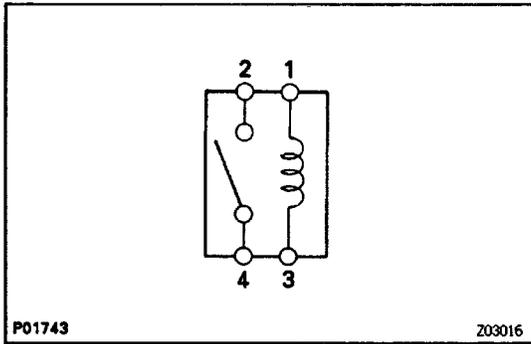

#### 4. INSPECT STARTER RELAY


##### A. Inspect relay continuity

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 3.
  - (b) Check that there is no continuity between terminals 2 and 4.
- If continuity is not as specified, replace the relay.

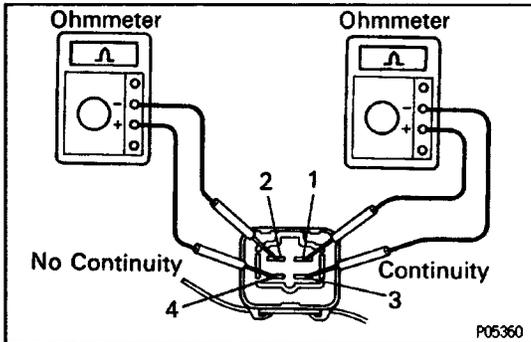

##### 6. Inspect relay operation

- (a) Apply battery voltage across terminals 1 and 3.
  - (b) Using an ohmmeter, check that there is continuity between terminals 2 and 4.
- If operation is not as specified, replace the relay.

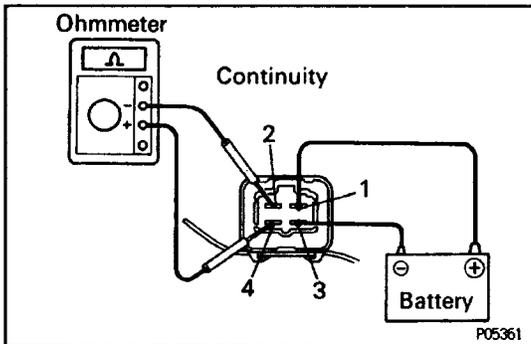

#### 5. REINSTALL STARTER RELAY

#### 6. REINSTALL LUGGAGE COMPARTMENT FLOOR MAT

#### 7. RECONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY

## CLUTCH START SWITCH

(See MX section)

8T013-01

## PARK/NEUTRAL SWITCH (PNS)

(See AX section)

8T014-01