

## DIFFERENTIAL OIL SEAL DIFFERENTIAL OIL SEAL REMOVAL

AX07G-01

### 1. DRAIN TRANSAXLE FLUID

Remove the drain plug and drain the fluid into a suitable container.

### 2. REMOVE ENGINE UNDER COVER


### 3. REMOVE LH AND RH DRIVE SHAFTS

(See page [SA-55](#))

### 4. REMOVE LH AND RH SIDE OIL SEALS

Using SST, drive out the both side oil seals.

SST 09308-00010

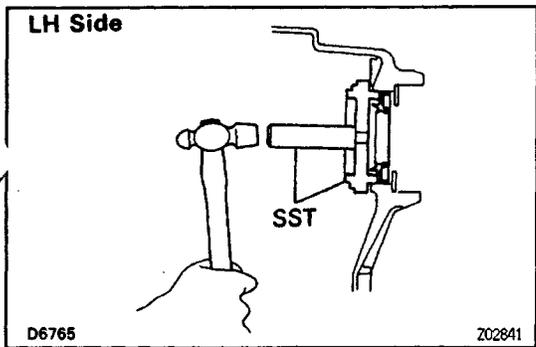

## DIFFERENTIAL OIL SEAL INSTALLATION

### 1. INSTALL LH SIDE OIL SEAL


(a) Using SST, drive in a new oil seal.

SST 09350-32014 (09351-32111, 09351-32130)

Oil seal drive in depth:

$5.2 \pm 0.5$  mm (0.205  $\pm$  0.020 in.)

(b) Coat the oil seal lip with MP grease.

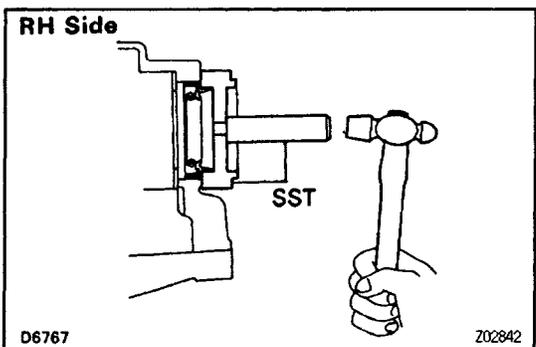

### 2. INSTALL RH SIDE OIL SEAL

(a) Using SST, drive in a new oil sea) until SST makes contact with the case surface.

SST 09350-32014 (09351-32150, 09351-32130)

Oil seal drive in depth:

$0 \pm 0.5$  mm (0.020 in.)

(b) Coat the oil seal lip with MP grease.

### 3. INSTALL LH AND RH DRIVE SHAFT

(See page [SA-64](#))

### 4. FILL TRANSAXLE WITH ATF

(See page [AX-14](#))

**NOTICE:** Do not overfill.

Fluid type:

ATF DEXRON®II

### 5. CHECK FLUID LEVEL

### 6. INSTALL ENGINE UNDER COVER