


# SENSOR ROTOR

## SENSOR ROTOR REMOVAL


AX078-01

### REMOVE SPEED SENSOR AND SENSOR ROTOR

- (a) Remove the retaining plate and pull out the speed sensor.
- (b) Remove the O-ring from speed sensor.

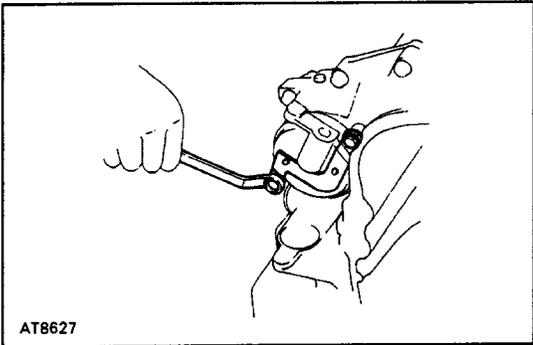


- (c) Remove the two bolts and sensor cover bracket.

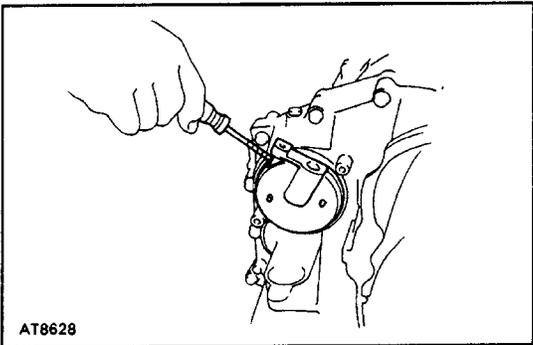


- (d) Using a screwdriver, remove the sensor cover.

HINT: Tape the screwdriver tip before use so as not to damage the cover or transaxle.

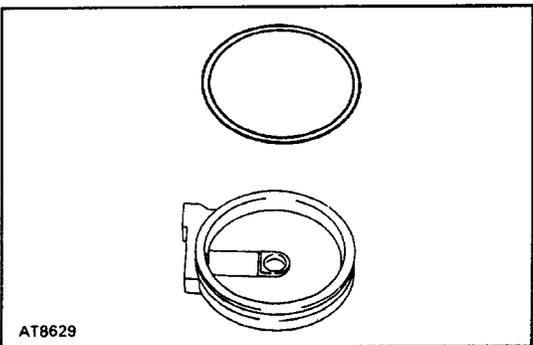


- (e) Remove the O-ring from the sensor cover.

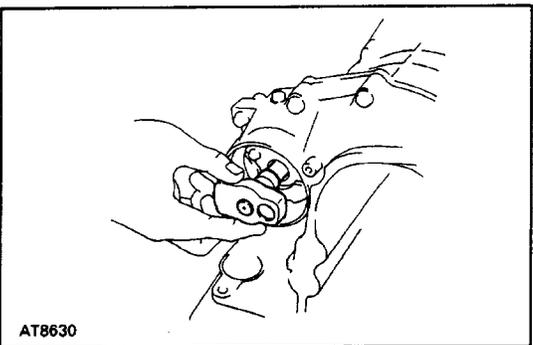


- (f) Remove the sensor rotor.

## SENSOR ROTOR INSTALLATION INSTALL SPEED SENSOR AND SENSOR ROTOR

(a) Install the sensor rotor.

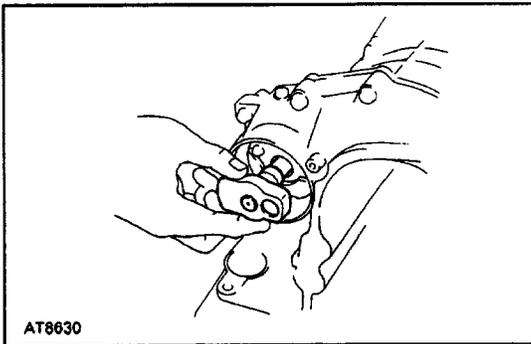


(b) Install a new O-ring to the sensor cover.

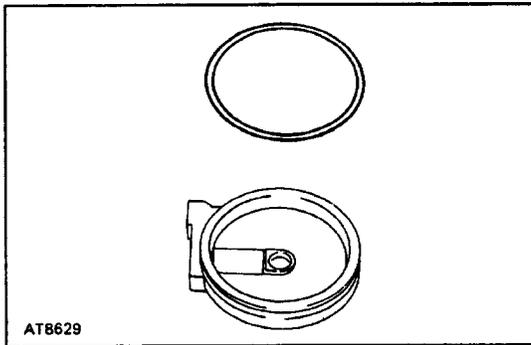

(c) Install the sensor cover to the transmission and then install the sensor cover bracket with the two bolts.

**Torque: 5.4 N-m (55 kgf-cm, 48 in.-lbf)**

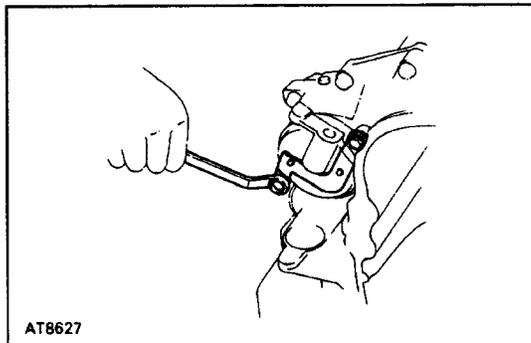

(d) Coat a new O-ring with ATF and install it to the speed sensor.

(e) Install the speed sensor and retaining plate.

**Torque: 5.4 N-m (55 kgf-cm, 48 in.-lbf)**

