



STRUT BAR COMPONENTS

SA08L-01

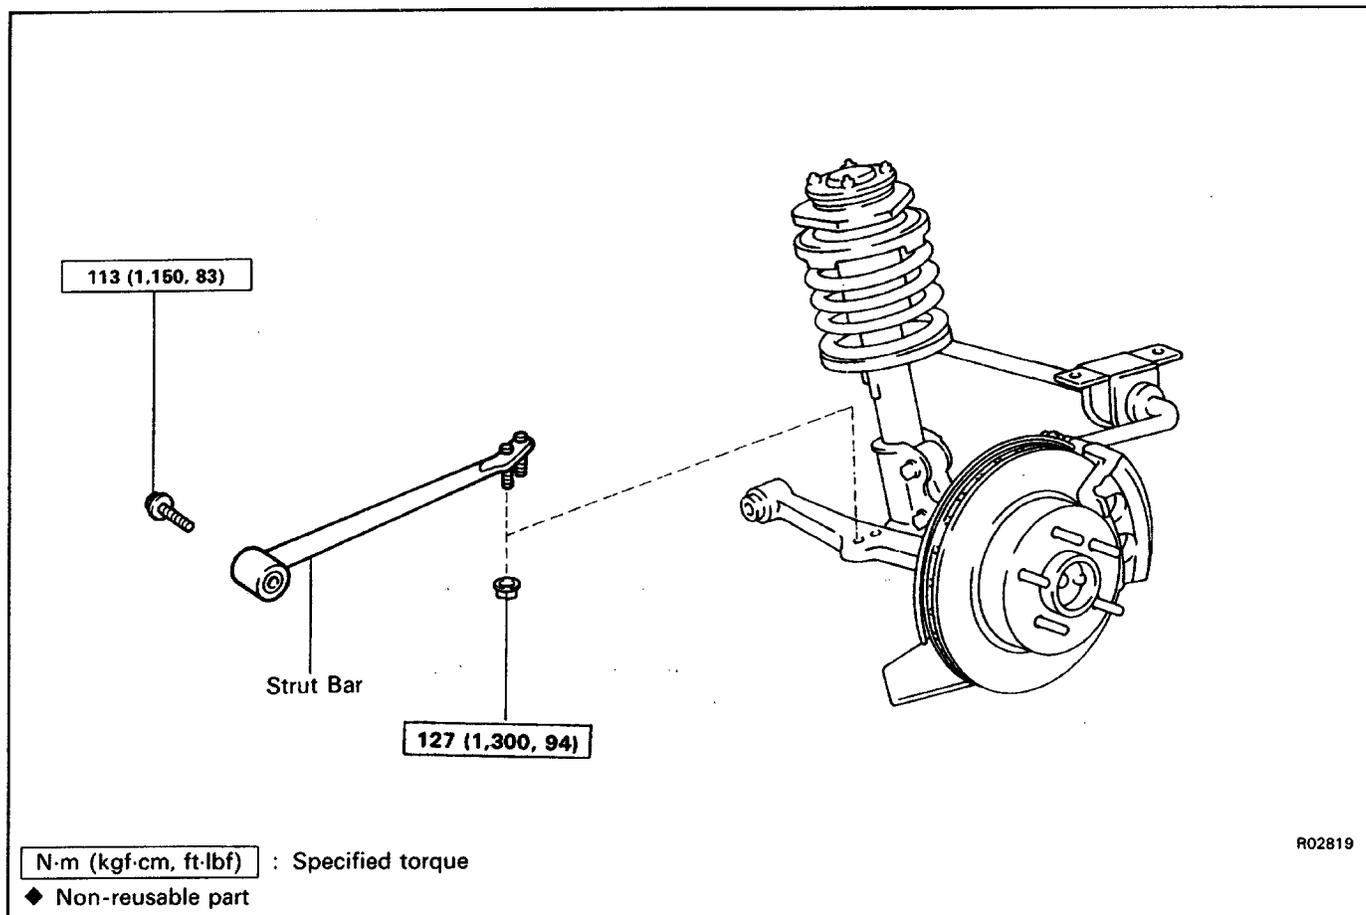


SA08M-01

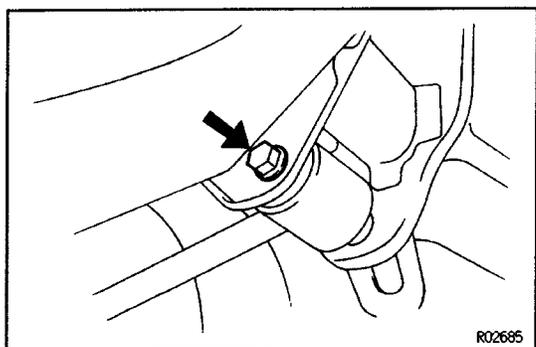


STRUT BAR REMOVAL

1. REMOVE STRUT BAR

(a) Remove the bolt and disconnect the strut bar from the body.

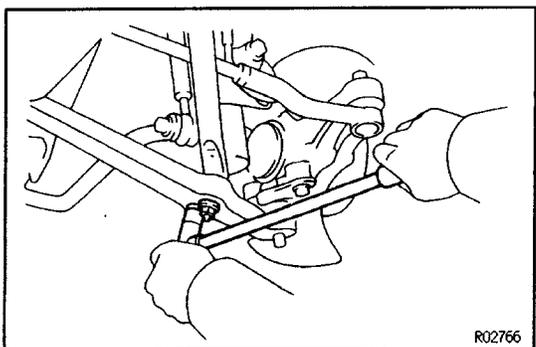


(b) Remove the two nuts and strut bar.

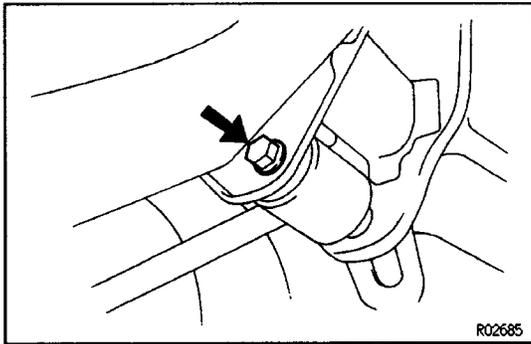

STRUT BAR INSTALLATION


1. INSTALL STRUT BAR

- (a) Temporarily install the strut bar to the body with the bolt.

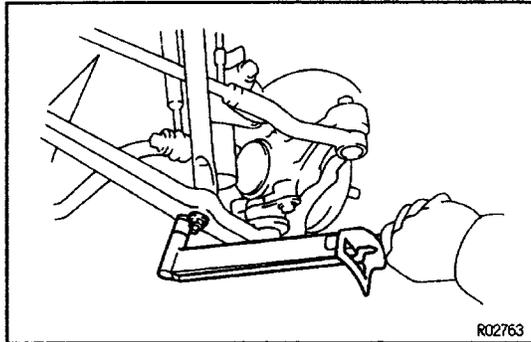


- (b) Install the strut bar to the lower arm with the two nuts.

Torque: 113 N-m (1,150 kgf-cm, 83 ft-lbf)

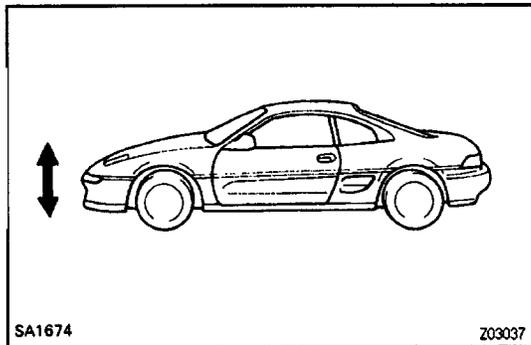

2. STABILIZE SUSPENSION

- (a) Lower the vehicle.
Torque: 103 N-m (1,050 kgf-cm, 76 ft-lbf)
- (b) Bounce the vehicle up and down several times to allow the suspension to settle.

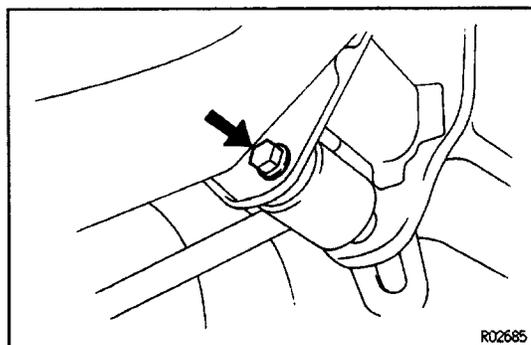

3. TORQUE BOLT

Torque bolt with the vehicle load applied on the suspension.

Torque: 127 N-m (1,300 kgf-cm, 94 ft-lbf)

4. CHECK FRONT WHEEL ALIGNMENT

(See page [SA-3](#))