 
 


**PREPARATION****SST (SPECIAL SERVICE TOOLS)**

SAACG-01

	09223-15010 Crankshaft Rear Oil Seal Replacer	
	09308-00010, Oil Seal Puller	
	09318-60010 Transmission & Transfer Bearing Replacer	
	(09316-00010) Replacer Pipe	
	09570-22011 Differential Mounting Cushion Remover & Replacer	
	09608-16041 Front Hub Bearing Adjusting Tool	
	(09608-02010) Cover	
	09726-10010 Lower Suspension Arm Bushing Remover & Replacer	
	(09726-00030) Spacer	Drive shaft inboard joint
	09923-00020 Hexagon 8 mm Wrench	
	09950-00020 Bearing Remover	Center drive shaft dust cover

SAACG-01

**RECOMMENDED TOOLS**

	09905-00012 Snap Ring No. 1 Expander	For removing and installing snap ring
---	--------------------------------------	---------------------------------------

**EQUIPMENT**

Torque wrench	
---------------	--

**LUBRICANT**

Item	Capacity	Classification
Outboard joint grease	120-130 g (0.26-0.29 lb)	
Inboard joint grease	90-100 g (0.20-0.22 lb)	
Side gear shaft grease	43-53 g (0.09-0.12 lb)	

**SSM (SPECIAL SERVICE MATERIALS)**

08826-00801	Seal Packing 1121, Three bond 1121, or equivalent	Drive shaft inboard joint cover
-------------	--	---------------------------------