

# TROUBLESHOOTING

BR7G-01

Problem		No.
"A6S" warning light	Always comes on after ignition switch is turned on.	1
	Does not come on for 3 seconds after ignition switch on.	2
	Comes on and off.	3
	Comes on while running.	1
Brake condition*	Brakes pull.	4
	Braking inefficient.	4
	ABS operates at ordinary braking.	4
	ABS operates just before stopping at ordinary braking.	4
	Brake pedal pulsates abnormally while ABS is operating.	4
	Skidding noise occurs while ABS operating. (ABS operates inefficiently)	5

V00402

1	"ABS" warning light comes on.
---	-------------------------------

Pull out the short pin and connect terminals Tc and E, of data link connector. (See page BR-53)


Does warning light always come on or show the normal code? (Ignition switch on)


NO

See diagnostic code. (See page BR-55)

YES  
Continued on page BR-58

V00403

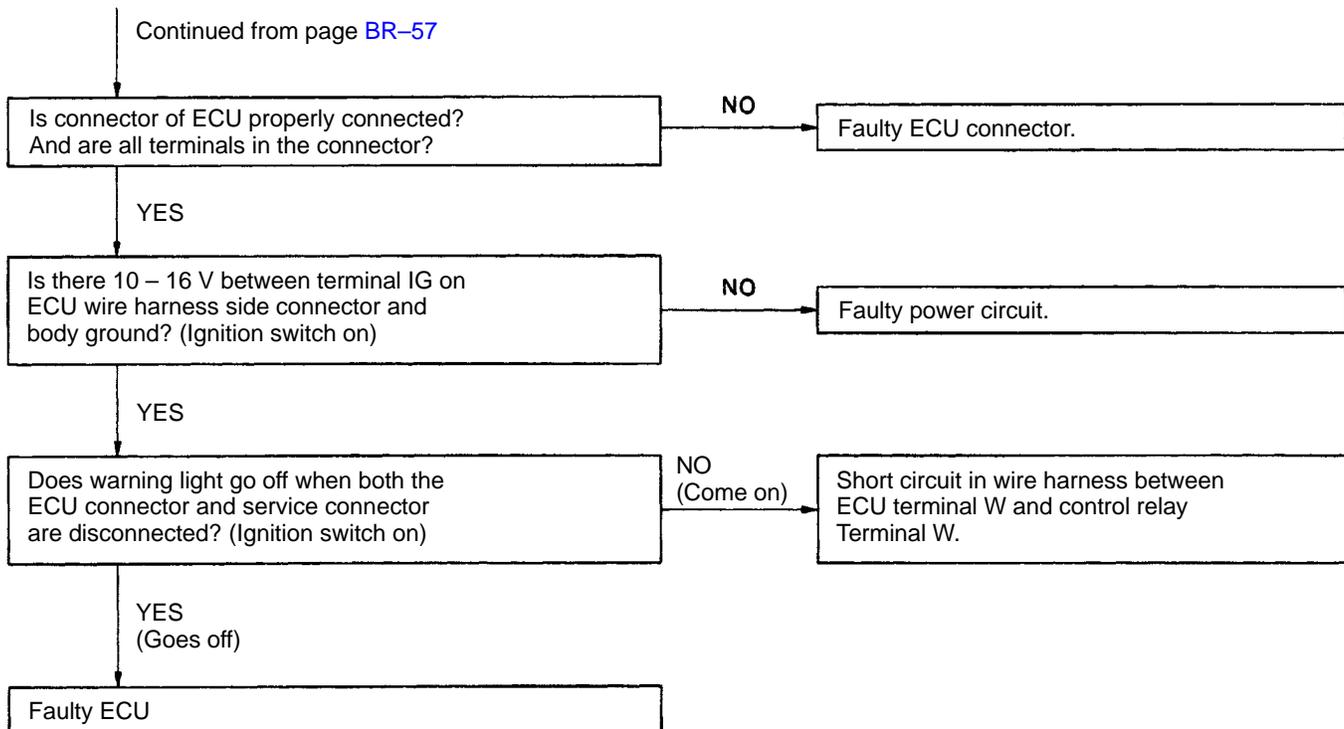

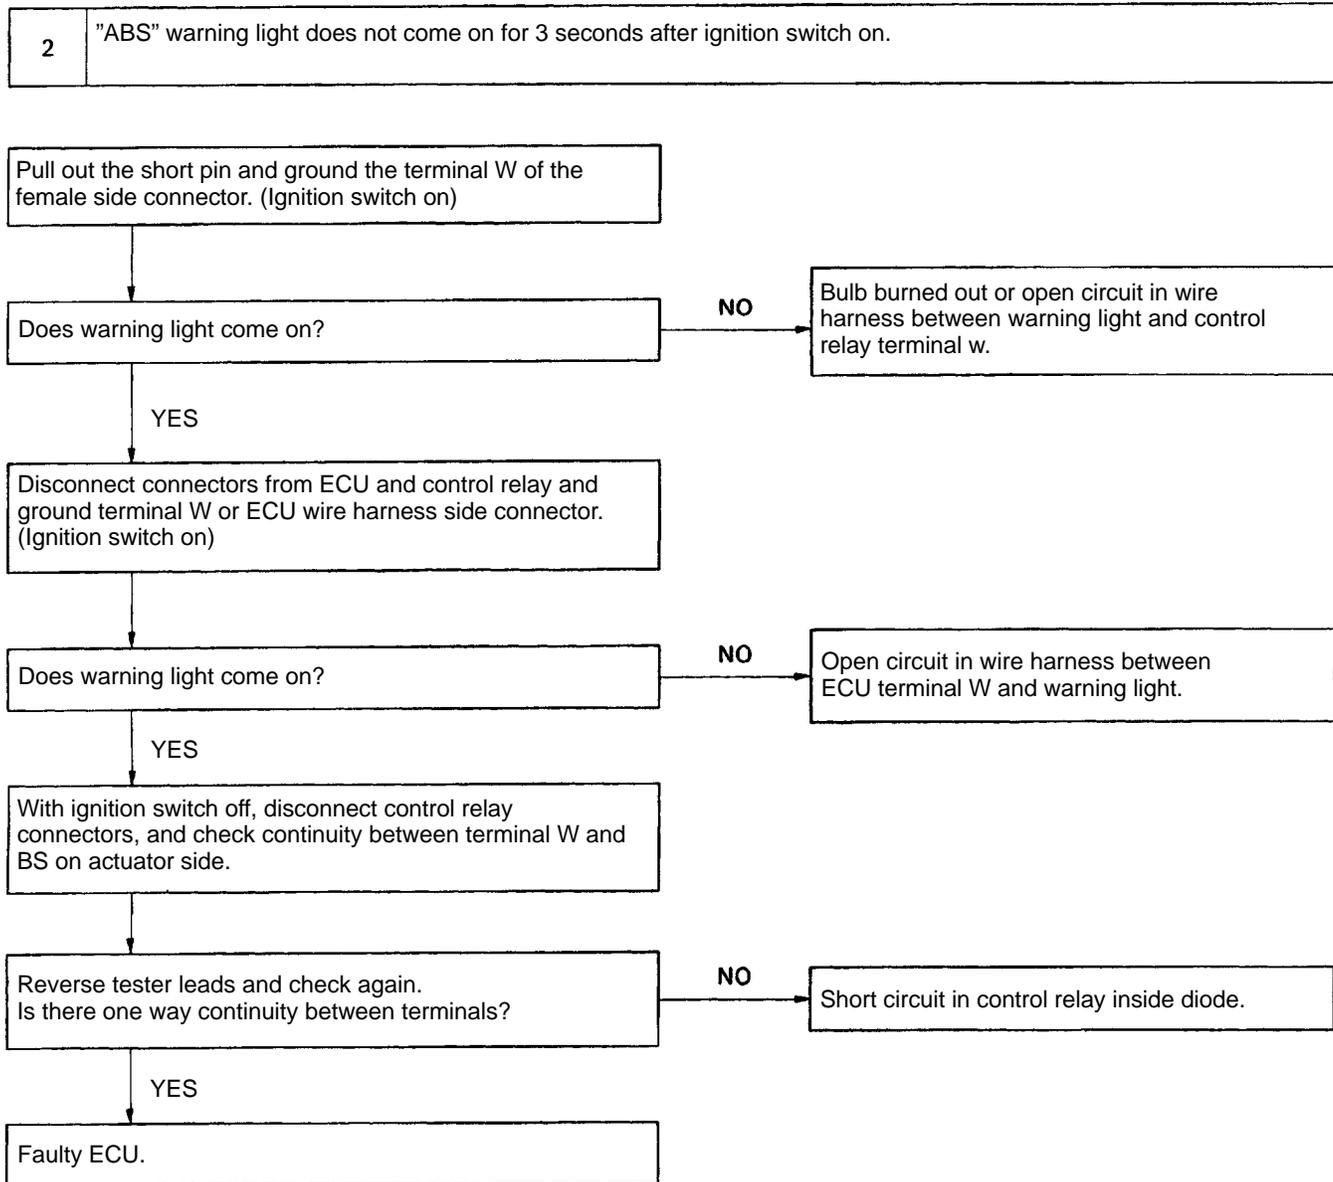



HINT: If the diode is short-circuited, a malfunction at ECU terminal W will occur. When inspecting the terminal, connect the ECU connector, and disconnect actuator connectors and data link connector. Then turn the ignition switch on, and check that the warning light goes on. If it does, the ECU terminal is OK.

3	"ABS" warning light comes on and off.
---	---------------------------------------

- Check for short circuit in wire harness between terminal Tc and E, of check connector.

4	<ul style="list-style-type: none"> <li>• Brakes pull.</li> <li>• Braking inefficient.</li> <li>• ABS operates at ordinary braking. 1 ABS operates just before stopping at ordinary braking.</li> <li>• Brake pedal pulsates abnormally while ABS is operating.</li> </ul>
---	---

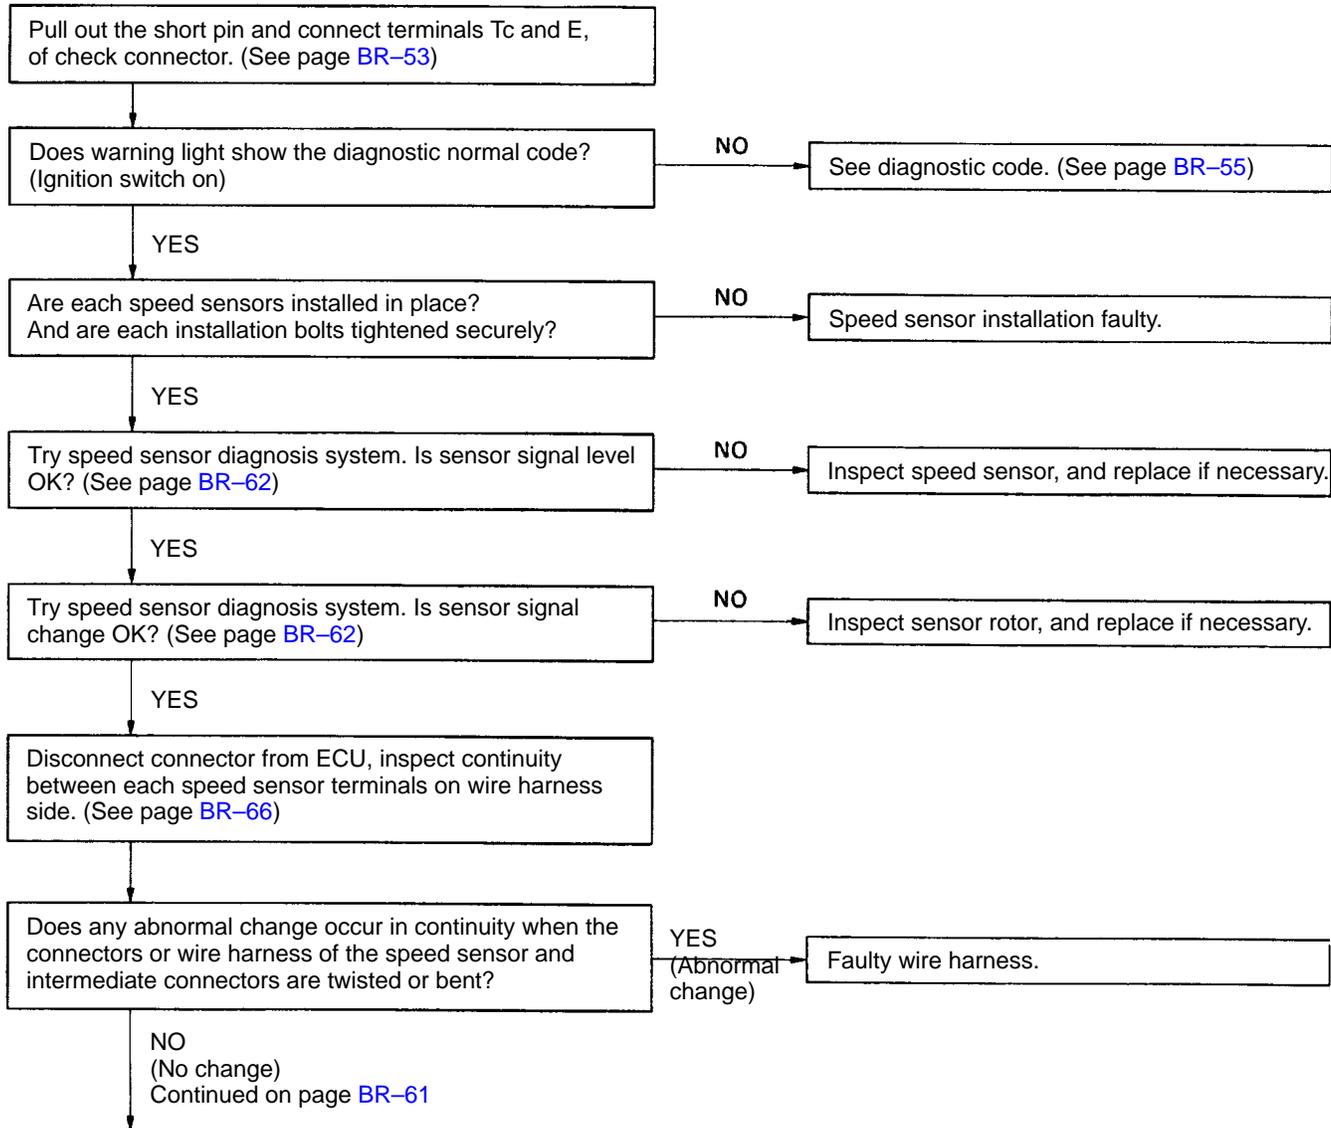

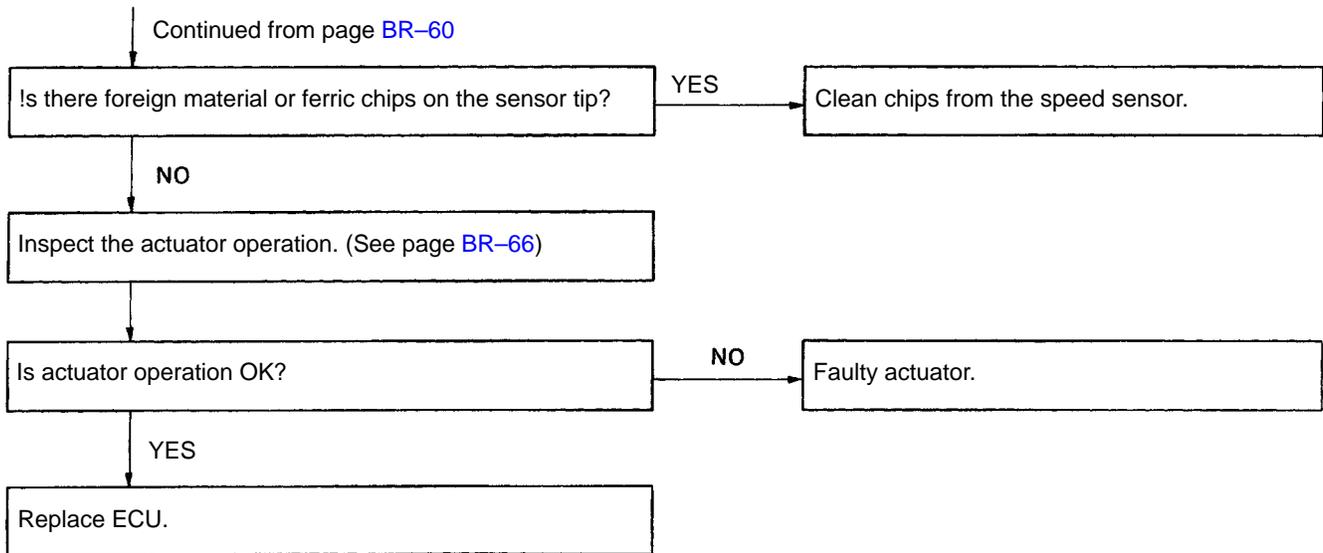

5	Anti-lock brake system operations inefficiently.
---	--

