


PROPORTIONING AND BY-PASS VALVE (P & B VALVE)

BR070-01

FLUID PRESSURE INSPECTION

1. INSTALL LSPV GAUGE (SST) AND BLEED AIR

SST 09709-29017

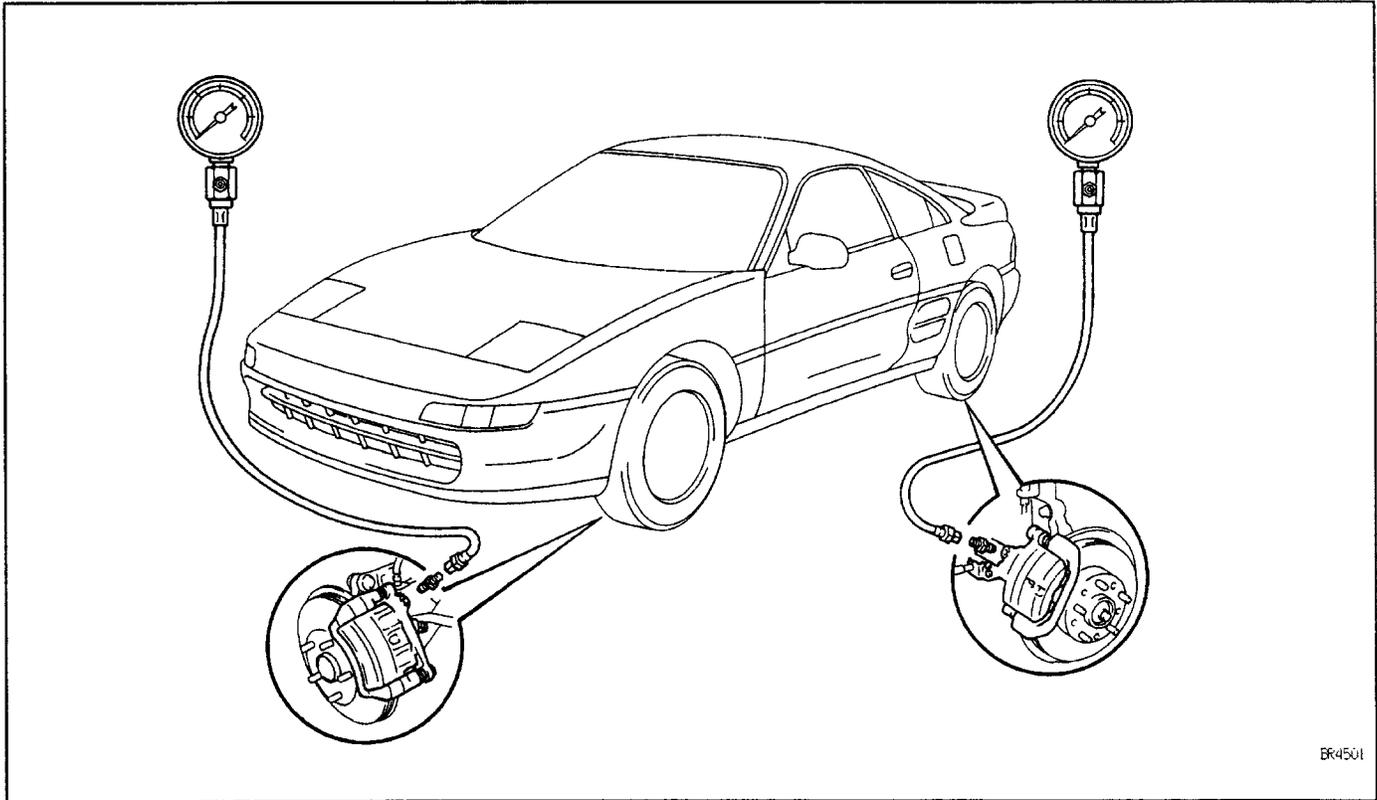

BR4501

2. RAISE MASTER CYLINDER PRESSURE AND CHECK REAR WHEEL CYLINDER PRESSURE

Specifications

	Master cylinder pressure	Rear wheel cylinder pressure
5S-FE	2,942 kPa (30 kgf/cm ² , 427 psi)	2,942 kPa (30 kgf/cm ² , 427 psi)
	7,845 kPa (80 kgf/cm ² , 1,138 psi)	5,884 kPa (60 kgf/cm ² , 853 psi)
3S-GTE	5,884 kPa (60 kgf/cm ² , 853 psi)	5,884 kPa (60 kgf/cm ² , 853 psi)
	9,807 kPa (100 kgf/cm ² , 1,422 psi)	8,238 kPa (84 kgf/cm ² , 1,195 psi)

W01001

If the rear wheel cylinder pressure is incorrect, replace the P & B valve assembly.

3. BLEED BRAKE SYSTEM

4. CHECK FOR FLUID LEAKAGE