



INSTALL FRONT AIRBAG SENSOR

Install the sensor with the arrow on the sensor facing toward the front of the vehicle.

Torque: 25 N-m (260 kgf-cm, 19 ft-lbf)

NOTICE:

- Make sure the sensor is installed to the specified torque.
- If the sensor has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor with a new one.
- The sensor set bolts and nuts have been anti-rust treated.
When the sensor is removed, always replace the set bolt and nut with new ones.
- After installation, shake the sensor to check that there is no looseness.
- The front sensor is equipped with an electrical connection check mechanism. Be sure to lock this mechanism securely when connecting the connector. If the connector is not securely locked, a malfunction code will be detected by the diagnosis system.
- Check that the dimensions of the body where the front airbag sensor is installed match those in the body dimension drawings on page [BO-80](#).
(The airbag may malfunction, or may not work, if the mounting angle or dimensions of the sensor mount are not correct.)