


# CENTER AIRBAG SENSOR ASSEMBLY

Remove and install the parts as shown.

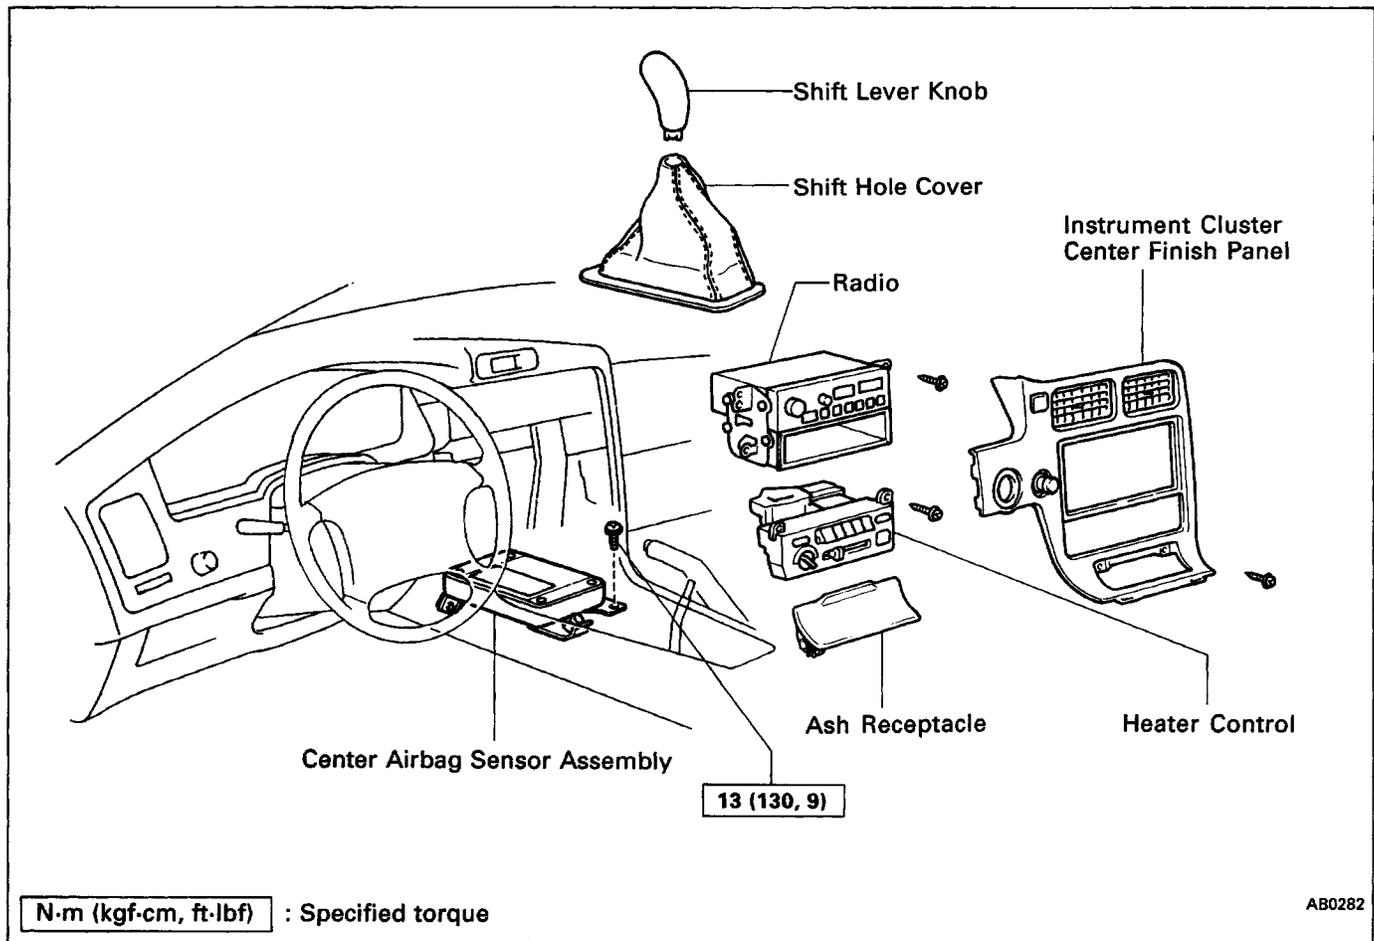

## (MAIN POINTS OF REMOVAL AND INSTALLATION)

**CAUTION:** Work must be started after approx. 30 seconds or longer from the time the ignition switch is turned to the LOCK position and the negative (-) terminal cable is disconnected from the battery (See page AB-2).


**NOTICE:**


- Do not open the cover or the case of the ECU and various computers unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)
- Never use airbag parts from another vehicle. When replacing parts, replace with new parts.
- Never repair a sensor in order to reuse it.

### REMOVE AND INSTALL CENTER AIRBAG SENSOR ASSEMBLY

(a) Disconnect and connect the connectors.

**NOTICE:** Removal and installation of the connectors is done with the sensor assembly installed.

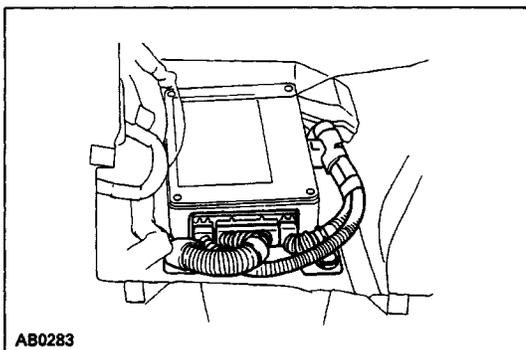

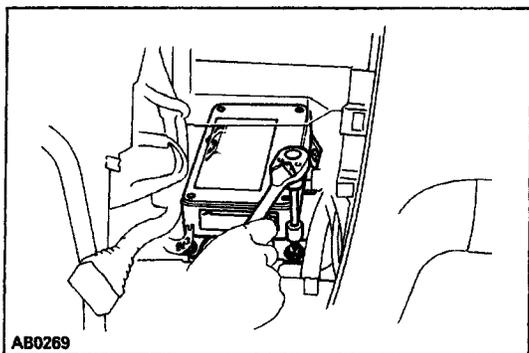

(b) Using a torx wrench, loosen and tighten the four screws.

Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)

**Torque: 13 N-m (130 kgf-cm, 9 ft-lbf)**

**NOTICE:**

- **Make sure the sensor assembly is installed to the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **when installing the sensor assembly, take care that the airbag wirings do not interfere with other parts and are not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**