

RELEASE METHOD OF AIRBAG ACTIVATION PREVENTION MECHANISM


An airbag activation prevention mechanism is built into the connector for the squib circuit of the airbag system. When release of the airbag activation prevention mechanism is directed in the troubleshooting procedure, as shown in the illustration of the connectors (1) and (D) below, insert paper which is the same thickness as the male terminal, between the terminal and the short spring.

CAUTION:

- **NEVER RELEASE** the airbag activation prevention mechanism on the steering wheel, pad connector.


NOTICE:

- Do not release the airbag activation prevention mechanism unless specifically directed by the troubleshooting. procedure.
- If the paper inserted is too thick the terminal and short spring may be damaged, so always use paper the same thickness as the male terminal.

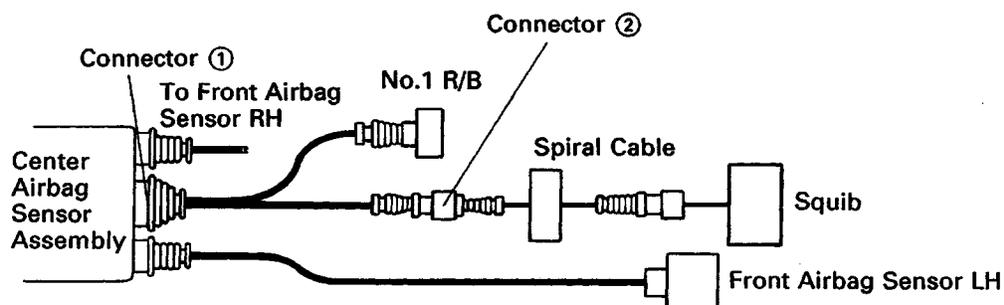


AB0123

Center Airbag Sensor Assembly Connector (Connector ①)

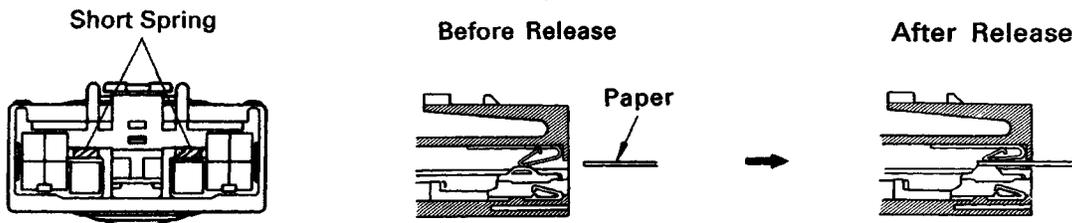

AB0129 AB0042 AB0043

Spiral Cable Connector (Connector ②)

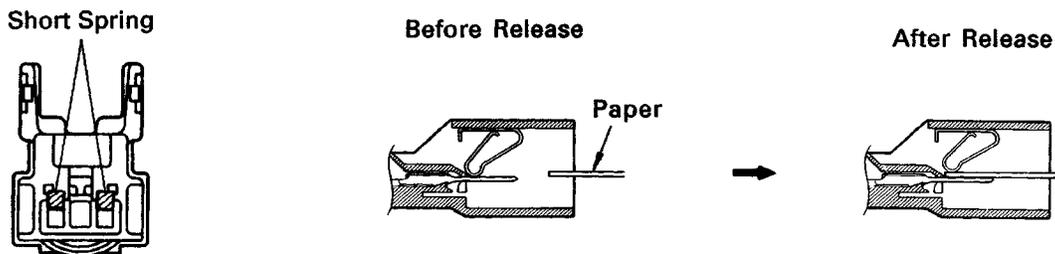

AB0130 AB0045 AB0046