



BACK-UP LIGHT SYSTEM PARTS LOCATION

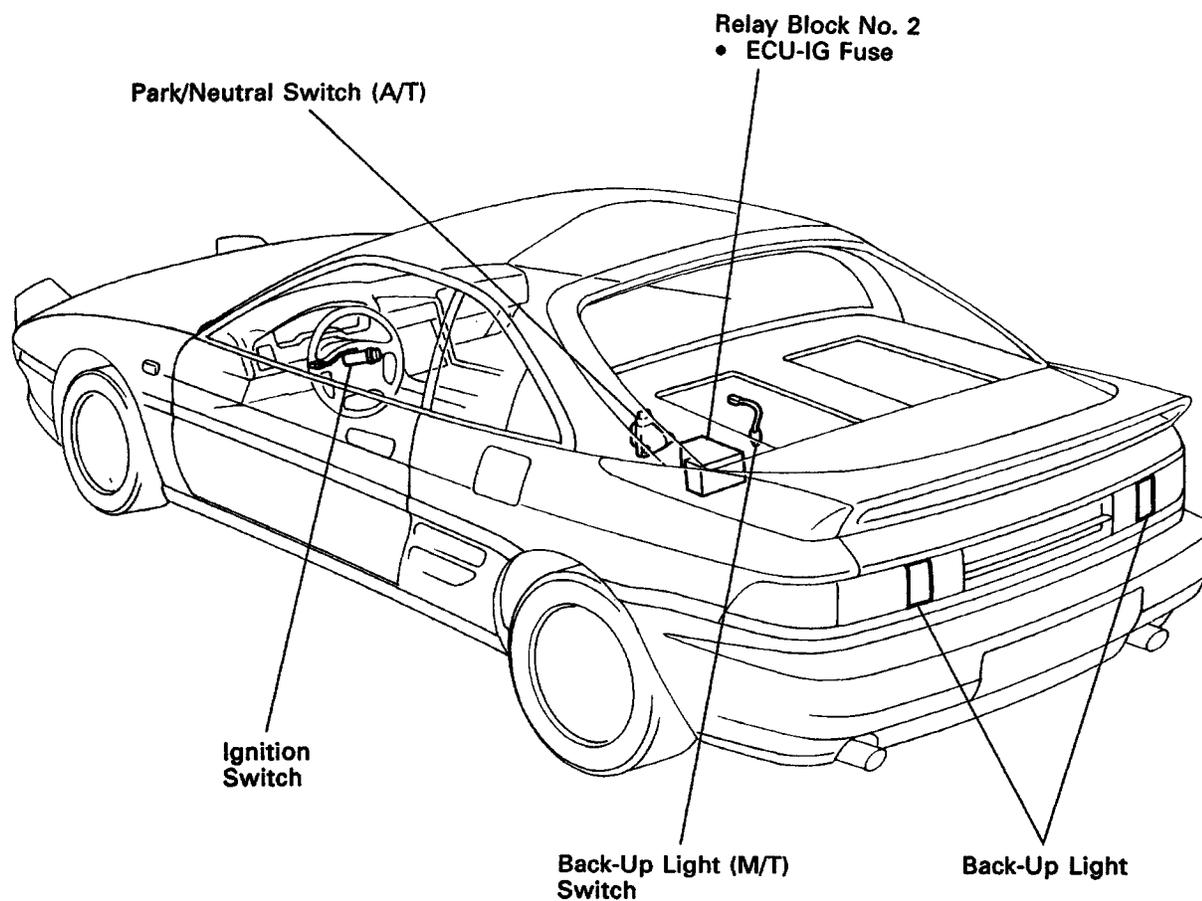


WIRING AND CONNECTOR DIAGRAMS

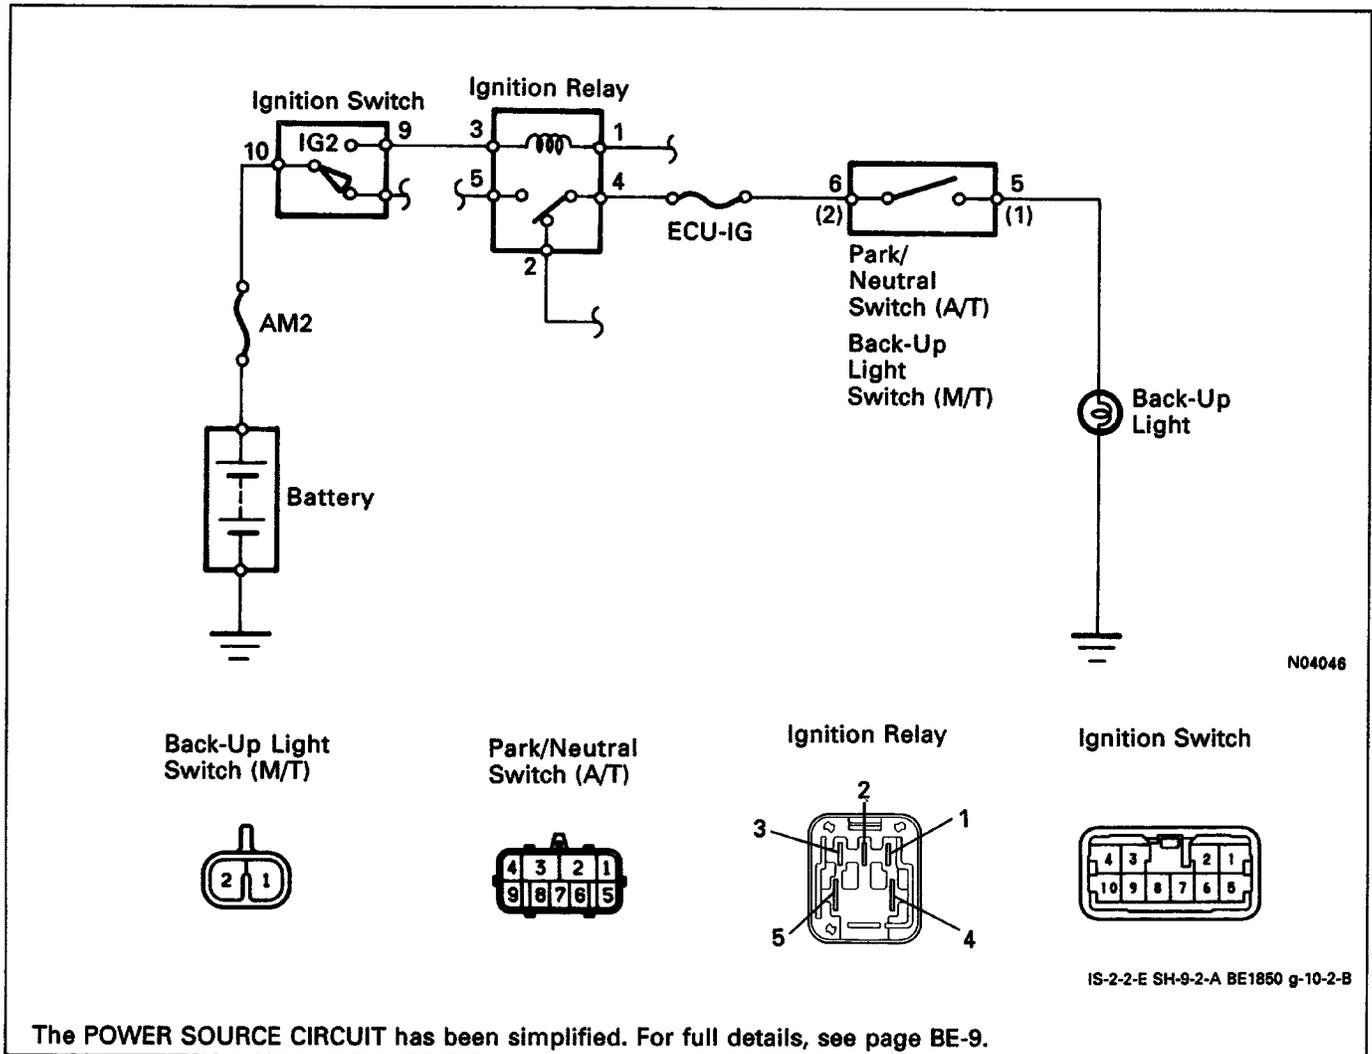

TROUBLESHOOTING

You will find the troubles easier using the table well shown below. In this table, each number shows the priority of causes in troubles. Check each part in order. If necessary, replace these parts.

Trouble	BE-11	BE-3	BE-58	BE-58 AX-35	1	1
Part name	Ignition Switch	ECU-IG Fuse	Ignition Relay	Back-Up Light Switch (M/T) Park/Neutral Switch (A/T)	Bulb	Wire Harness
Trouble	2	1	3	4	6	5
Back-Up light does not light up.	2	1	3	4	6	5
Back-Up light remains always on.						1
Only one light does not light up.						1

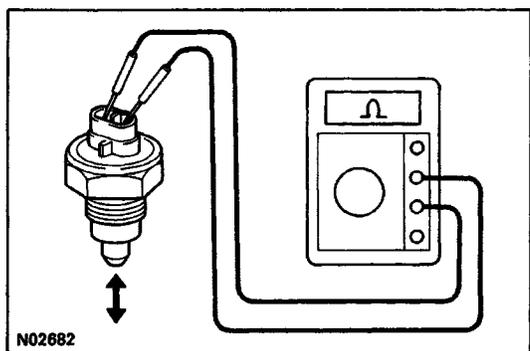

BACK-UP LIGHT SWITCH

BACK-UP LIGHT SWITCH INSPECTION

Check that there is continuity between terminals as shown.

Switch Position	Specified
Push	Continuity
Free	No continuity

If operation is not as specified, replace switch.

PARK/NEUTRAL SWITCH

PARK/NEUTRAL SWITCH INSPECTION

See page [AX-35](#).

IGNITION SWITCH

IGNITION SWITCH INSPECTION

See page [BE-11](#).

IGNITION RELAY

IGNITION RELAY INSPECTION

CONTINUITY

Terminal Condition	1	2	3	4	5
Constant	○		○	○	
Apply battery voltage to terminals 1 and 3.				○	○

If continuity is not as specified, replace the relay.