


IGNITION SWITCH PARTS LOCATION

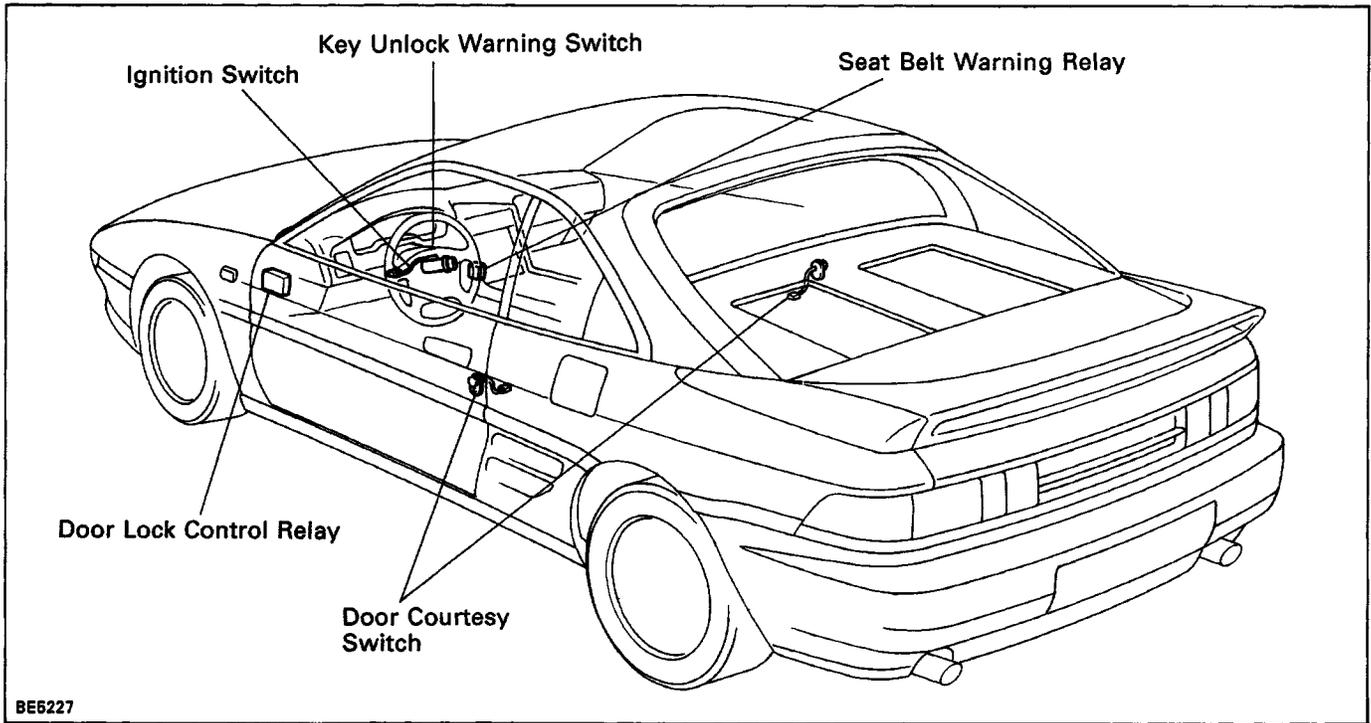

BE6227


WIRING DIAGRAM IGNITION SWITCH

See Power Source Section on page [BE-9](#).

KEY CONFINE PREVENTION SYSTEM

See Power Door Lock Control System on page [BE-96](#).

KEY UNLOCK WARNING SYSTEM

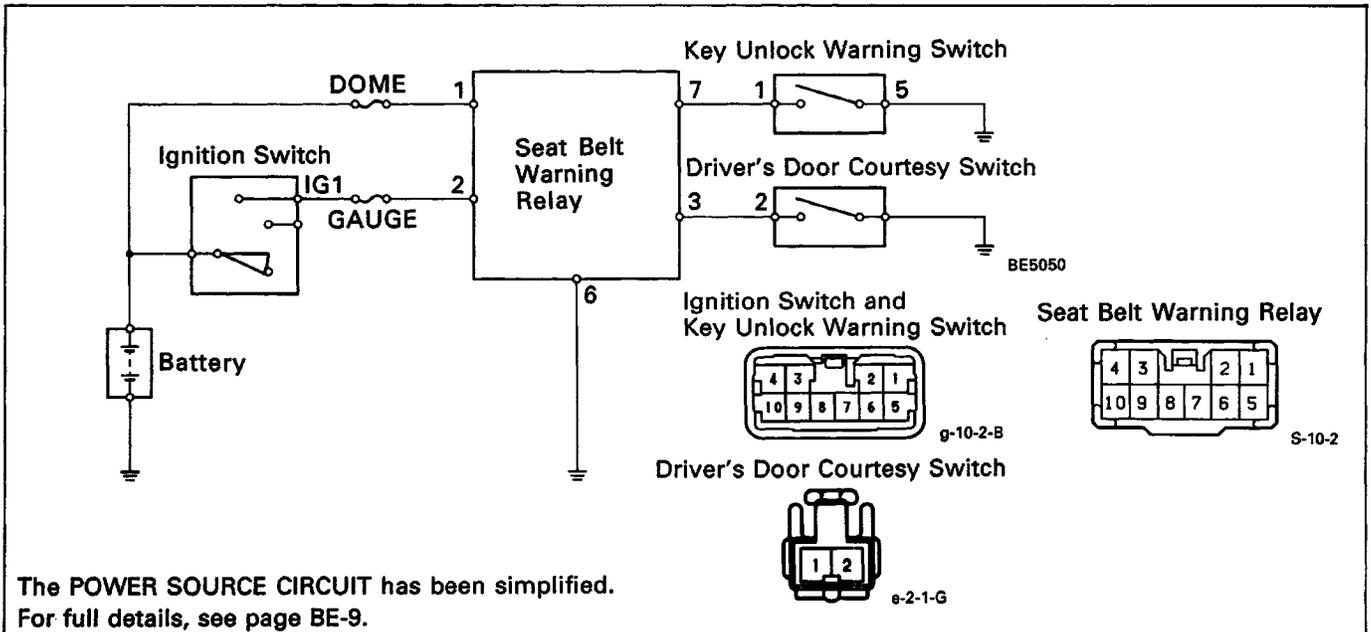

The POWER SOURCE CIRCUIT has been simplified.
For full details, see page [BE-9](#).


TROUBLESHOOTING

| Problem | Possible cause | Remedy | Page |
|--|--|---|----------------------------|
| Ignition switch is not seat to each position | Ignition switch faulty Power source circuit faulty | Check switch Repair as necessary | BE-1 1 BE-9 |
| Key confine prevention system does not operate | Key unlock warning switch faulty Door courtesy switch faulty Door lock control relay faulty Wiring faulty | Check switch Check switch Check relay Repair- as necessary | BE-1 1 BE-49 BE-1 02 |
| Key unlock warning system does not operate | Key unlock warning switch faulty Door courtesy switch faulty Seat Belt Warning Relay faulty Wiring faulty | Check switch Check switch Check relay Repair as necessary | BE-1 1 BE-49 BE-12 |

IGNITION SYSTEM

IGNITION SWITCH INSPECTION

CONTINUITY

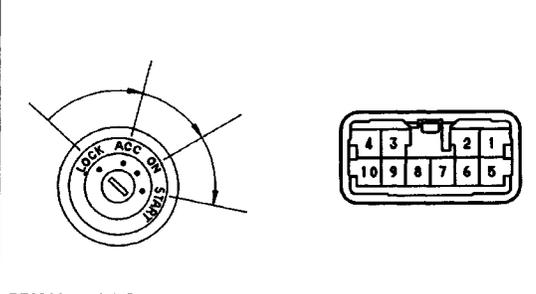
| | | | | | | | | |
|---|-----------------|-----|-----|------|-----|-----|-----|-----|
|  <p>BE0900 g-10-2-B</p> | Terminal | 2 | 3 | 4 | 6 | 7 | 9 | 10 |
| | Switch position | 1G1 | ACC | AM 1 | ST2 | ST1 | IG2 | AM2 |
| | LOCK | | | | | | | |
| | ACC | | ○—○ | | | | | |
| | ON | ○—○ | ○—○ | ○—○ | | | ○—○ | ○—○ |
| START | ○—○ | | ○—○ | | ○—○ | | ○—○ | |

If continuity is not as specified, replace the switch.

KEY CONFINE PREVENTION SYSTEM

KEY UNLOCK WARNING SWITCH INSPECTION

CONTINUITY
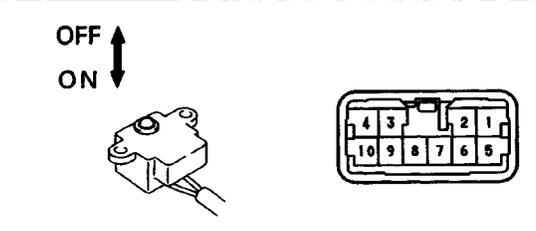
| | | | |
|--|-------------------------------|-----|---|
|  <p>BE2193 g-10-2-B</p> | Terminal | 1 | 5 |
| | Switch position | | |
| | OFF (ignition Key removed) | | |
| ON (Ignition Key set) | ○—○ | ○—○ | |

If continuity is not as specified, replace the switch.

DOOR COURTESY SWITCH

DOOR COURTESY SWITCH INSPECTION

See page [BE-49](#).

DOOR LOCK CONTROL RELAY

DOOR LOCK CONTROL RELAY INSPECTION

See page [BE-102](#).

KEY UNLOCK WARNING SYSTEM

KEY UNLOCK WARNING SWITCH INSPECTION

See page [BE-11](#).

DOOR COURTESY SWITCH INSPECTION

See page [BE-49](#).

SEAT BELT WARNING RELAY INSPECTION

See page [BE-80](#).