

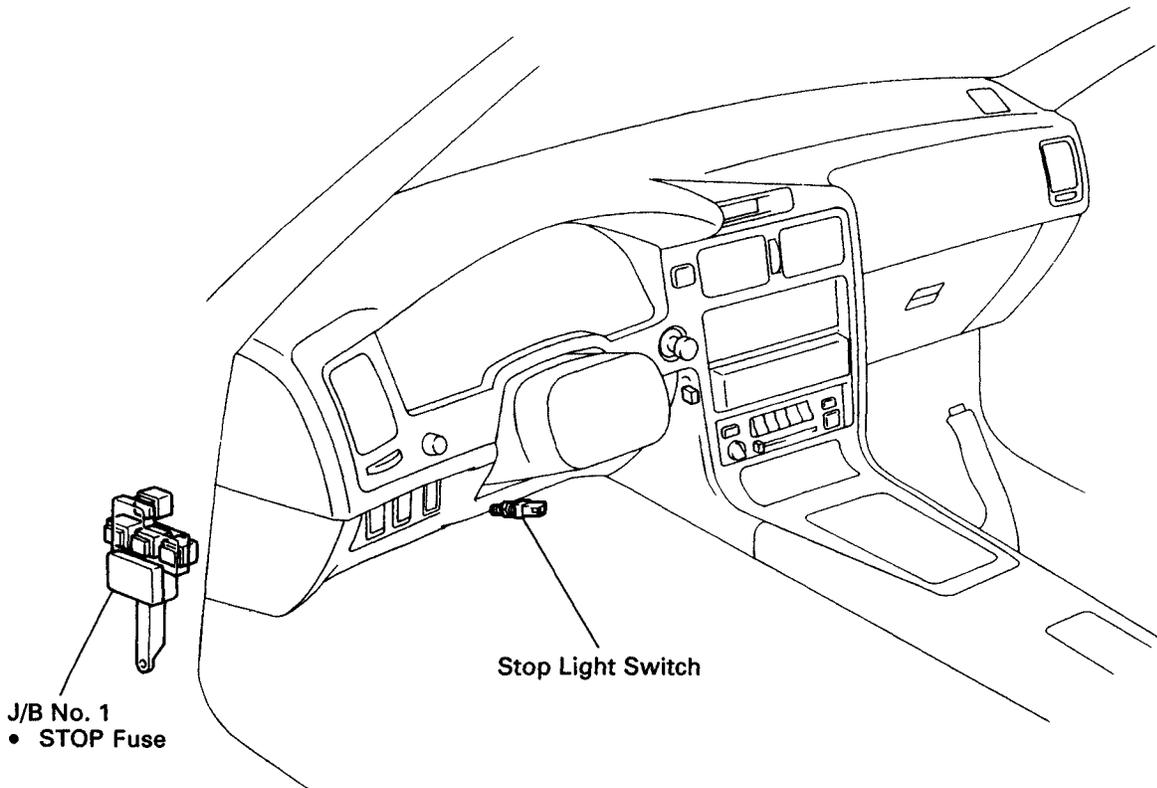


STOP LIGHT SYSTEM PARTS LOCATION

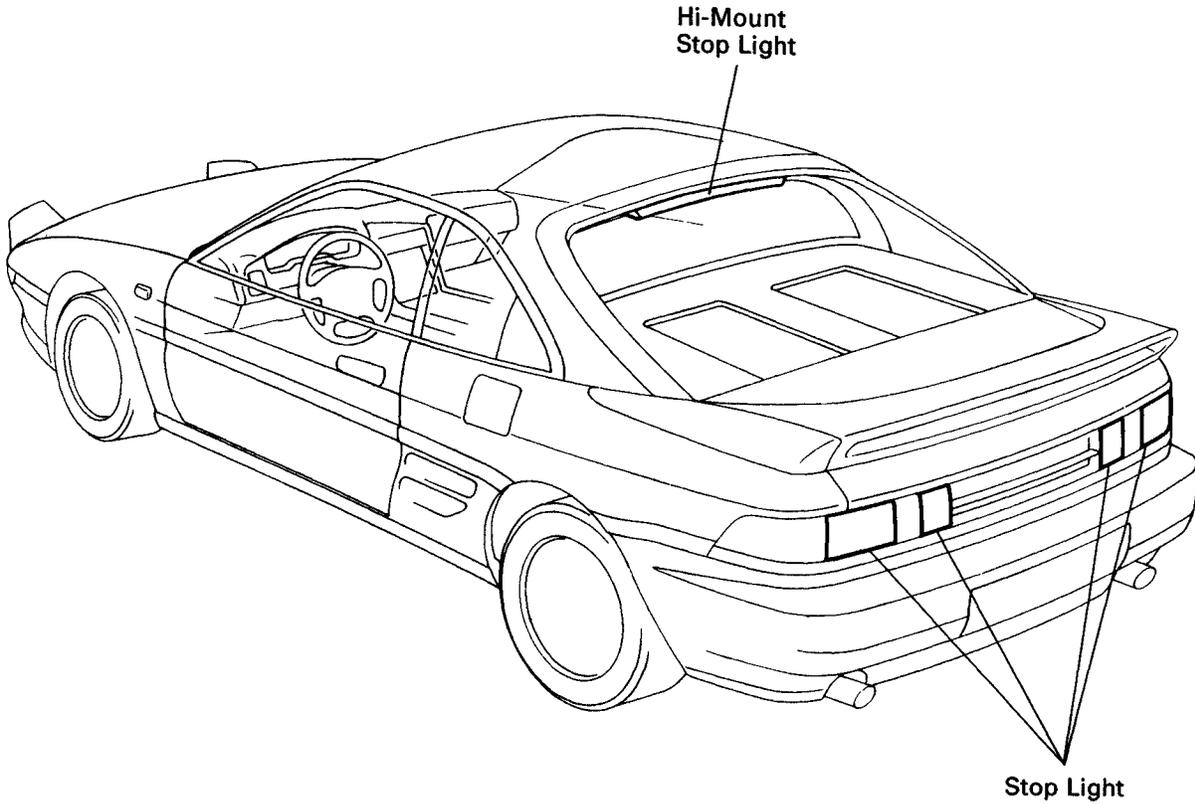

WIRING AND CONNECTOR DIAGRAM

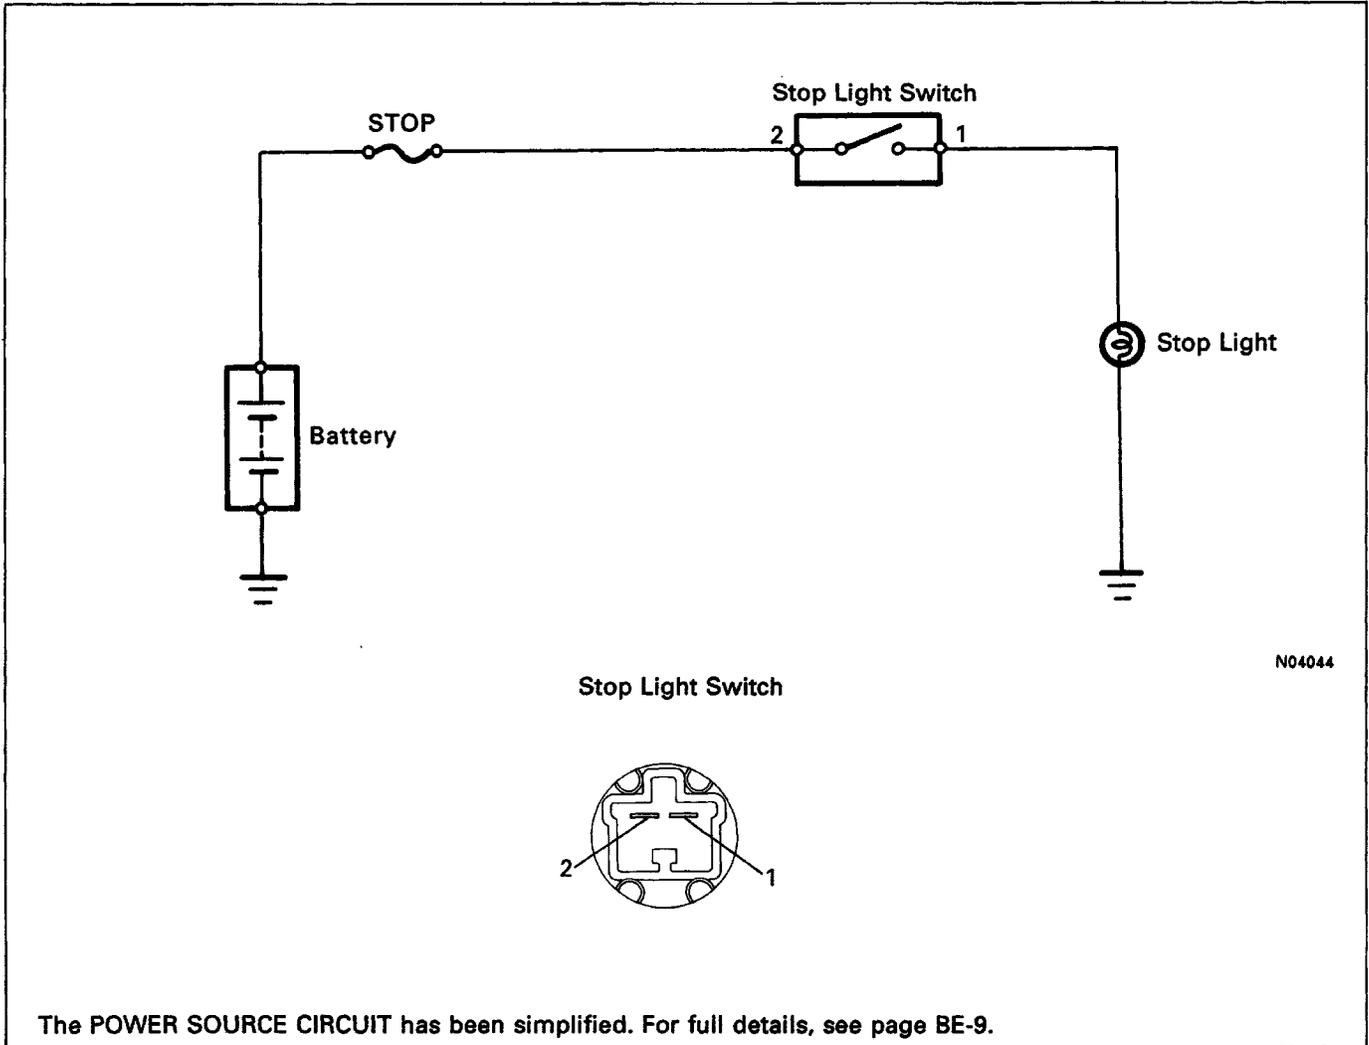

TROUBLESHOOTING


You will find the troubles easier using the table well shown below. In this table, each number shows the priority of causes in troubles. Check each part in order. If necessary, replace these parts.

See page	BE-3	BE-54	1	1
Part name	STOP Fuse	Stop Light Switch	Bulb	Wire Harness
Trouble	STOP Fuse	Stop Light Switch	Bulb	Wire Harness
Stop light does not light up.	1	2	4	3
Stop light remains always on.		1		2
Only one light does not light up.			2	1

STOP LIGHT SWITCH

STOP LIGHT SWITCH INSPECTION

CONTINUITY

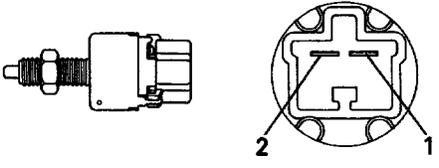	Terminal		
	Switch position	1	2
	Switch pin free (Brake pedal depressed)	○ — ○	○ — ○
Switch pin pushed in (Brake pedal released)			

BE1444 BE5656

If continuity is not as specified, replace the switch.