



# TURN SIGNAL AND HAZARD WARNING SYSTEM

## PARTS LOCATION

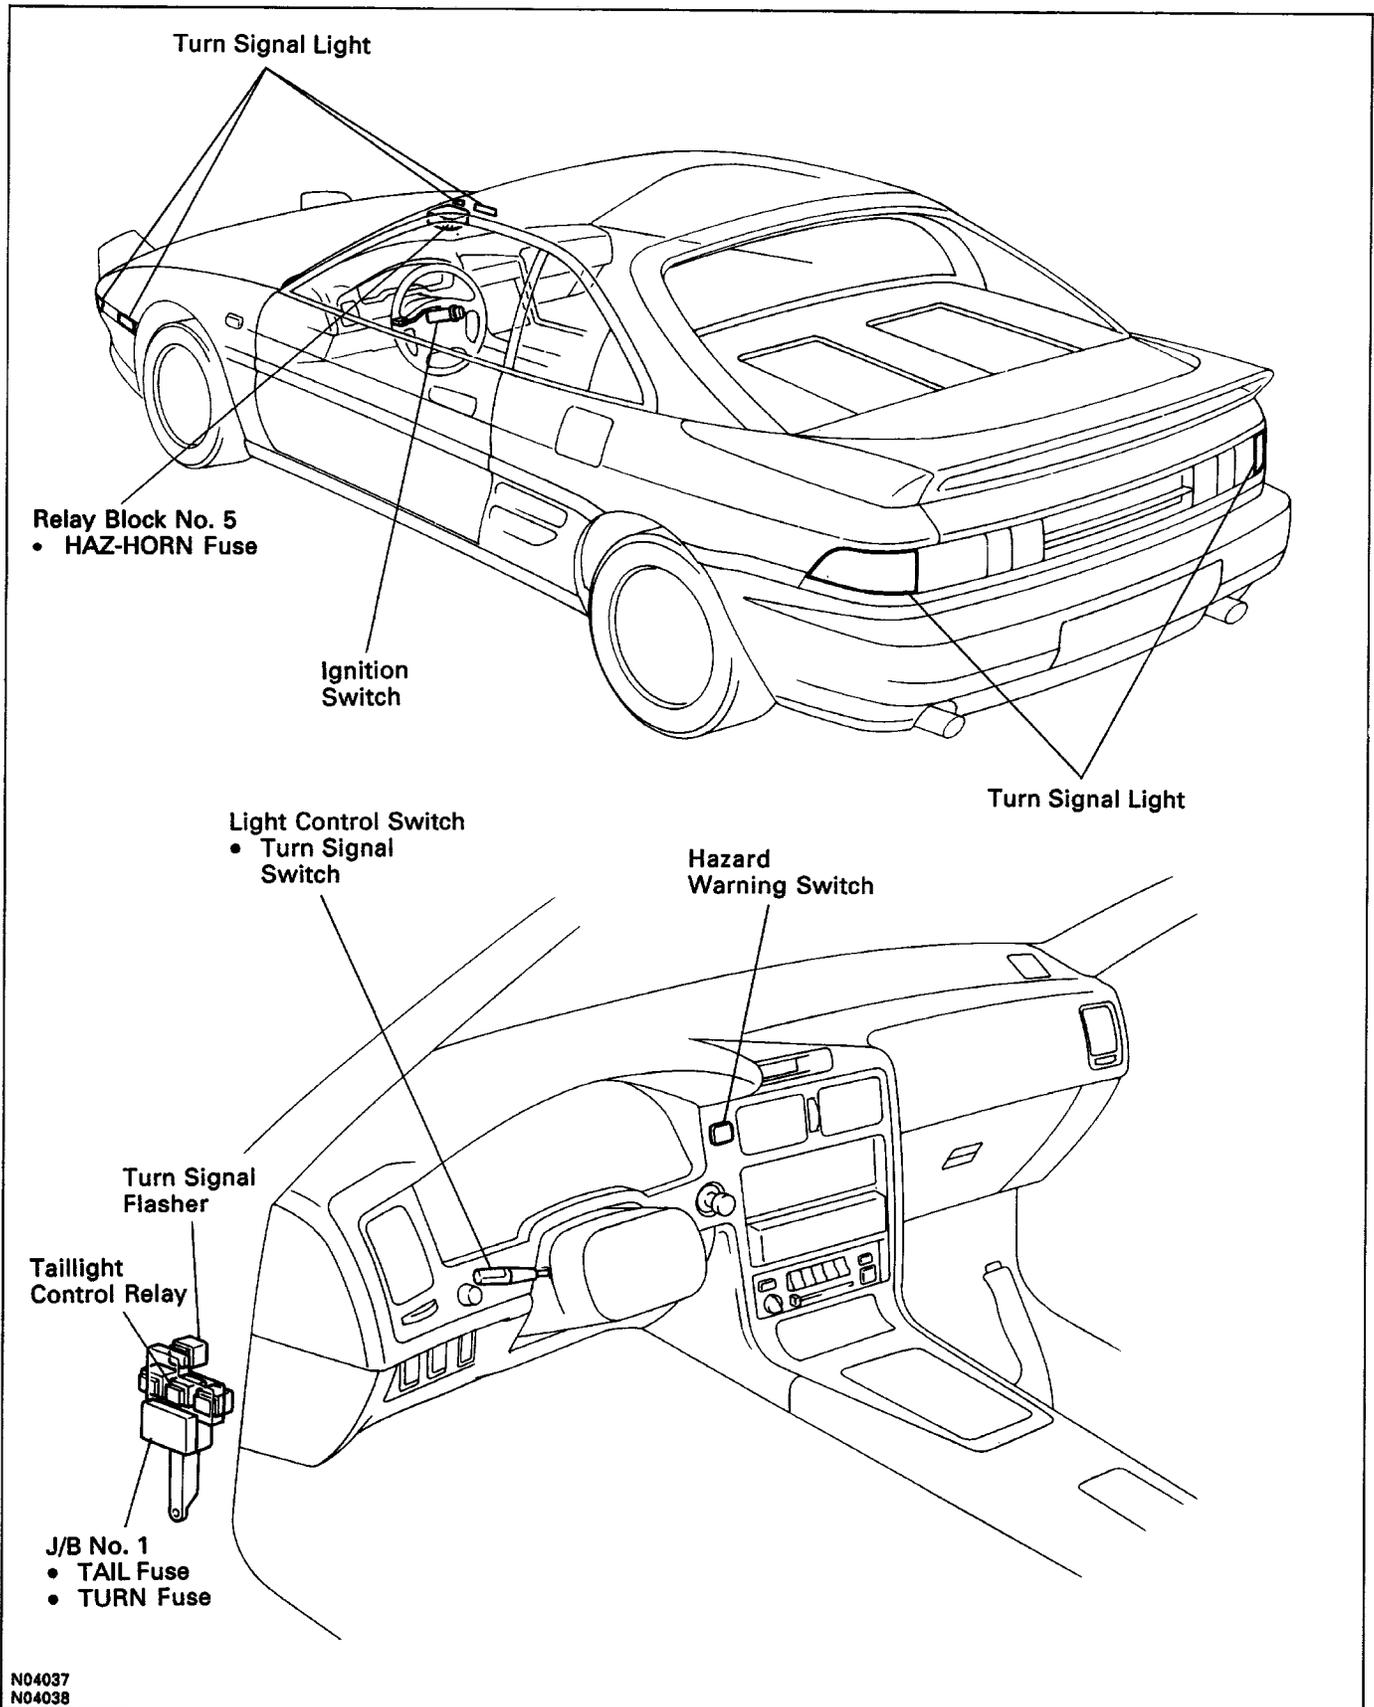


# WIRING AND CONNECTOR DIAGRAM

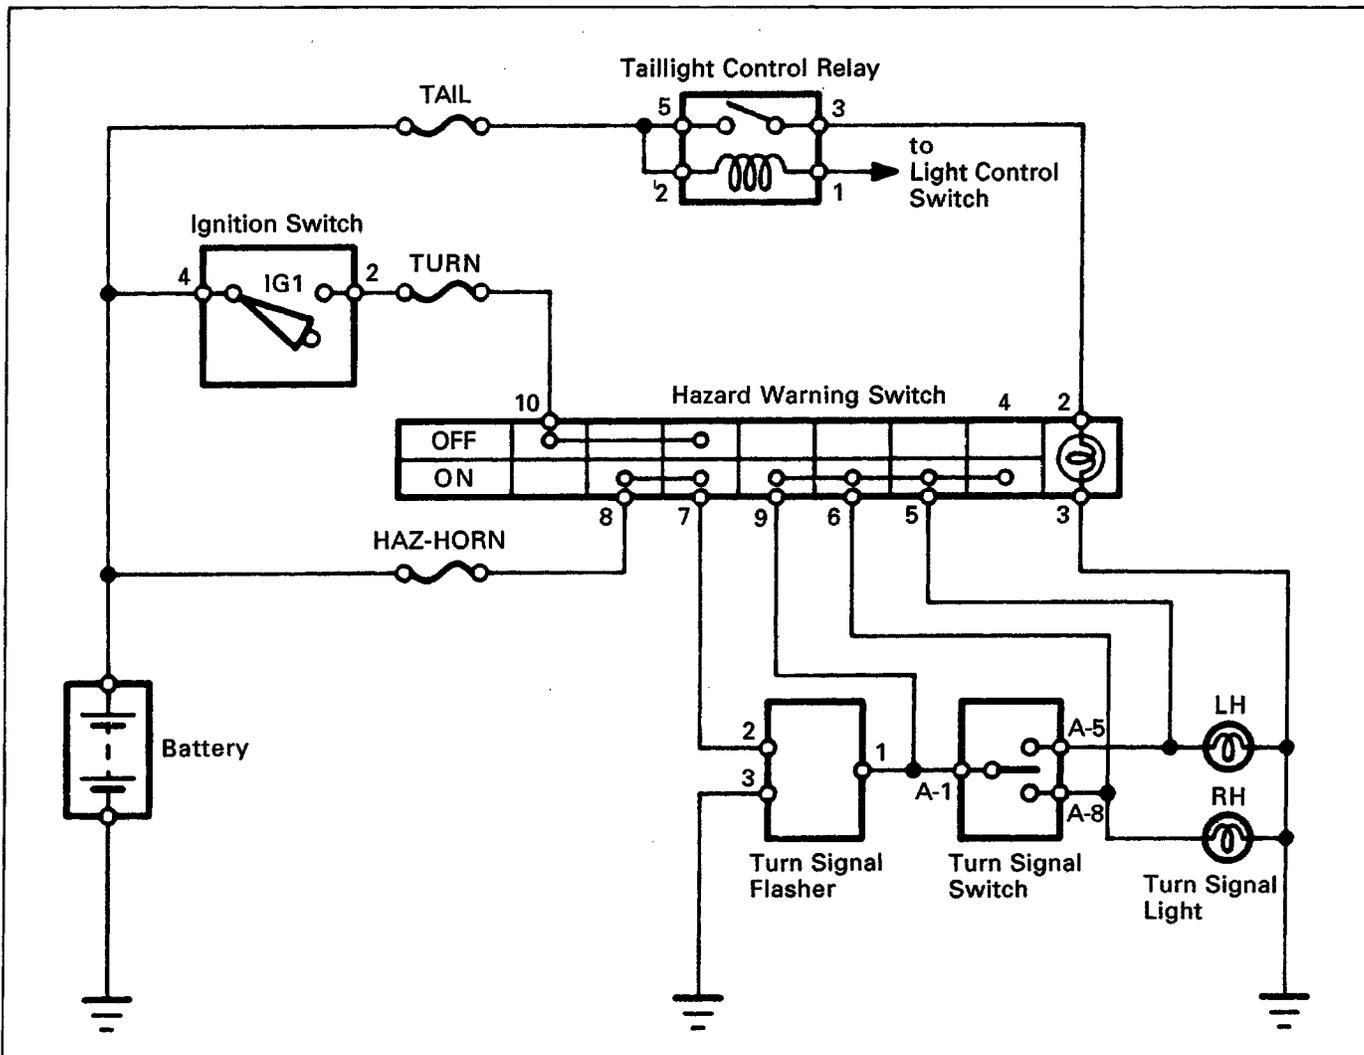

The POWER SOURCE CIRCUIT has been simplified. For full details, see page BE-9.


BE5067

Ignition Switch

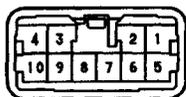


g-10-2-B

Taillight Control Relay

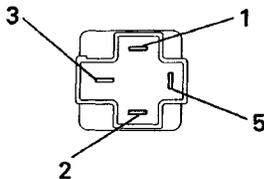


BE4049

Hazard Warning Switch

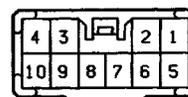


S-10-2

Turn Signal Flasher

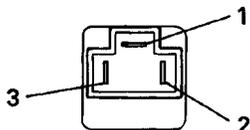

BE2896

Turn Signal Switch

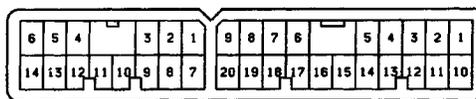

Connector "A"

Connector "B"

V-34-2

# TROUBLESHOOTING

You will find the cause of troubles more easily using the table shown below. In this table, the numbers indicate the order priority of the causes in trouble. Check each part in the order shown. If necessary, replace the parts.

See page	BE-3	BE-3	BE-11	BE-45	BE-45	BE-30	1	1
Part name	HAZ-HORN Fuse	TURN Fuse	Ignition Switch	Hazard Warning Switch	Turn Signal Flasher	Turn Signal Switch	Wire Harness	Bulb
Trouble								
"Hazard" and "Turn" do not light up.				1	2		3	
The flashing frequency is abnormal.					2		3	1
Hazard warning light does not light up. (Turn is normal.)	1						2	
Hazard warning light does not light up in one direction.				1			2	
*1 Turn signal does not light up.		2	1			3	4	
*2 Turn signal does not light up.		1				2	3	
Turn signal does not light up in one direction.						1	2	
Only one bulb does not light.							2	1

Combination Meter, Wiper and Washer do not operate.

Combination Meter, Wiper and Washer are normal.

# TURN SIGNAL SWITCH

## TURN SIGNAL SWITCH INSPECTION

See combination switch on page BE-30.

# HAZARD WARNING SWITCH


## HAZARD WARNING SWITCH INSPECTION

### CONTINUITY

Terminal Switch position	4	5	6	7	8	9	10	Illumination		
	2	3							2	3
OFF				○	○	○	○		○	○
ON	○	○	○	○	○	○	○		○	○

BE4889 S-10-2

If continuity is not as specified, replace the switch.

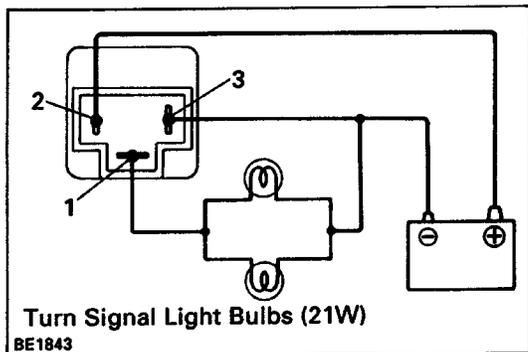

# TURN SIGNAL FLASHER

## TURN SIGNAL FLASHER INSPECTION

### OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 3.
- (b) Connect the two turn signal light bulbs parallel to each other to terminals 1 and 3, check that the bulbs flash.

**HINT:** The turn signal lights should flash 60 to 120 times per minute.  
 If one of the front or rear turn signal lights has an open circuit, the flash rate will be more than 140 times per minute.  
 If operation is not as specified, replace the flasher.