



BACK WINDOW MOULDING COMPONENTS


B008V-01

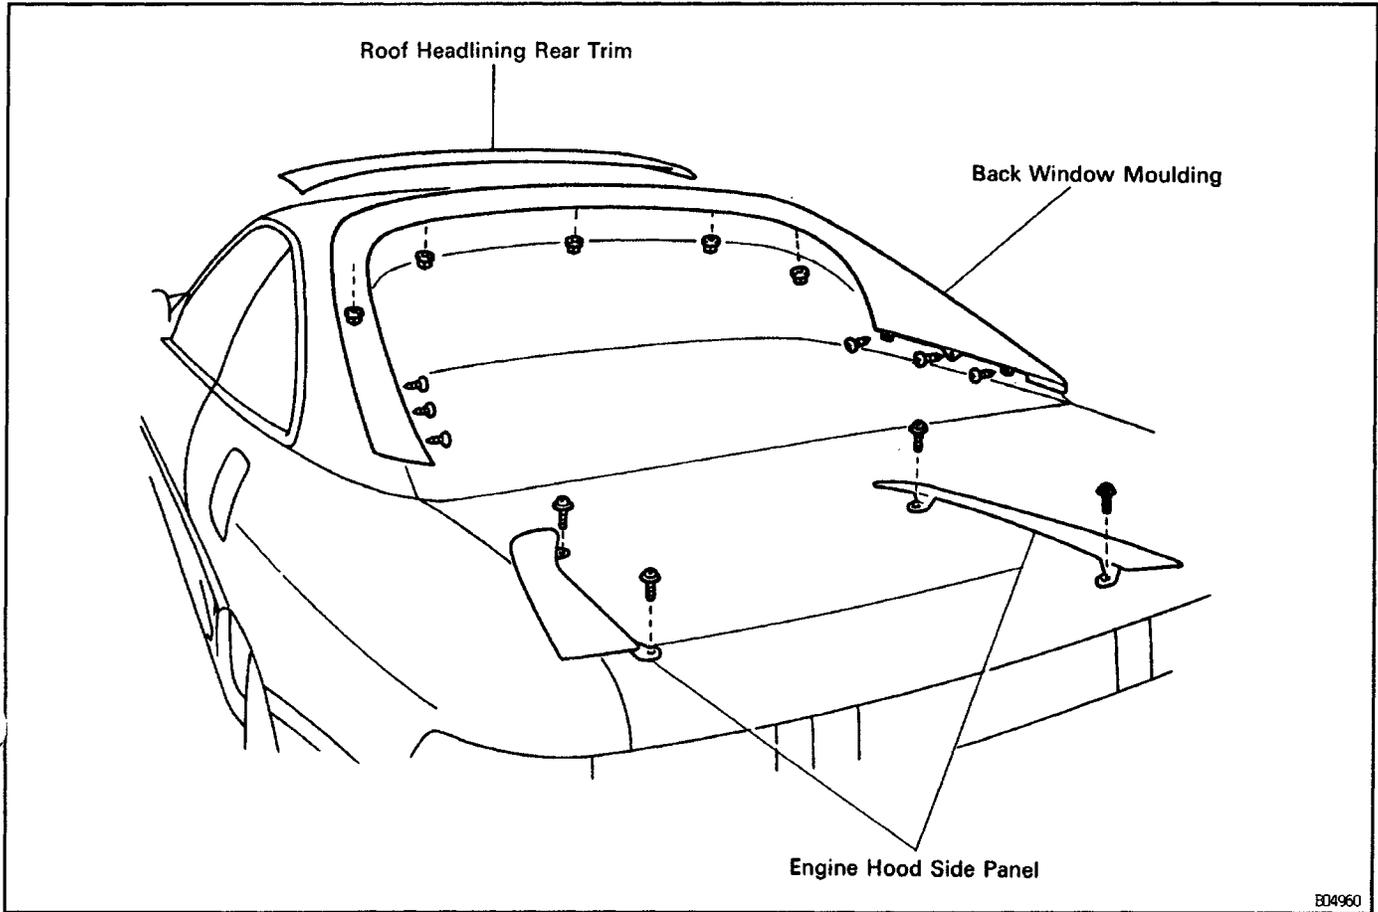

B04960

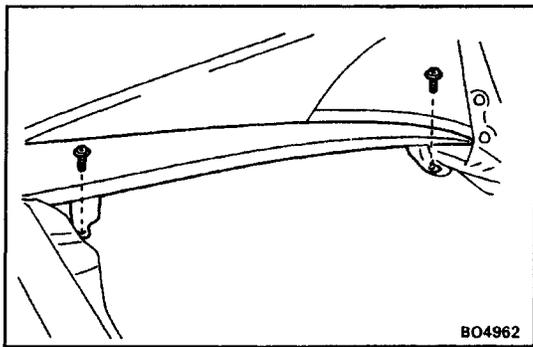


B04962

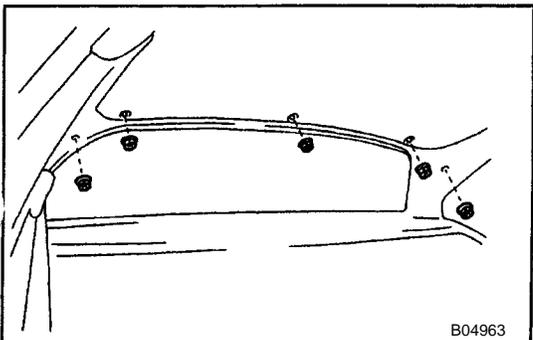


B04963

BACK WINDOW MOULDING REMOVAL

1. **REMOVE ENGINE HOOD SIDE PANELS**
Remove four screws and two panels.
2. **REMOVE FOLLOWING PARTS:**
(See steps 1 to 6 on pages [BO-47](#) to [BO-48](#))
 - (a) Door scuff plate
 - (b) Roof headlining rear trim
 - (c) Room partition trim moulding
 - (d) Quarter trim panel
 - (e) Seat belt shoulder anchor
 - (f) Roof side inner garnish
3. **REMOVE BACK WINDOW MOULDING**
 - (a) Remove five nuts.

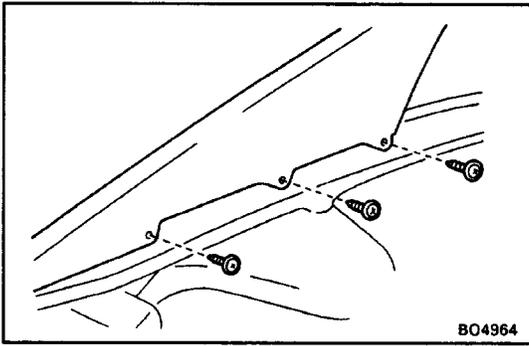

- (b) Remove six screws.

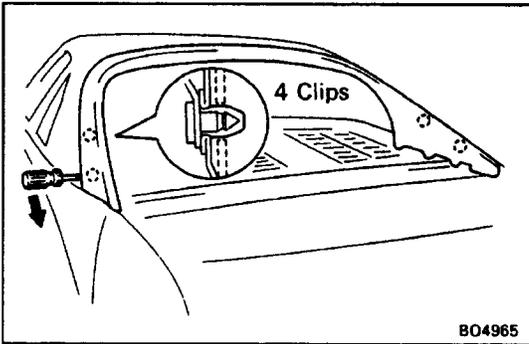


- (c) Insert the screwdriver between the moulding and the panel to pry out.

HINT: Tape the screwdriver tip before use.

- (d) Pull the moulding upward to remove it.

NOTICE: Do not damage the body.

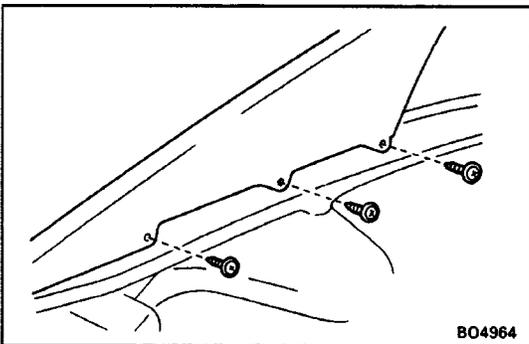


BACK WINDOW MOULDING INSTALLATION

BO08X-01

(See page [BO-39](#))

1. INSTALL BACK WINDOW MOULDING


- (a) Tap the moulding and, fix it in place with the clips.
 (b) Install six screws.

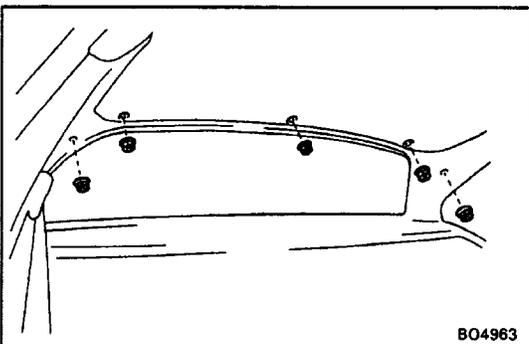

- (c) Install five nuts.

2. INSTALL FOLLOWING PARTS:

- (a) Roof side inner garnish
 (b) Seat belt shoulder anchor
Torque: 43 N-m (440 kgf-cm, 32 ft-lbf)
 (c) Quarter trim panel
 (d) Room partition trim moulding
 (e) Roof headlining rear trim
 (f) Door scuff plate

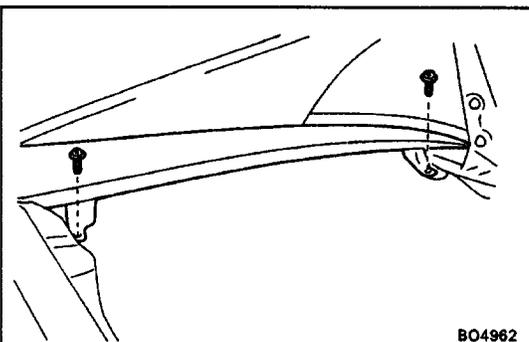

3. INSTALL ENGINE HOOD SIDE PANELS

Install two panels with four screws.