


HEADLIGHT


CAUTION: When adjusting each section, raise or lower the headlight with the light control switch. But when adjusting each section, be sure to remove the RTR fuse (30A) before adjusting.

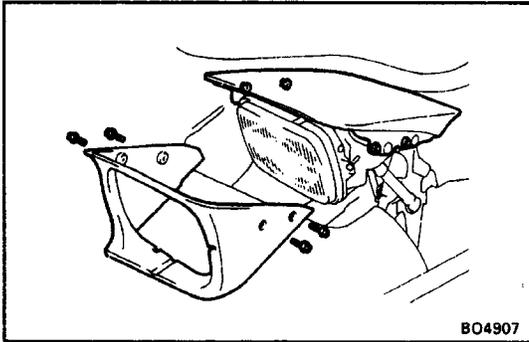

HEADLIGHT ADJUSTMENT

1. ADJUST HEADLIGHT HOOD IN FORWARD/REARWARD AND LEFT/RIGHT DIRECTIONS

- (a) Remove the headlight door.
- (b) Adjust the headlight hood by loosening four cover set screws.

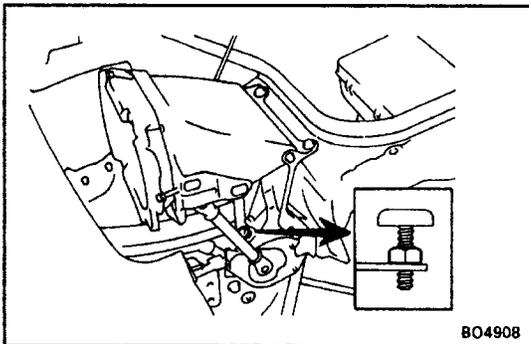

2. ADJUST HEADLIGHT SLANT

- (a) Loosen the stopper lock nut.
- (b) Lower the headlight.
- (c) Turn the manual operation knob to align the rod and the crank arm.
- (d) Change the rod length to adjust the headlight slant.