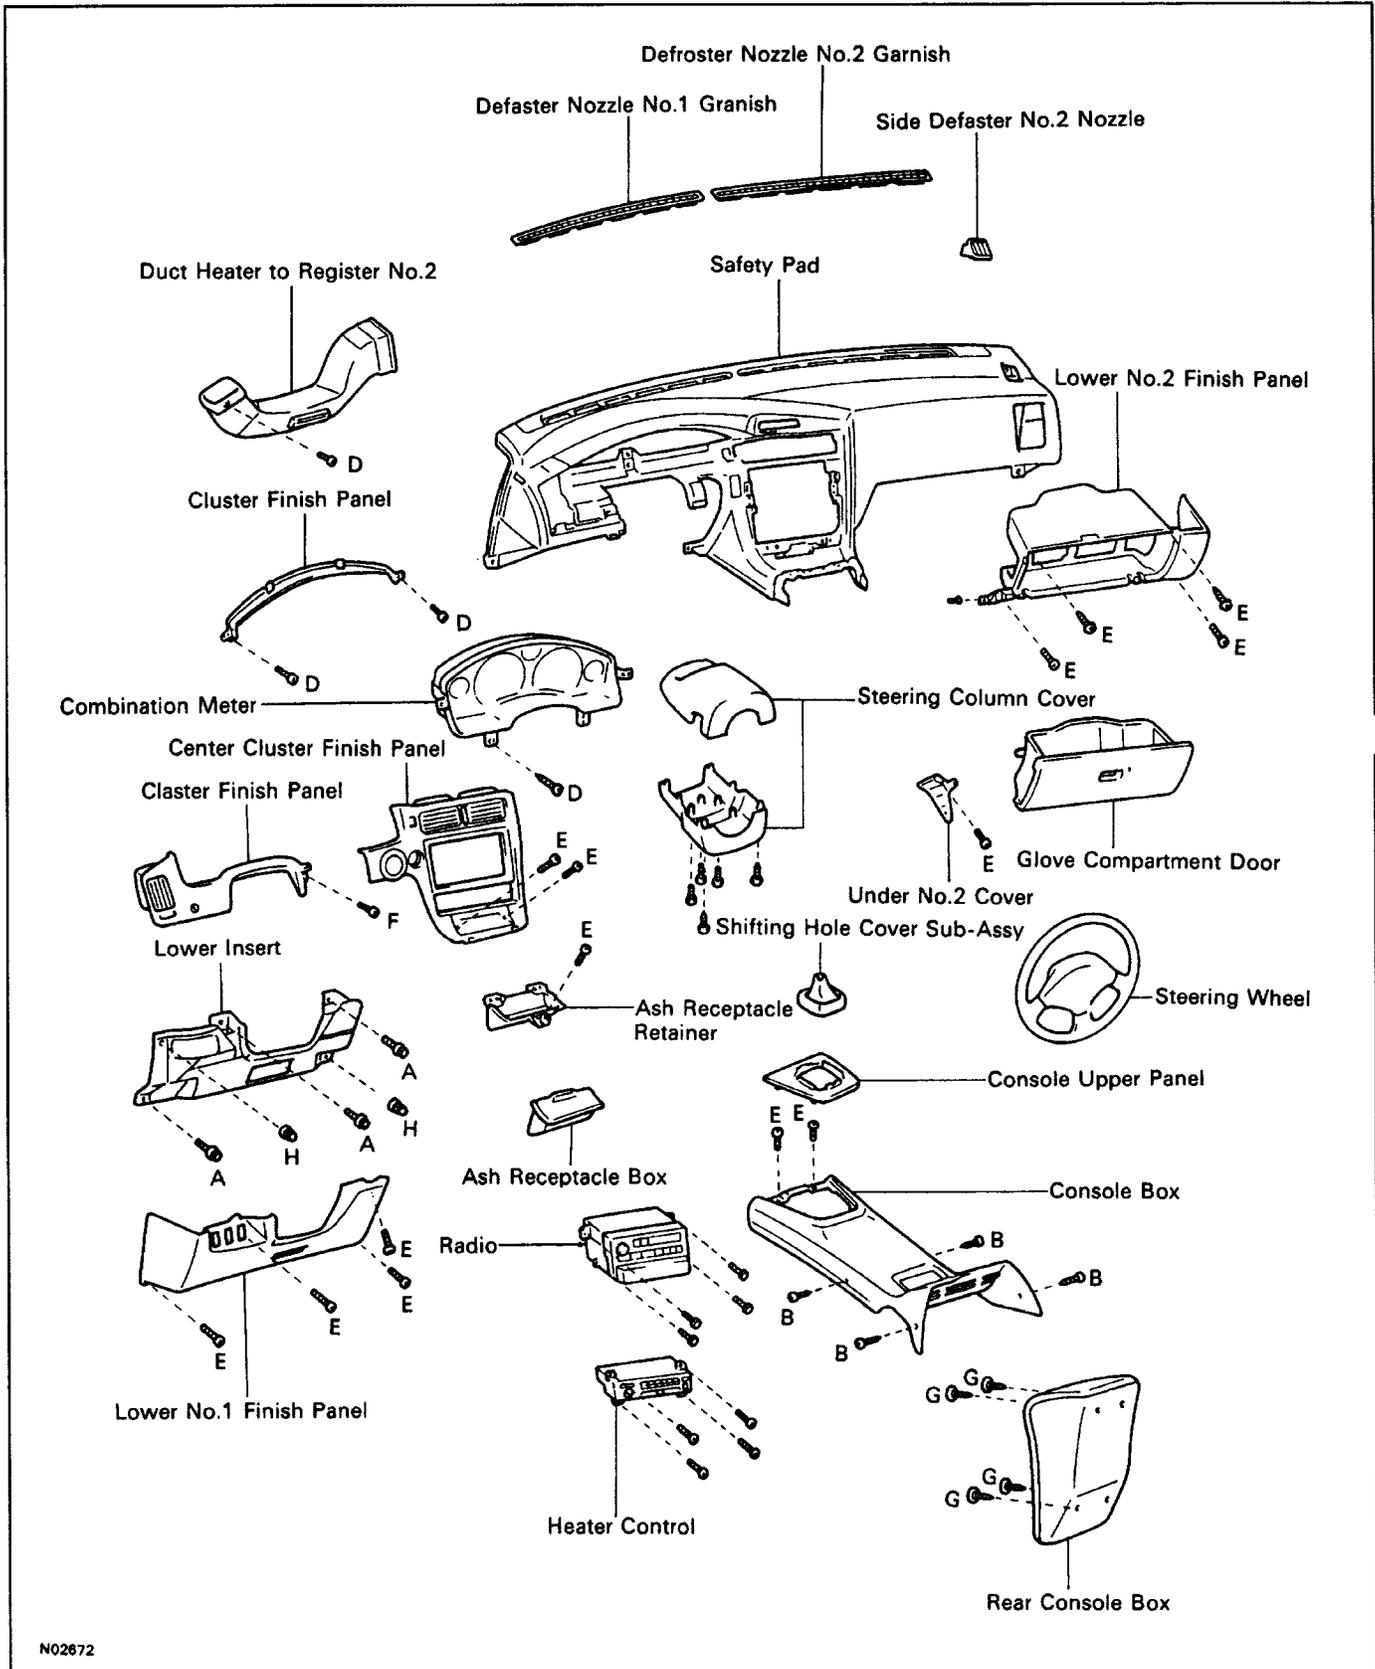
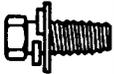
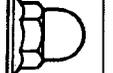


INSTRUMENT PANEL COMPONENTS

BO0CP-01



HINT: Screw sizes in the illustration on the previous page are indicated using the code below for removal and installation of instrument panel.

mm (in.)											
Code	Shape	Size	Code	Shape	Size	Code	Shape	Size	Code	Shape	Size
A		$\phi = 6$ (0.24) L = 20 (0.99)	B		$\phi = 5$ (0.20) L = 18 (0.71)	C		$\phi = 5.22$ (0.2055) L = 14 (0.55)	D		$\phi = 5.22$ (0.2055) L = 16 (0.63)
E		$\phi = 5.22$ (0.2055) L = 14 (0.55)	F		$\phi = 5.22$ (0.2055) L = 20 (0.79)	G		$\phi = 5$ (0.20) L = 18 (0.71)	H		-

B05088

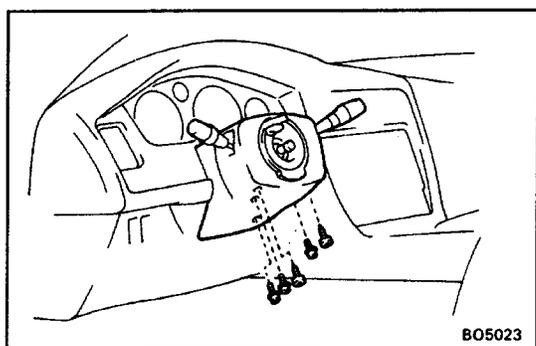
V00853

B0000-01

INSTRUMENT PANEL REMOVAL

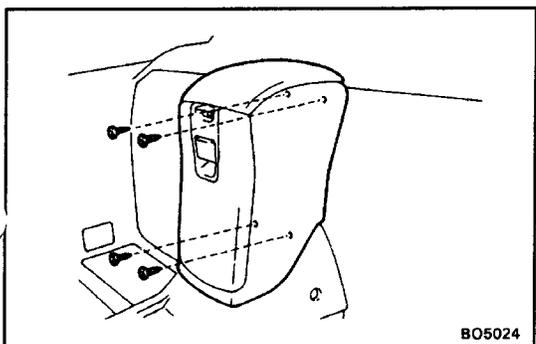
(See page [BO-72](#))

1. **DISCONNECT BATTERY CABLE FROM NEGATIVE TERMINAL**
2. **REMOVE FOLLOWING PARTS:**
(See steps 4 to 5 on page [BO-41](#) to [BO-42](#))
 - (a) Door scuff plate
 - (b) Front pillar garnish
3. **REMOVE STEERING WHEEL**
(See page [SR-5](#))



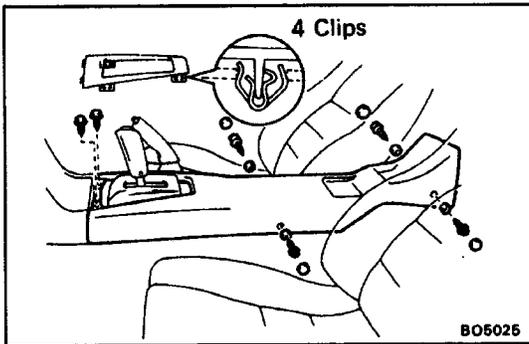
B05023

4. **REMOVE STEERING COLUMN COVER**
Remove five screws and the column covers.



B05024

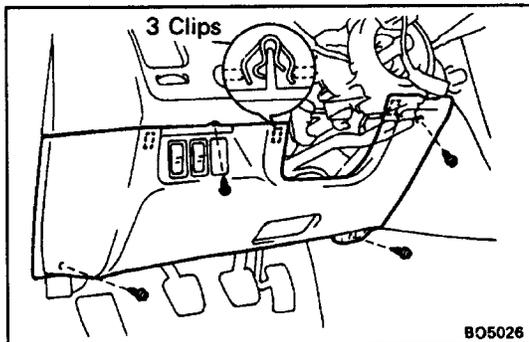
5. **REMOVE REAR CONSOLE BOX**
 - (a) Open the console box doors.
 - (b) Remove four screws and the console box.

**6. REMOVE CONSOLE UPPER PANEL**

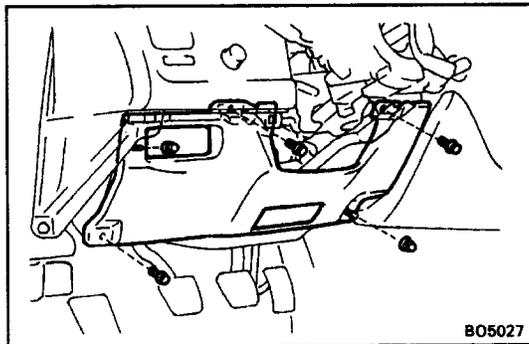
- (a) Using the screwdriver, remove the clip.
HINT: Tape the screwdriver tip before use.
- (b) Pull the panel rearward and remove it.

7. REMOVE CONSOLE BOX

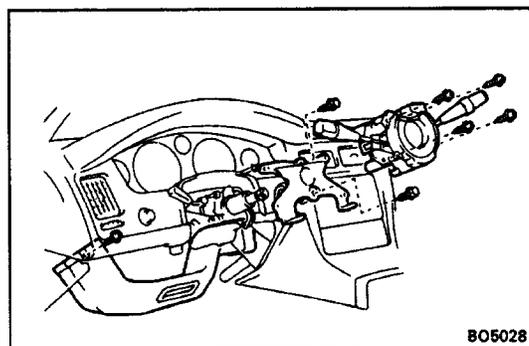
- (a) Using the screwdriver, remove four screw caps.
HINT: Tape screwdriver tip before use.
- (b) Remove six screws, four bushes and the console box.

**8. REMOVE LOWER NO.1 FINISH PANEL**

- (a) Remove four screws.
- (b) Remove the panel by pulling then disconnect the connectors.
- (c) Remove the lower No. 1 register from the panel.

**9. REMOVE LOWER INSERT**

Remove three bolts, two nuts and the lower insert.

**10. REMOVE DUCT HEATER TO REGISTER NO.2**

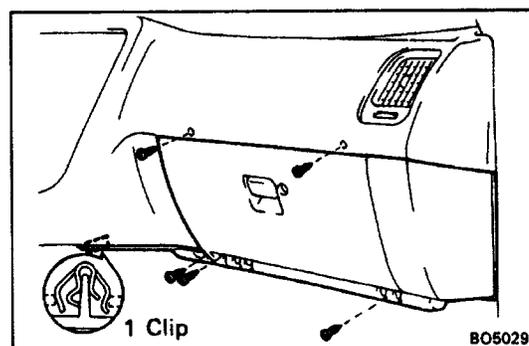
Remove the screw and the duct.

11. REMOVE COMBINATION SWITCH

- (a) Disconnect the connectors.
- (b) Remove four screws and the combination switch.

12. REMOVE TURN SIGNAL BRACKET

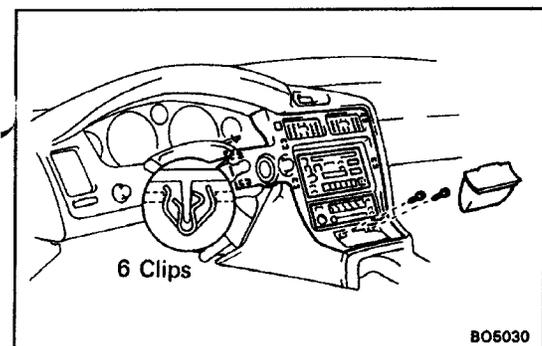
Remove two bolts and the bracket.

**13. REMOVE UNDER NO.2 COVER**

- (a) Remove the screw.
- (b) Remove the cover by pulling.

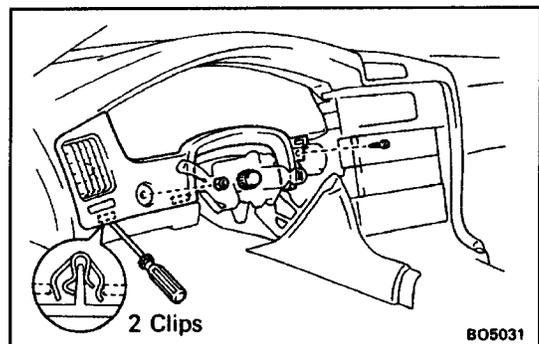
14. REMOVE LOWER NO.2 FINISH PANEL

Remove four screws and the panel.

**15. REMOVE CENTER CLUSTER FINISH PANEL**

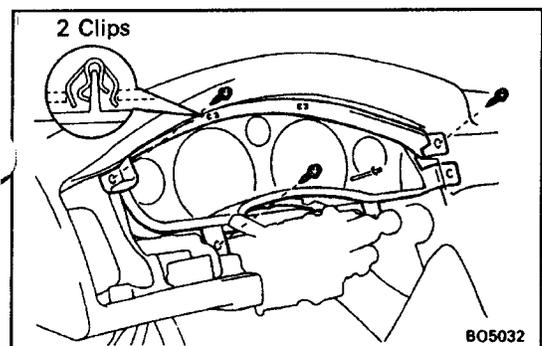
- (a) Remove the ash receptacle box by pulling.
- (b) Remove two screws.
- (c) Using the screwdriver, remove the panel and disconnect the connector.

HINT: Tape the screwdriver tip before use.

**16. REMOVE CLUSTER FINISH PANEL**

- (a) Remove the rheostat knob by pulling.
- (b) Remove the nut from the rheostat.
- (c) Remove the screw.
- (d) Using the screwdriver, remove the panel and disconnect the connector.

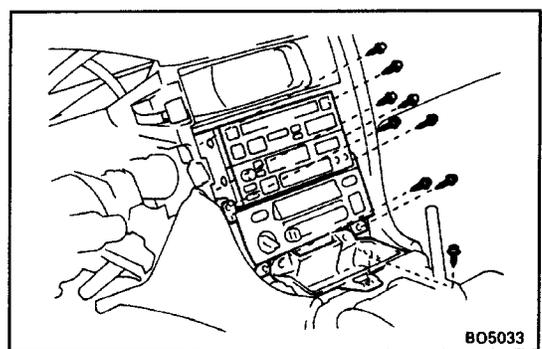
HINT: Tape the screwdriver tip before use.

**17. REMOVE CLUSTER FINISH PANEL**

- (a) Remove two screws.
 - (b) Using the screwdriver, remove the panel.
- HINT: Tape the screwdriver tip before use.

18. REMOVE COMBINATION METER

- (a) Remove the screw.
- (b) Disconnect the connectors and the meter bracket.
- (c) Remove the meter.

**19. REMOVE RADIO**

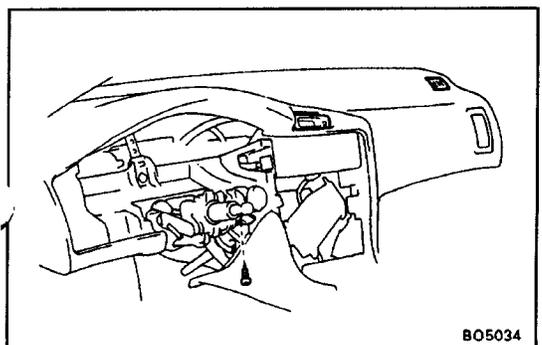
Remove four bolts and the radio.

20. REMOVE HEATER CONTROL

Remove four screws and hang the heater control.

21. REMOVE ASH RECEPTACLE RETAINER

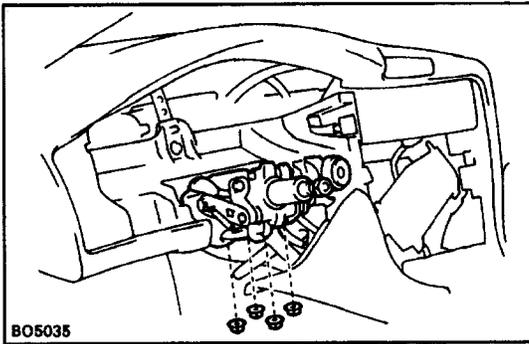
Remove the screw and the retainer.

**22. REMOVE CLOCK**

- (a) Using the screwdriver, remove the clock ornament.
HINT: Tape the screwdriver tip before use.
- (b) Disconnect the connector and remove the clock.

23. REMOVE SIDE DEFROSTER NO.2 NOZZLE**24. REMOVE BRACKET**

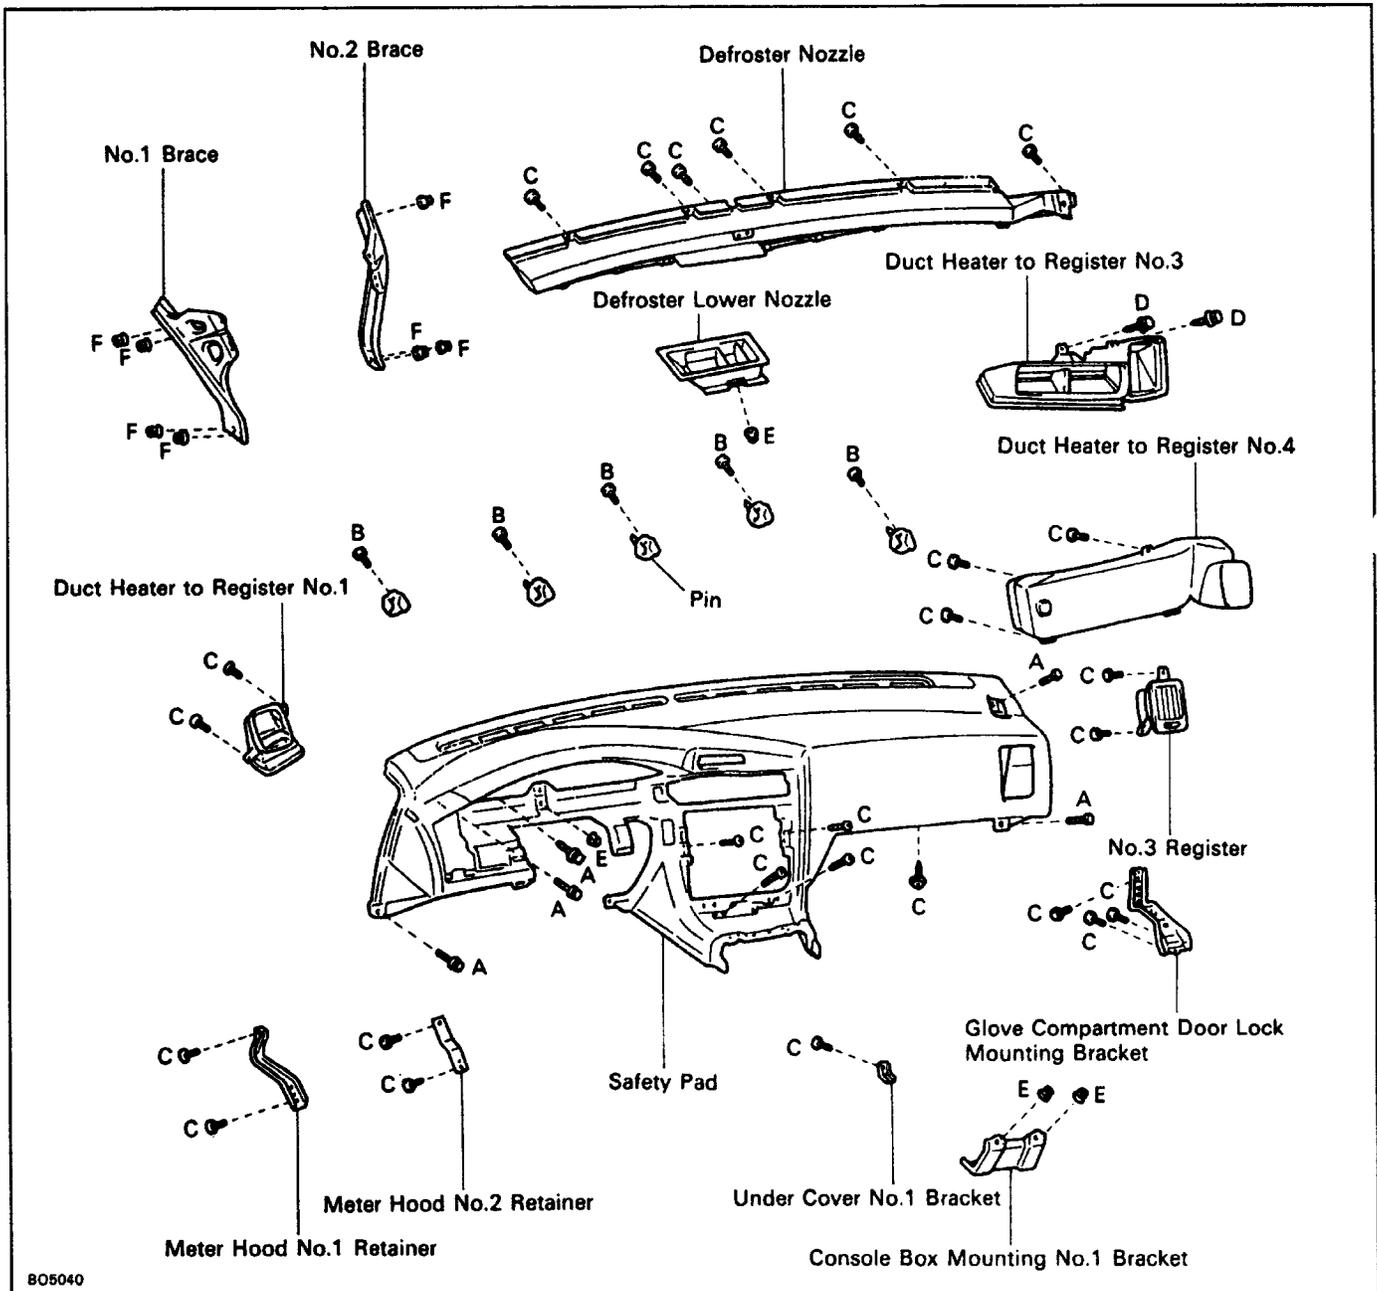
Remove the screw and the bracket from the safety pad.

**25. DISCONNECT STEERING COLUMN**

- (a) Remove four nuts.
- (b) Disconnect the steering column from the reinforcement.

26. REMOVE SAFETY PAD

Remove five bolts, five screws, the nut and the safety pad.



HINT: Screw sizes in the illustration on the previous page are indicated using the code below for removal and installation of instrument panel.

mm (in.)								
Code	Shape	Size	Code	Shape	Size	Code	Shape	Size
A		$\phi = 6$ (0.24) L = 20 (0.79)	B		$\phi = 4.5$ (0.177) L = 12 (0.47)	C		$\phi = 5.22$ (0.2055) L = 16 (0.63)
D		$\phi = 6$ (0.24) L = 14 (0.55)	E		-			-

B05036

V00854

27. REMOVE FOLLOWING PARTS FROM SAFETY PAD

- Defroster nozzle
- Defroster nozzle No. garnish
- Defroster nozzle No.2 garnish
- Meter hood No. retainer
- Meter hood No.2 retainer
- Glove compartment door lock mounting bracket
- Dust heater to register No.
- Dust heater to register No.4
- No.3 register
- Under cover No.1 bracket
- Pin

28. REMOVE FOLLOWING PARTS:

- Defroster lower nozzle
- Dust heater to register No.3
- No. brace
- No.2 brace
- Console box mounting No.1 bracket

INSTRUMENT PANEL INSTALLATION(See page [BO-72](#) and [BO-76](#))

INSTALL INSTRUMENT PANEL PARTS BY FOLLOWING REMOVAL SEQUENCE IN REVERSE

B00CR-01