


LUGGAGE COMPARTMENT DOOR LUGGAGE COMPARTMENT DOOR ADJUSTMENT

HINT: Since the centering bolt is used as the door hinge set bolt, the door cannot be adjusted with it on. Substitute the bolt with the washer for the centering bolt.

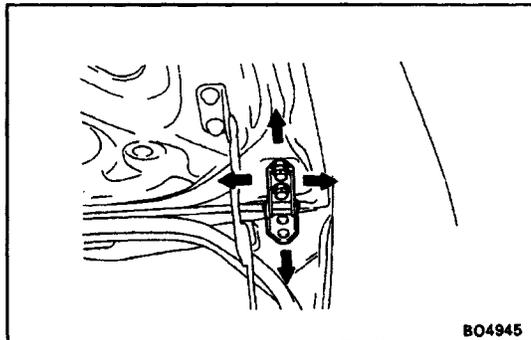


1. ADJUST DOOR IN FORWARD/ REARWARD AND LEFT/RIGHT DIRECTIONS

Adjust the door by loosening the door side hinge bolts.


2. ADJUST DOOR IN VERTICAL DIRECTION

Adjust the door by increasing the number of shims.

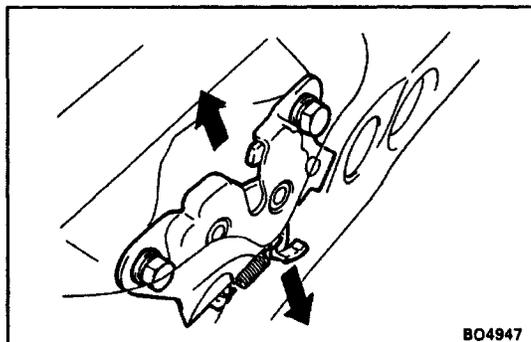

3. ADJUST LUGGAGE COMPARTMENT DOOR LOCK

Adjust the lock by loosening the bolts.

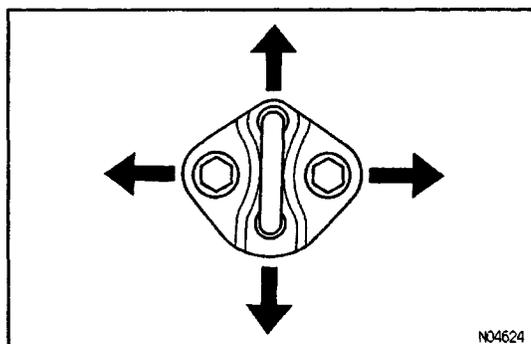


4. ADJUST DOOR LOCK STRIKER

(a) Check that the door fit and door lock are adjusted correctly.

(b) Loosen the striker mounting screws to adjust.

(c) Using a plastic hammer, tap the striker to adjust it.

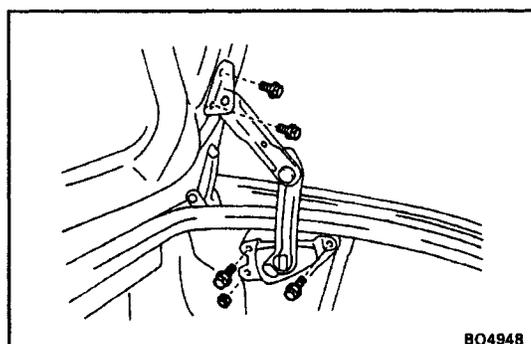


LUGGAGE COMPARTMENT DOOR BALANCER REMOVAL

REMOVE LUGGAGE COMPARTMENT DOOR BALANCER

Remove four bolts, the nut and the balancer.


BO0BF-01

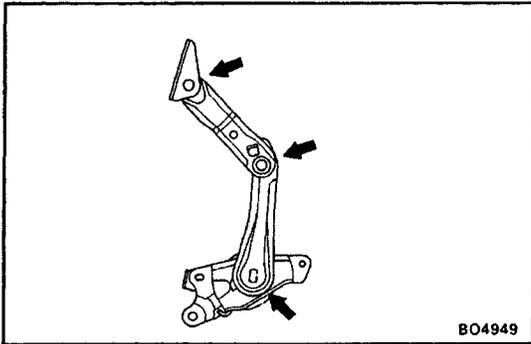

LUGGAGE COMPARTMENT DOOR BALANCER INSTALLATION

1. **BEFORE INSTALLING PARTS. COAT THEM WITH MP GREASE**

Apply MP grease to the sliding surface of the balancer.

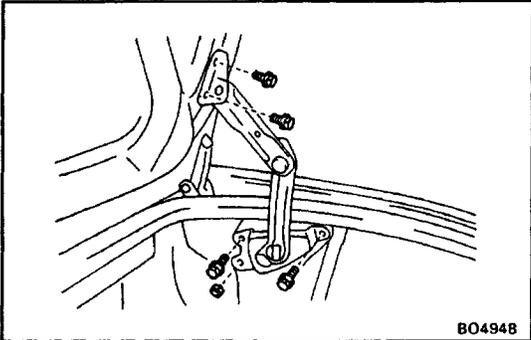

2. **INSTALL LUGGAGE COMPARTMENT DOOR BALANCER**

Install the balancer with four bolts and the nut.