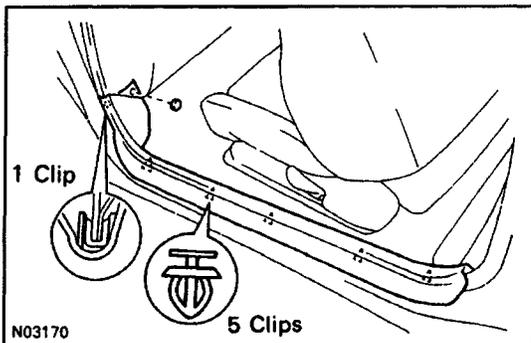
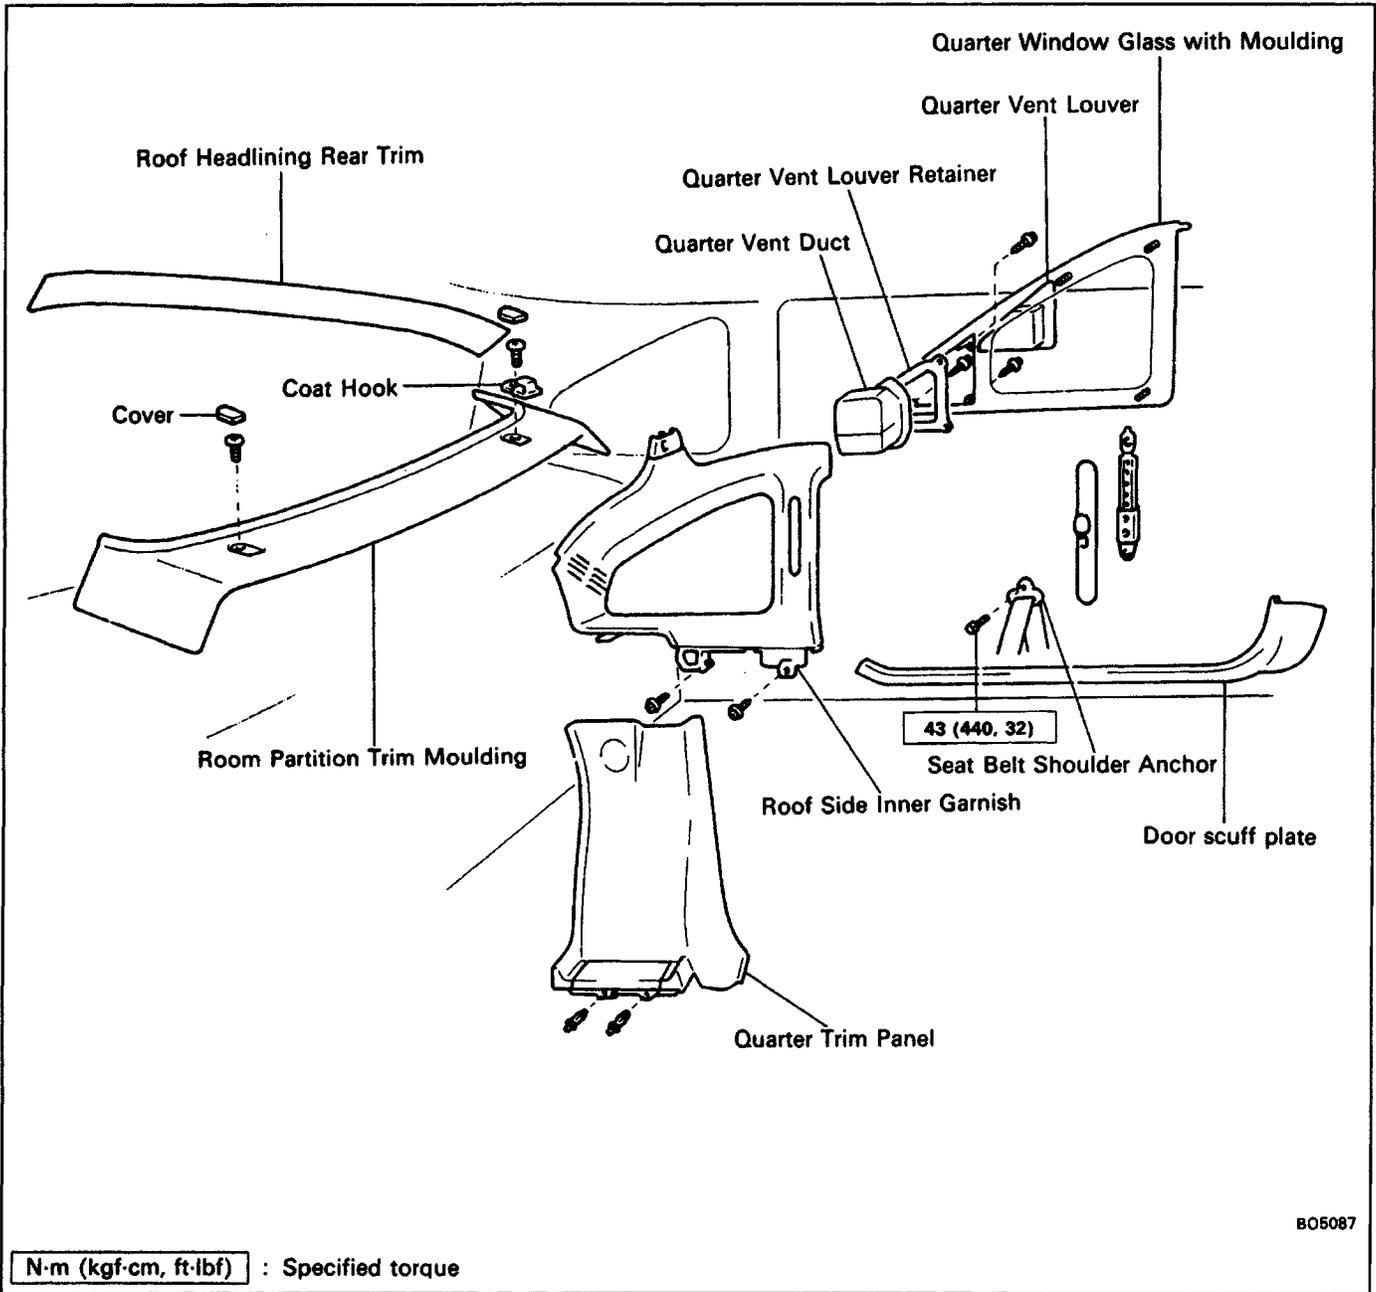


# QUARTER WINDOW GLASS COMPONENTS

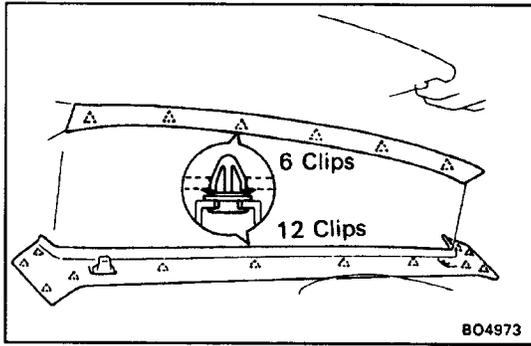
800C1-01



## QUARTER WINDOW GLASS REMOVAL

800C2-01

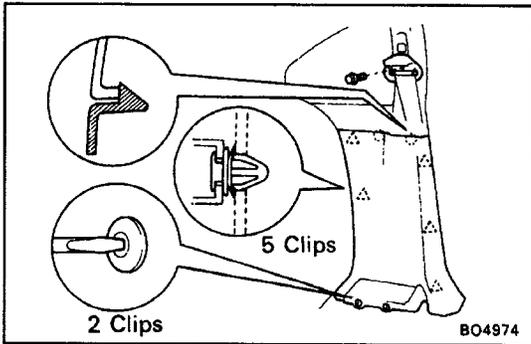
1. REMOVE DOOR SCUFF PLATE
  - (a) Remove the cap.
  - (b) Remove the scuff plate by pulling.

**2. REMOVE ROOF HEADLINING REAR TRIM**

Remove the trim by pulling.

**3. REMOVE ROOM PARTITION TRIM MOULDING**

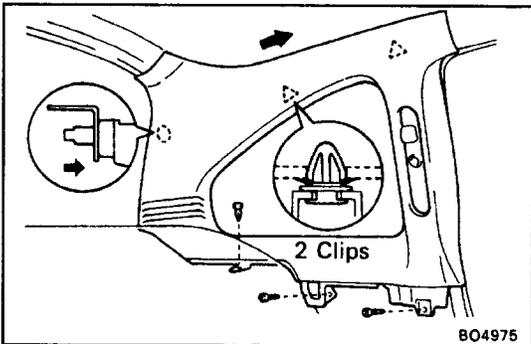
- (a) Remove two covers.
- (b) Remove two screws and the hook.
- (c) Remove the moulding by pulling.

**4. REMOVE QUARTER TRIM PANEL**

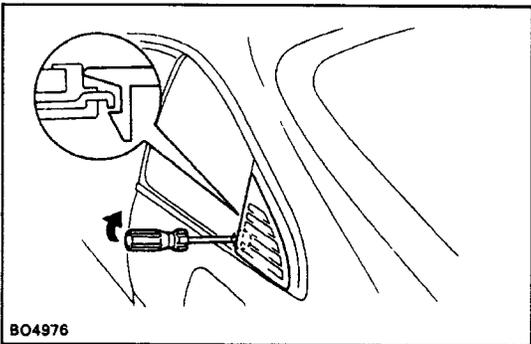
- (a) Remove two clips.
- (b) Using the screwdriver, pry loose the clips.  
HINT: Tape the screwdriver tip before use.
- (c) Remove the quarter trim by pulling.

**5. REMOVE SEAT BELT SHOULDER ANCHOR**

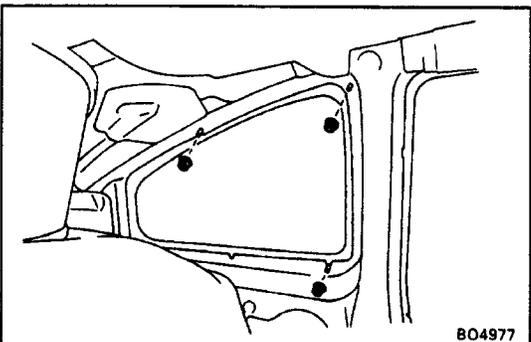
Remove the bolt and the shoulder anchor.

**6. REMOVE ROOF SIDE INNER GRANISH**

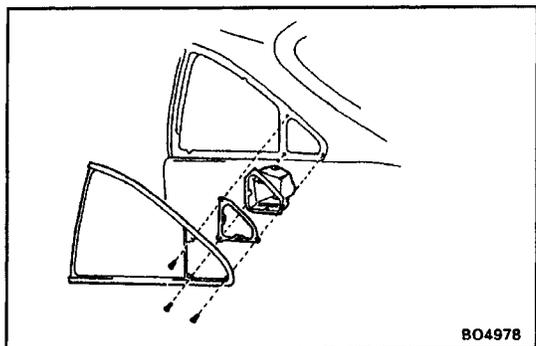
- (a) Remove the clip and two screws.
- (b) Using the screwdriver, pry loose the clips.  
HINT: Tape the screwdriver tip before use.
- (c) Pull the garnish forward to remove it.

**7. REMOVE QUARTER VENT LOUVER**

Using the screwdriver, remove the louver.  
HINT: Tape the screwdriver tip before use.

**8. REMOVE QUARTER WINDOW GLASS WITH MOULDING**

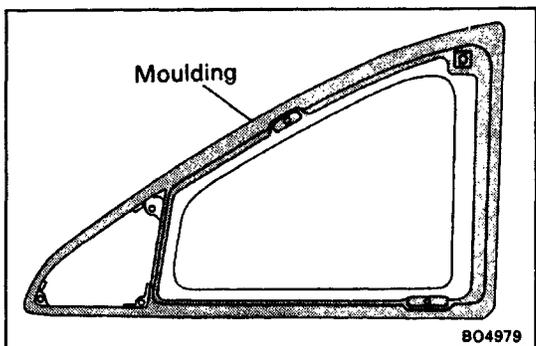
- (a) Remove three nuts.



- (b) Remove three screws.
  - (c) Using a knife, cut loose the adhesive.
  - (d) Remove the glass with moulding.
- NOTICE: Do not damage the body.**

**9. REMOVE QUARTER VENT LOUVER RETAINER**

**10. REMOVE QUARTER VENT DUCT**



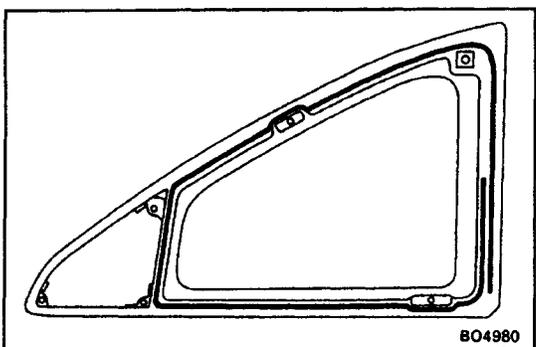
## QUARTER WINDOW GLASS INSTALLATION

BO0G3-01

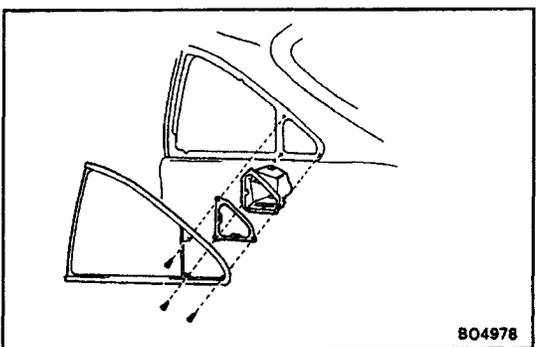
(See page [BO-47](#))

**1. CLEAN BODY OR GLASS**

Wipe off any adhesive left on the body or moulding with cleaner.



**2. APPLY ADHESIVE AT MOULDING INSTALLATION AREA**

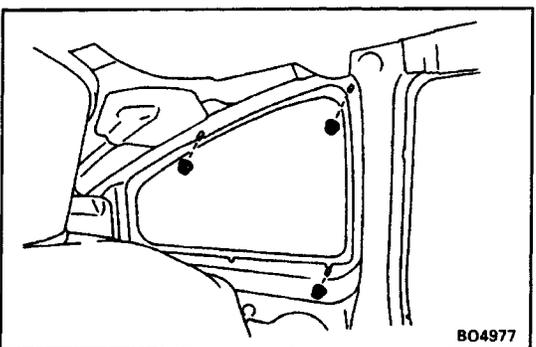


**3. INSTALL QUARTER VENT DUCT**

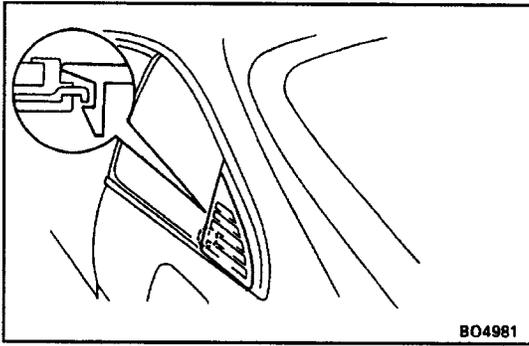
**4. INSTALL QUARTER VENT LOUVER RETAINER**

**5. INSTALL QUARTER WINDOW GLASS WITH MOULDING**

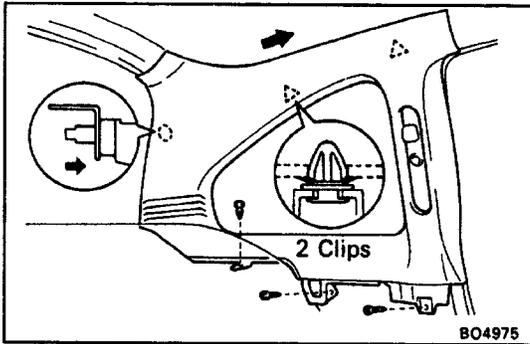
- (a) Install the glass with moulding to the body.
- (b) Install three screws.



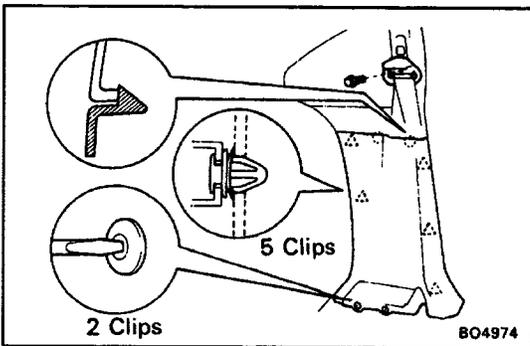
- (c) Install three nuts.

**6. INSTALL QUARTER VENT LOUVER**

Push in the louver to install it.

**7. INSTALL ROOF SIDE INNER GARNISH**

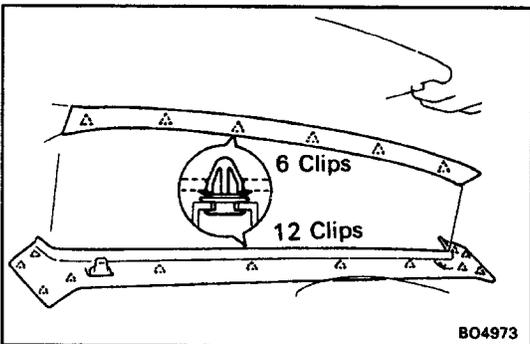
- (a) Slide the garnish rearward and tap the garnish to install it.
- (b) Install two screws and the clip.

**8. INSTALL SEAT BELT SHOULDER ANCHOR**

Install the shoulder anchor with the bolt.  
Torque: 43 N-m (440 kgf-cm, 32 ft-lbf)

**9. INSTALL QUARTER TRIM PANEL**

- (a) Tap the panel to install it.
- (b) Install two clips.

**10. INSTALL ROOM PARTITION TRIM MOULDING****11. INSTALL ROOF HEADLINING REAR TRIM****12. INSTALL DOOR SCUFF PLATE**