



SEAT BELT COMPONENTS

BOOCT-01

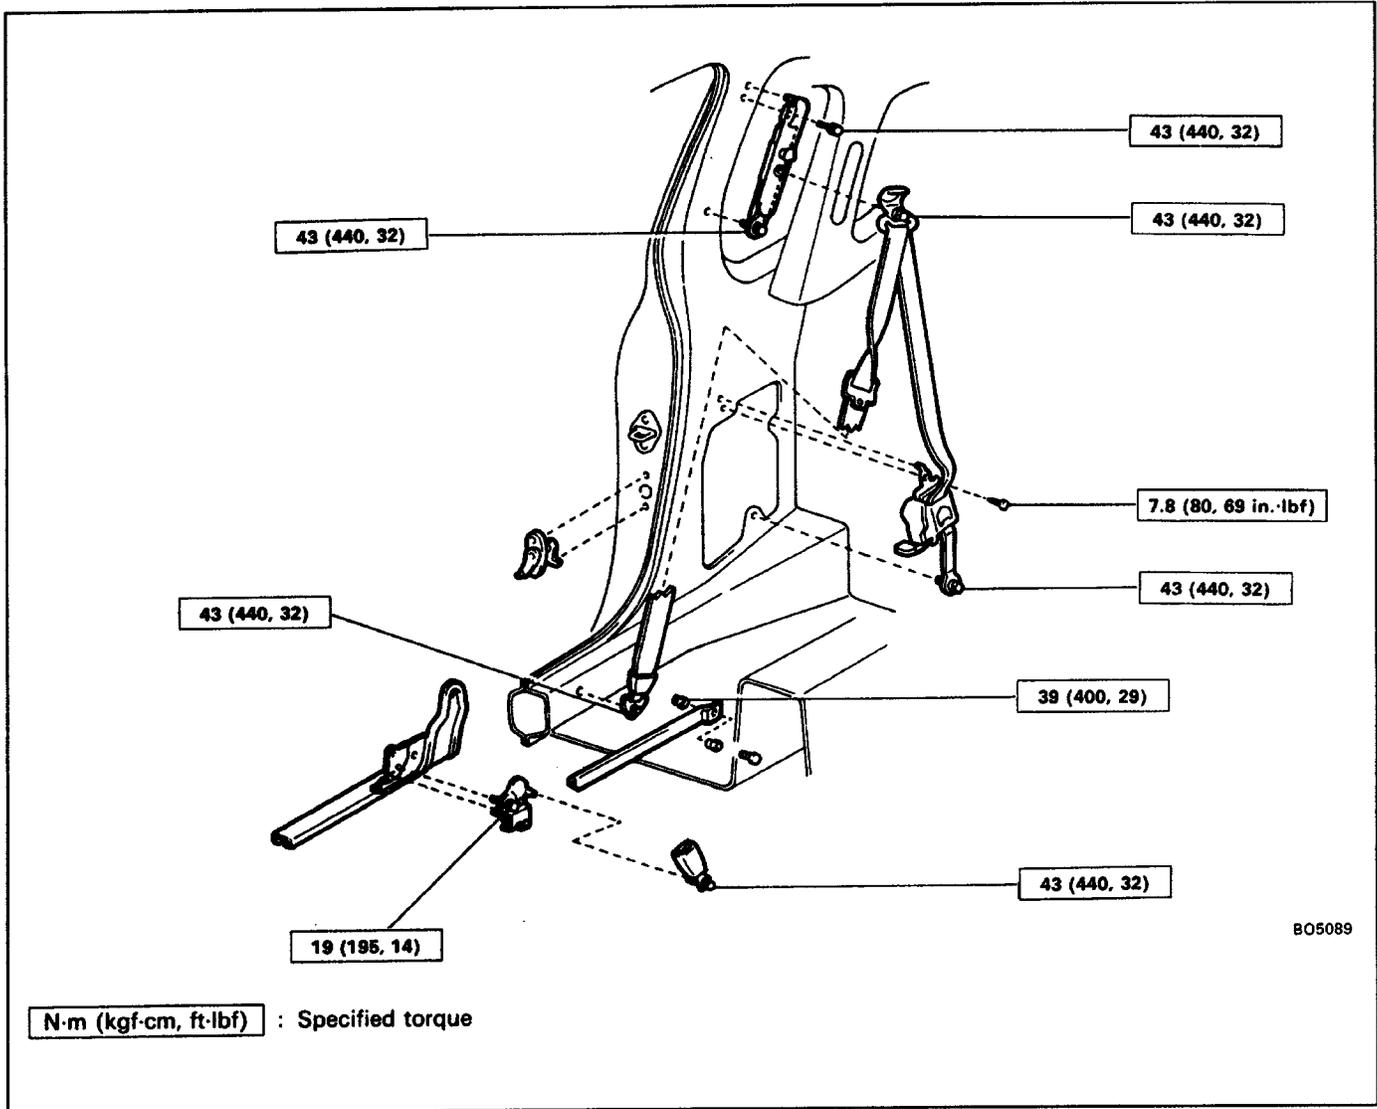

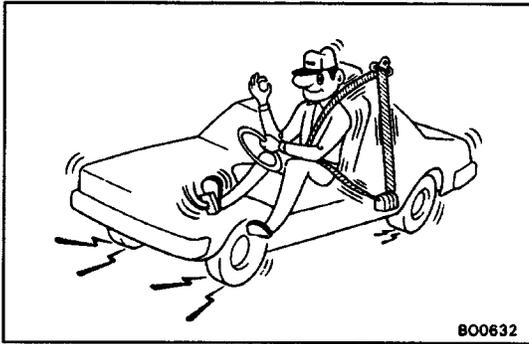


SEAT BELT INSPECTION

[Emergency Locking Retractor (ELR) Type]

1. RUNNING TEST (IN SAFE AREA)

- (a) Fasten the front seat belts.
- (b) Drive the car at 10 mph (16 km/h) and make a very hard stop.
- (c) Check that the belt is locked and cannot be extended at this time.

HINT: Conduct this test in a safe area. If the belt does not lock, remove the belt mechanism assembly and conduct the following static check. Also, whenever installing a new belt assembly, verify the proper operation before installation.

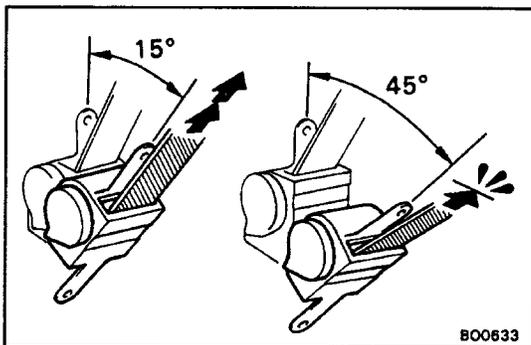

2. STATIC TEST

- (a) Verify that the belt locks when pulled out quickly.
- (b) (Passenger's belt only)
Verify that the belt cannot be pulled out further once you pull it out and allow it to retract a little.
- (c) Remove the locking retractor assembly.
- (d) Tilt the retractor slowly.
- (e) Verify that the belt can be pulled out at a tilt of 15 degrees or less, and cannot be pulled out at over 45 degrees of tilt.

If a problem is found, replace the assembly.