
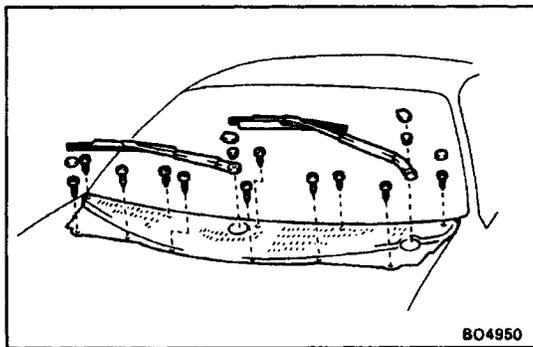


WINDSHIELD MOULDING COMPONENTS


BO09G-01

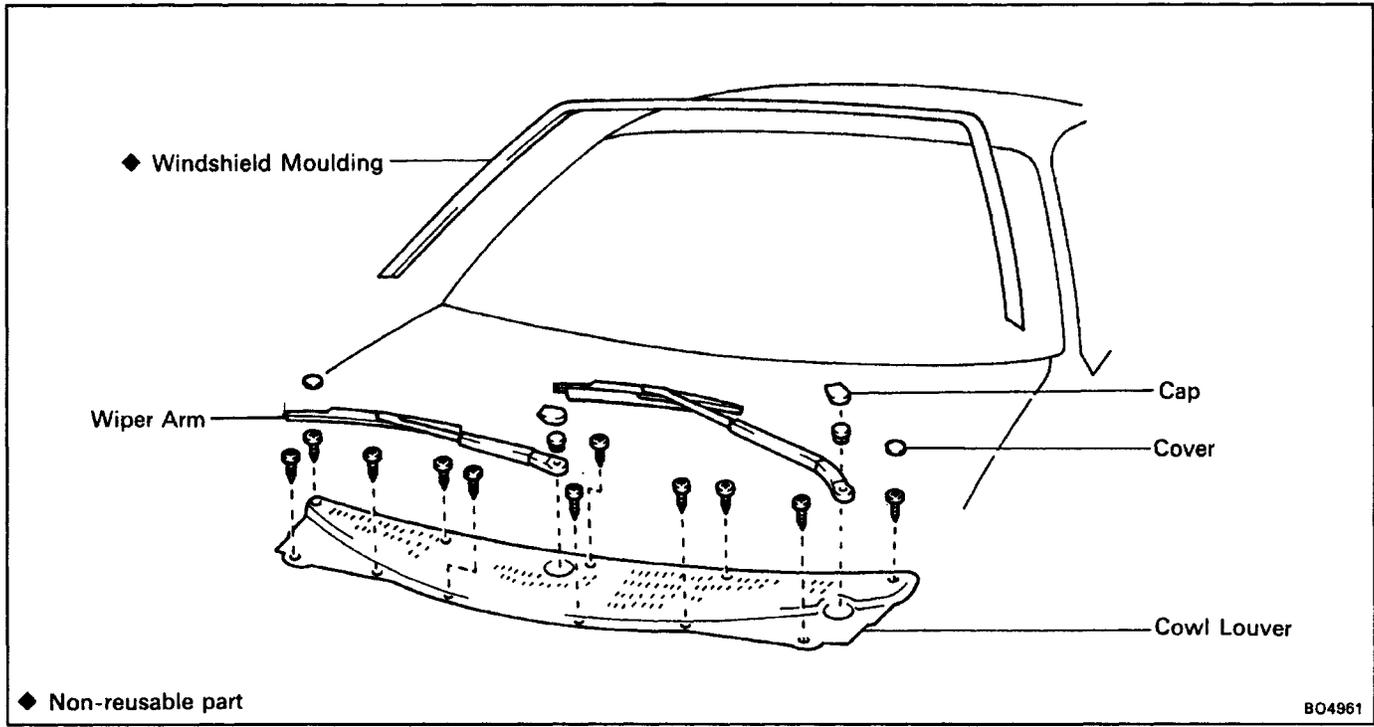

WINDSHIELD MOULDING REMOVAL

BO08H-01

1. REMOVE WIPER ARMS
 - (a) Remove two caps.
 - (b) Remove two nuts and two wiper arms.
2. REMOVE COWL LOUVER
 - (a) Remove two covers.
 - (b) Remove eleven screws and the cowl louver.

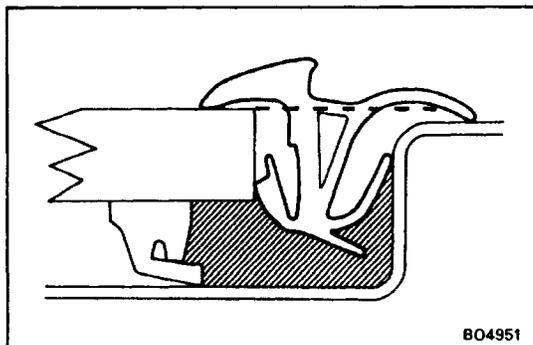


3. REMOVE WINDSHIELD MOULDING

Using a knife, cut off the moulding as shown.

NOTICE: Do not damage the body with the knife.

WINDSHIELD MOULDING INSTALLATION


(See page [BO-30](#))

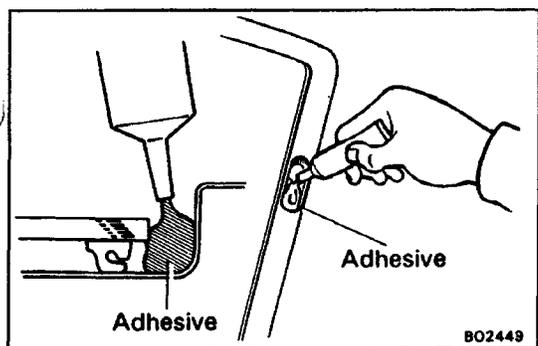

1. CUT ADHESIVE AT MOULDING INSTALLATION AREA


Using the knife, cut off the adhesive around the moulding installation area.

2. APPLY ADHESIVE AT MOULDING INSTALLATION AREA

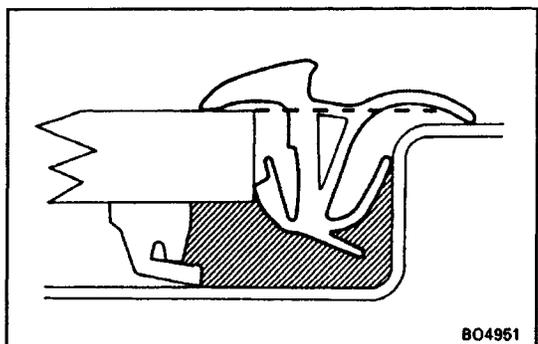

3. INSTALL WINDSHIELD MOULDING

Place the moulding onto the body and tap it by hand.

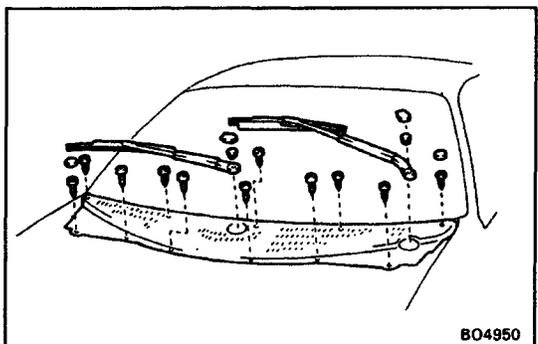

4. INSTALL COWL LOUVER

- (a) Install the cowl louver with eleven screws.
- (b) Install two covers.

5. INSTALL WIPER ARMS

- (a) Install two wiper arms with two nuts.
- (b) Install two caps.