



AIR INLET SERVOMOTOR

AC0E1-01

AIR INLET SERVOMOTOR INSPECTION

INSPECT SERVOMOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 4, check that the arm rotates to the "FRESH" side smoothly.
- (b) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 4, check that the arm rotates to the "RECIRC" side smoothly.

If operation is not as specified, replace the servomotor.

