



AIR OUTLET SERVOMOTOR

AIR OUTLET SERVOMOTOR INSPECTION

INSPECT SERVOMOTOR OPERATION

- Connect the positive (+) lead from the battery to terminal 6 and the negative (-) lead to terminal 7.
- Connect the positive (+) lead from the battery to each terminal and check that the arm rotates to each position as shown.
If operation is not as specified, replace the servomotor.