



BLOWER MOTOR

AC060-01

BLOWER MOTOR INSPECTION

INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the motor operation is smooth.

If operation is not as specified, replace the motor.