


DRIVE BELT TENSION

DRIVE BELT TENSION INSPECTION

1. INSPECT DRIVE BELT'S INSTALLATION CONDITION

Check that the drive belt fits properly in the ribbed grooves.

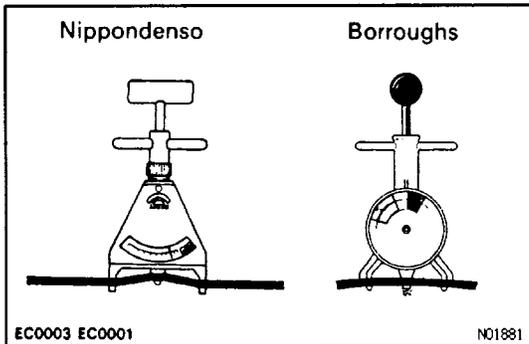

2. INSPECT DRIVE BELT TENSION

(Reference)

Using SST, check the drive belt tension.

SST 09216-00020 and 09216-00030

Drive belt tension:

New belt 160 ± 25 lb

Used belt 100 ± 20 lb

HINT:

- "New belt" refers to a belt which has been used less than 5 minutes on a running engine.
- "Used belt" refers to a belt which has been used on a running engine for 5 minutes or more.
- After installing the drive belt, check that it fits properly in the ribbed grooves. .