



PRESSURE SWITCH

AC0EE-01

ON-VEHICLE INSPECTION

1. DISCONNECT CONNECTOR OF PRESSURE SWITCH
2. INSPECT PRESSURE SWITCH

- (a) Install the manifold gauge set.
- (b) Observe the gauge reading.
- (c) Check the continuity between the two terminals of the pressure switch shown in the below.

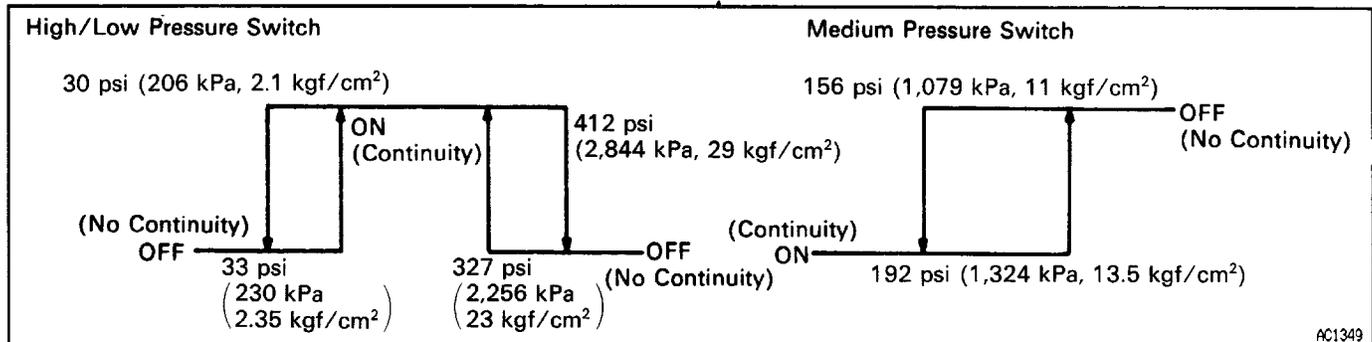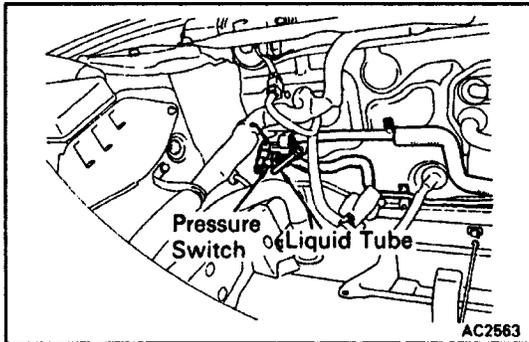

If defective, replace the pressure switch.

3. CONNECT CONNECTOR OF PRESSURE SWITCH