


J5 WIRING

CONSTRUCTION AND OPERATION-----	J5 - 1
FUSIBLE LINK-----	J5 - 1
BATTERY -----	J5 - 1
SIDE JUNCTION BLOCK -----	J5 - 1
FUSE BLOCK-----	J5 - 2
RELAY BLOCK-----	J5 - 2

1 CONSTRUCTION AND OPERATION

1-1 FUSIBLE LINK

The wire type fusible link is provided at the side of the battery.

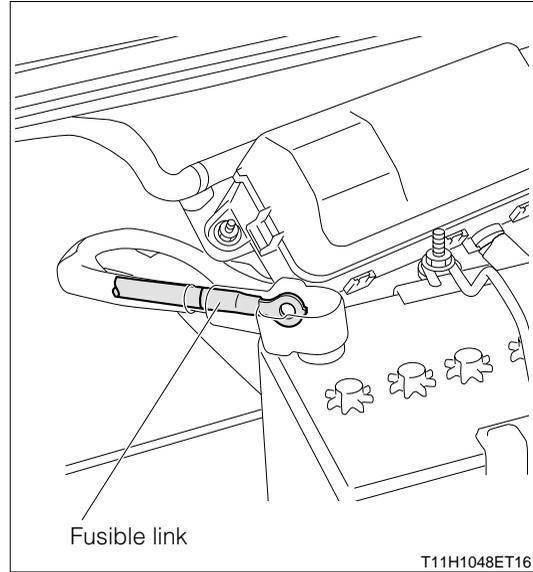

1-2 BATTERY

1. Two kinds of the batteries shown below have been provided.
2. The battery is provided at the left side of the engine compartment.

Specification table

Standard vehicle	40B19L
Cold region specification vehicle	44B20L

1-3 SIDE JUNCTION BLOCK

1. The side junction block integrates junction connectors that internally connect the wirings.
2. Use of the side junction block has made it possible to reduce the number of the junction connectors, thus simplifying wirings.
3. The side junction block is located at the foot area of the front left seat at the vehicle outer side.

