


# RADIATOR ELECTRIC COOLING FAN (With AC)

## Parts Location


EG078-08

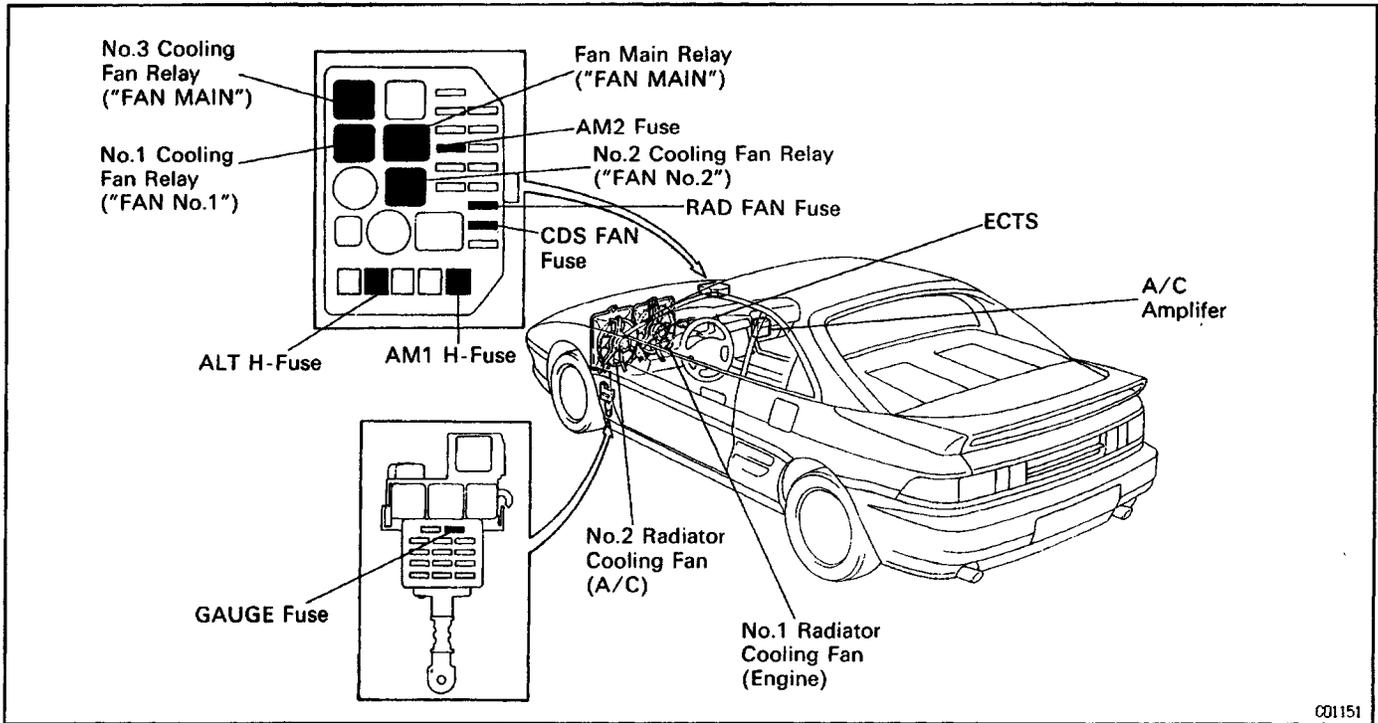

CO1151


## System Circuit

EG07C-06

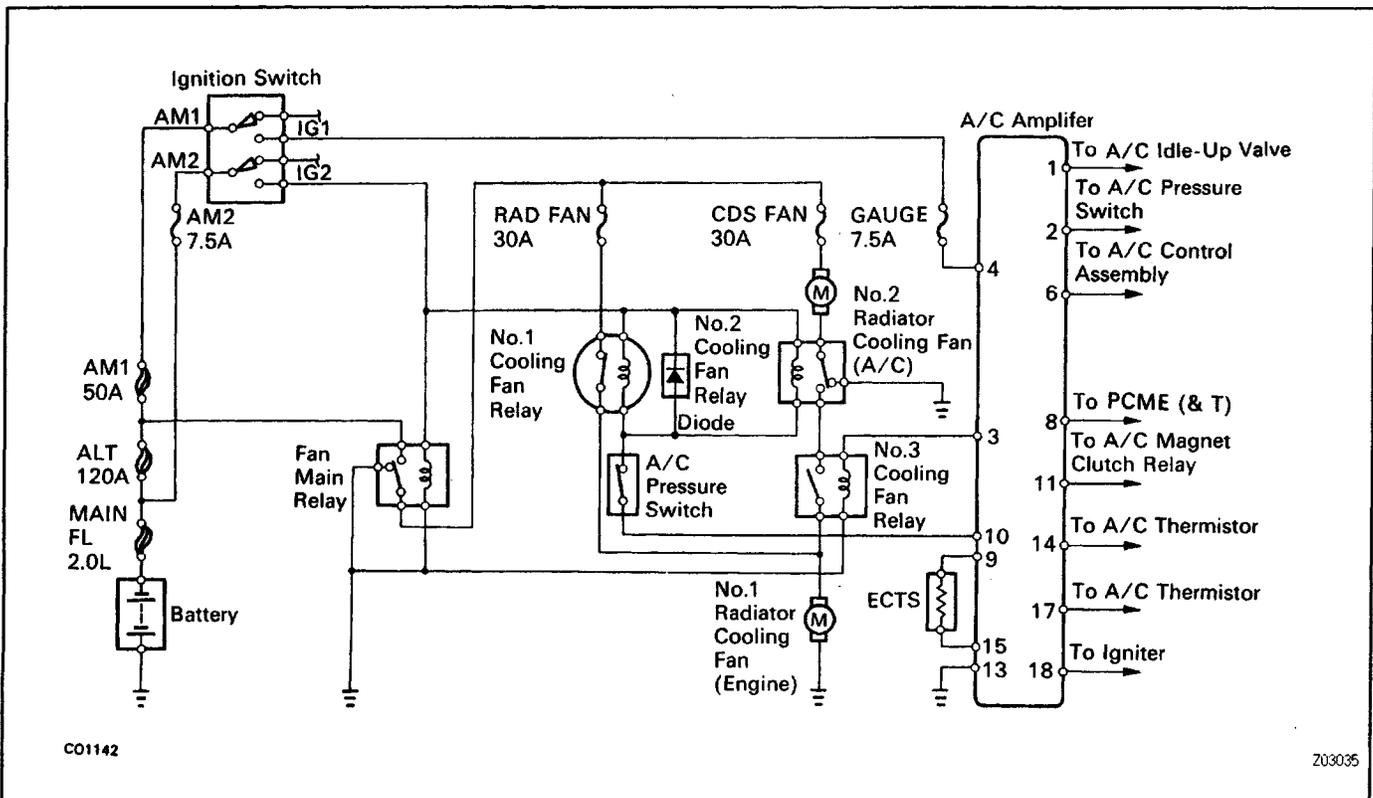

CO1142


203035

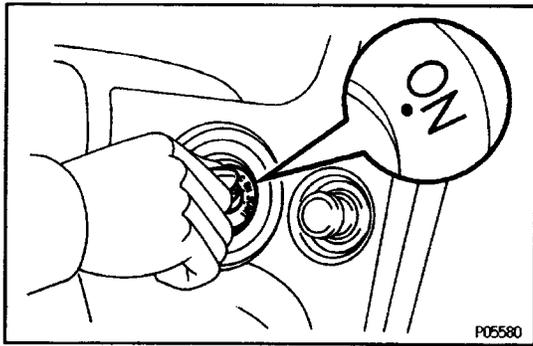


## On-Vehicle Inspection

### 1. INSPECT COOLING FAN OPERATION AT LOW TEMPERATURE (Below 85°C (185°F))


(a) Turn the ignition switch ON.

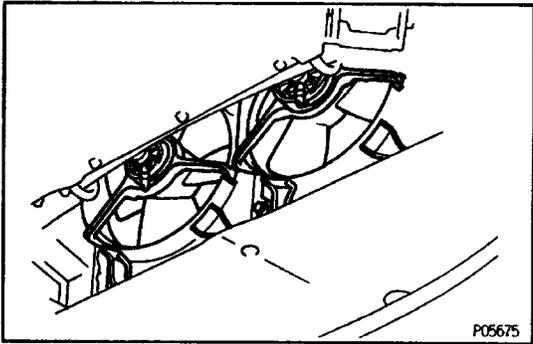


(b) Check that the cooling fans stops.  
If not, check the cooling fan relays and ECTS, and check for a separated connector or severed wire between the cooling fan relay and ECTS.

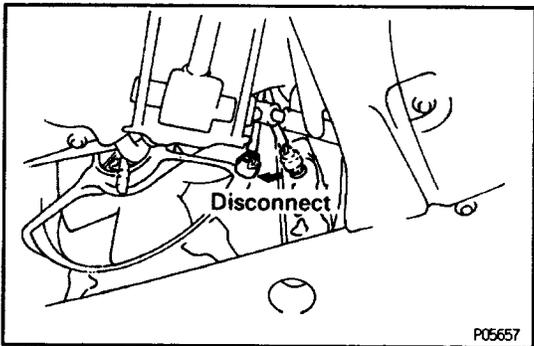


(c) Disconnect the ECTS connector.

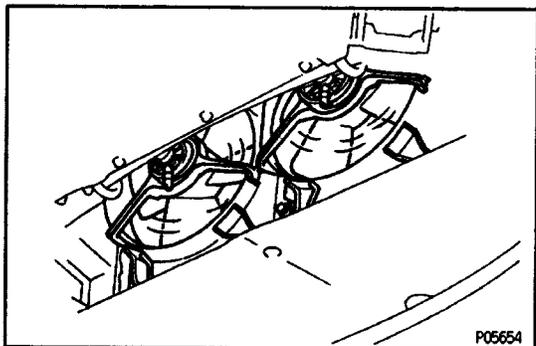

(d) Check that the cooling fans rotates.  
If not, check the fuses, fan main relay, cooling fan relays, A/C amplifier, cooling fan, and check for a short circuit between the cooling fan relay and ECTS.

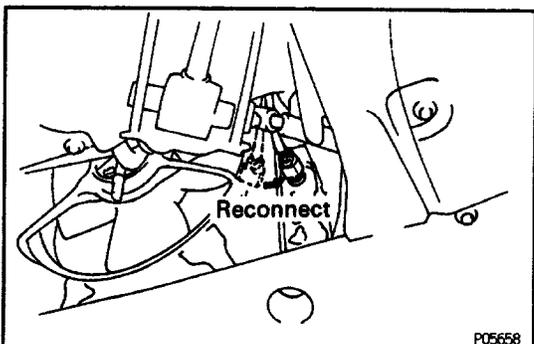


(e) Reconnect the ECTS connector.

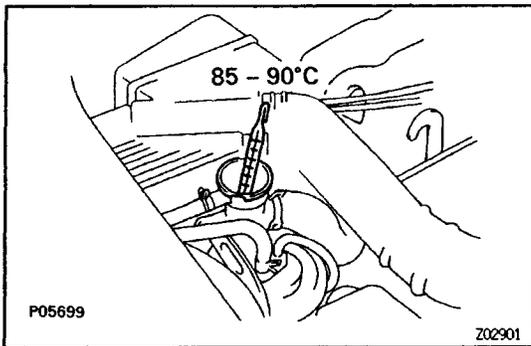


## 2. INSPECT COOLING FAN OPERATION AT HIGH TEMPERATURE (85 – 90°C (185 – 194°F))

- (a) Start the engine, and raise coolant temperature to 85 – 90° C (185 – 194° F).

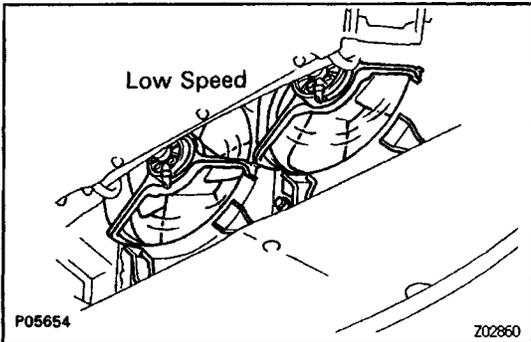


- (b) Check that the cooling fans rotates at low speed.  
If not, replace the ECTS.

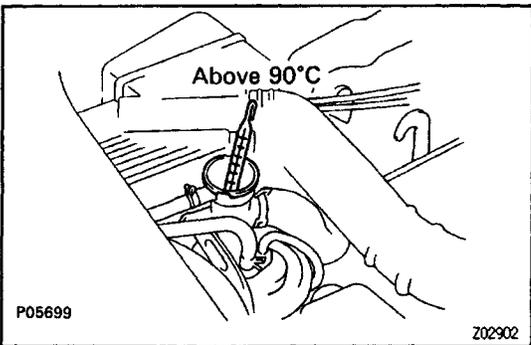



## 3. INSPECT COOLING FAN OPERATION AT HIGH TEMPERATURE (Above 90°C (194°F))

- (a) Start the engine, and raise coolant temperature to above 90° C (194° F).

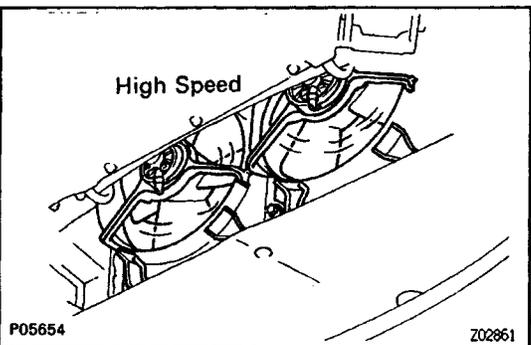

- (b) Check that the cooling fans rotates at high speed.  
If not, replace the ECTS.

# Cooling Fans COMPONENTS FOR REMOVAL AND INSTALLATION

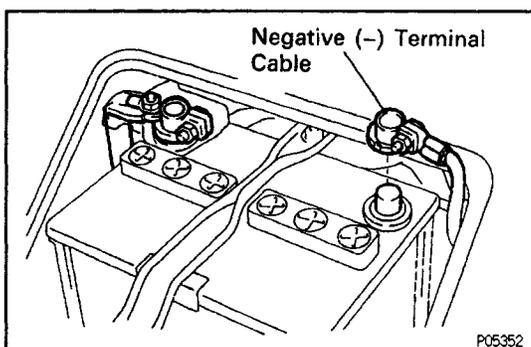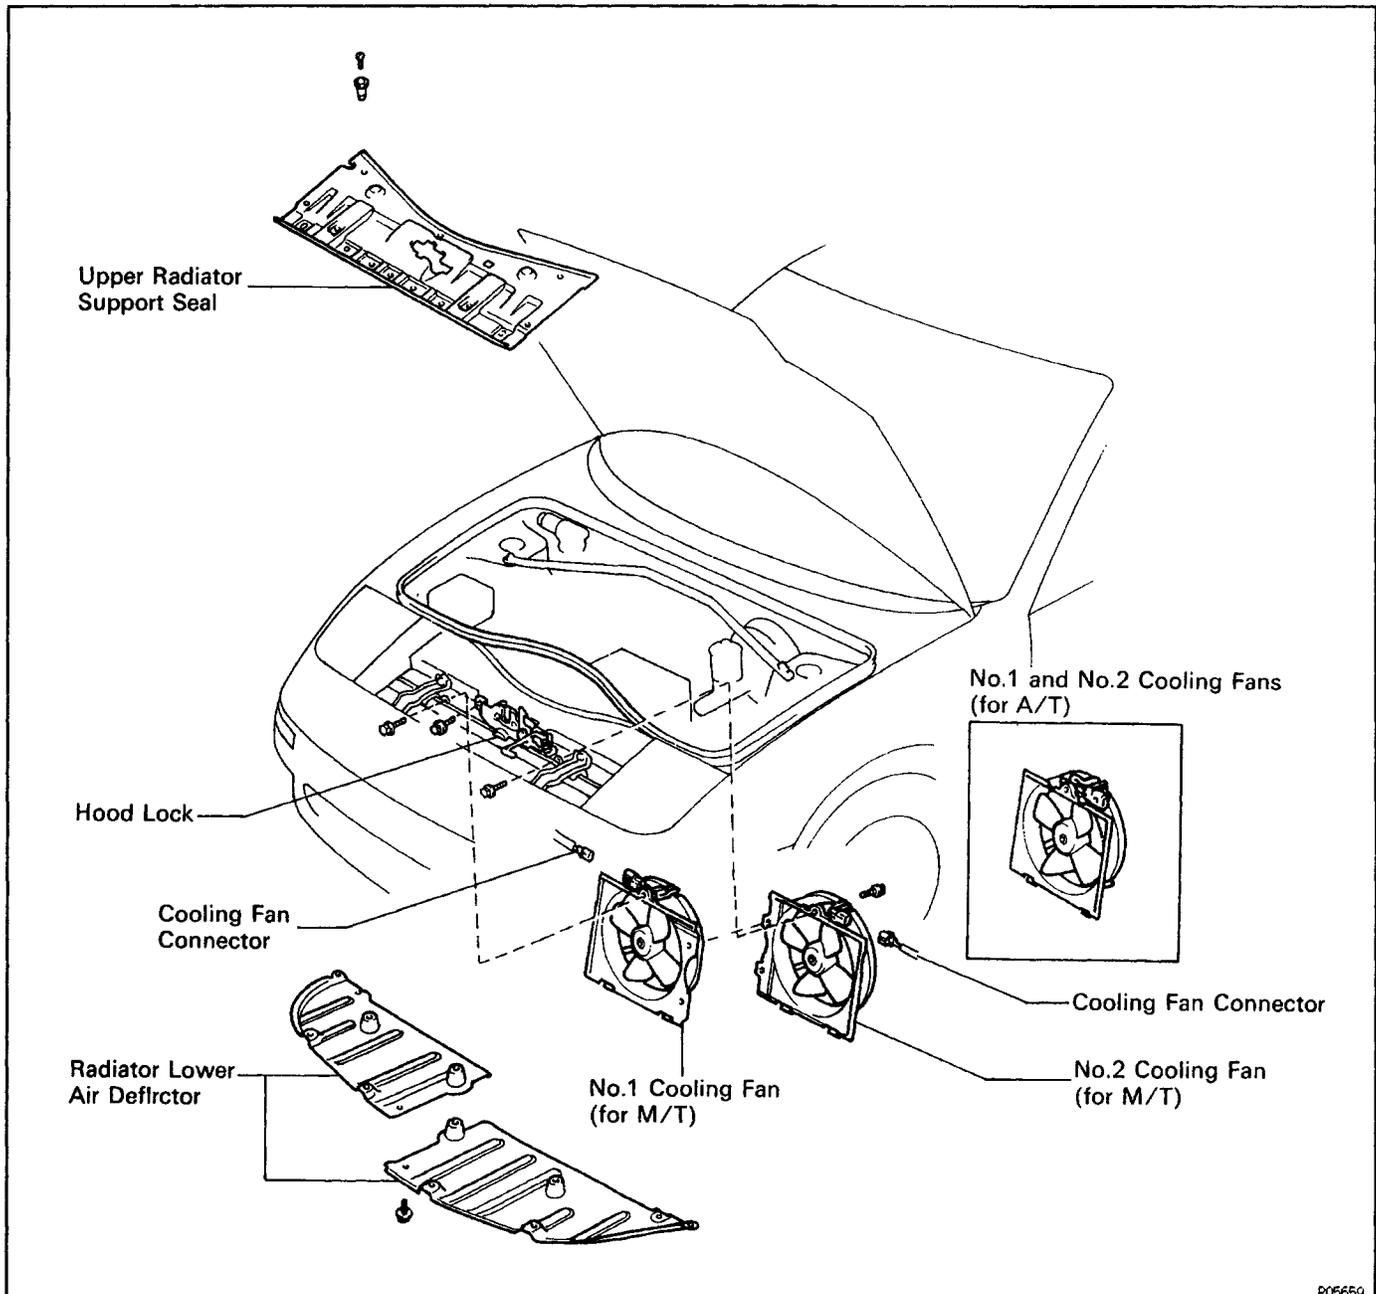


## COOLING FANS INSPECTION

(See Components for Removal and Installation)


1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY

**CAUTION:** Turn the ignition switch to "LOCK". Disconnect the negative terminal from the battery. Wait at least 20 seconds before proceeding with work.

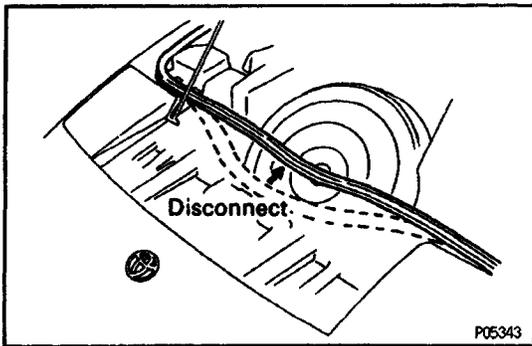


## 2. REMOVE UPPER RADIATOR SUPPORT SEAL

(a) Disconnect the hood weatherstrip.

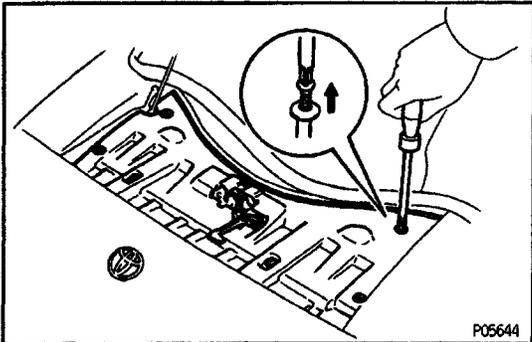

(b) Remove the clips.

(c) Remove the two hood lock mounting bolts, and remove the support seal.

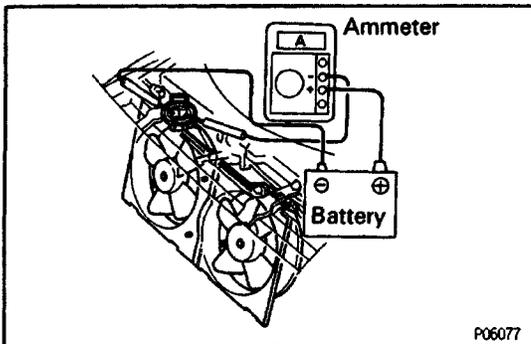

## 3. INSPECT COOLING FANS

(a) Disconnect the two cooling fan connectors.

(b) Connect battery and ammeter to the cooling fan connector.


(c) Check that the cooling fan rotates smoothly, and check the reading on the ammeter.

**Standard amperage:**

**5.8 – 7.4 A for M/T**

**8.8 – 10.8 A for A/T**

(d) Reconnect the two cooling fan connectors.

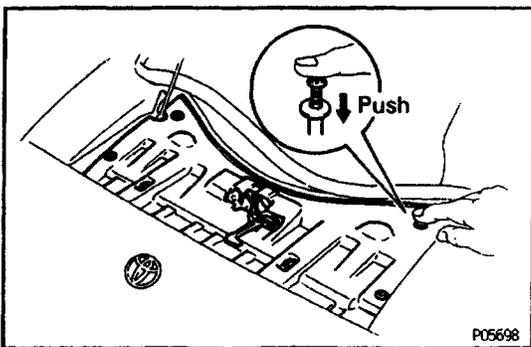


## 4. REINSTALL UPPER RADIATOR SUPPORT SEAL

(a) Temporarily install the hood lock with the RH side bolt.


(b) Place the support seal in position.

(c) Install the hood lock with the two bolts.

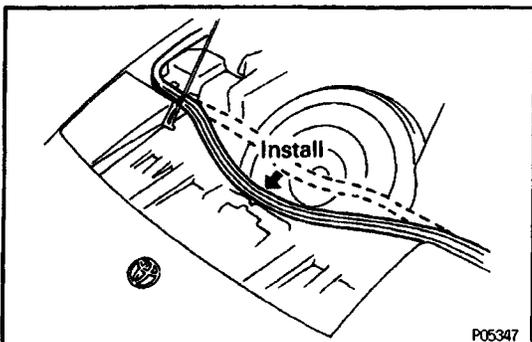

(d) Install the hood weatherstrip.

## 5. RECONNECT CABE TO NEGATIVE TERMINAL OF BATTERY

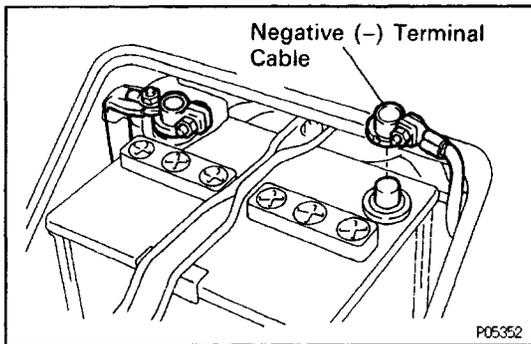


## COOLING FANS REMOVAL

(See Components for Removal and Installation)

### 1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY


**CAUTION:** Turn the ignition switch to "LOCK". Disconnect the negative terminal from the battery. Wait at least 20 seconds before proceeding with work.

### 2. REMOVE RADIATOR LOWER AIR DEFLECTOR

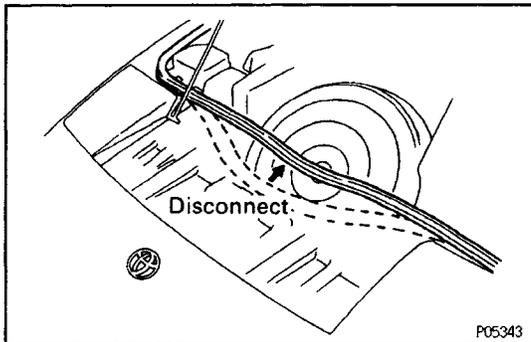


### 3. REMOVE UPPER RADIATOR SUPPORT SEAL

(a) Disconnect the hood weatherstrip.

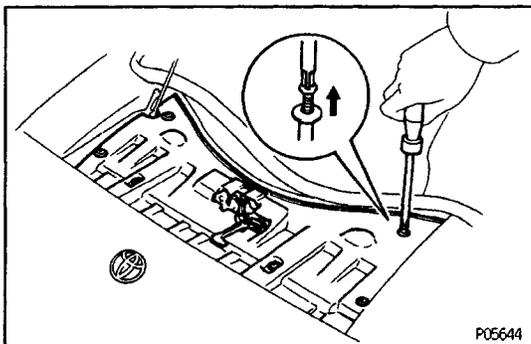


(b) Remove the seven clips.

(c) Remove the two hood lock mounting bolts, and remove the support seal.

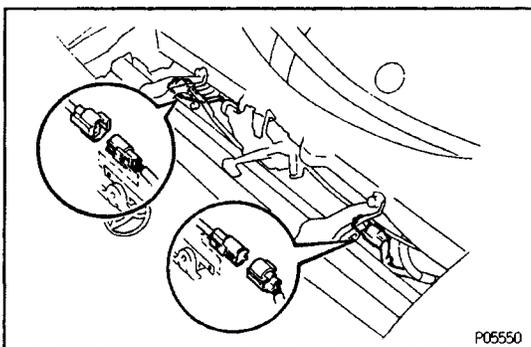


### 4. REMOVE COOLING FANS

(a) Disconnect the two cooling fan connectors.

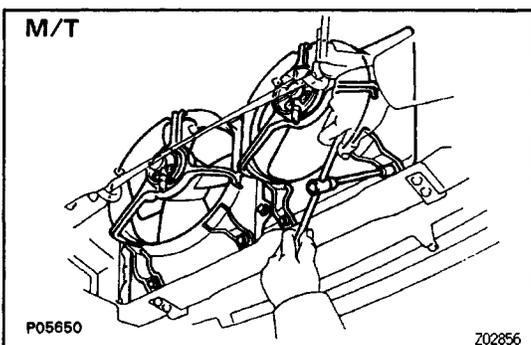

(b) (M/T)



Remove the five bolts and No.2 cooling fan. Remove the three bolts and No.1 cooling fan.

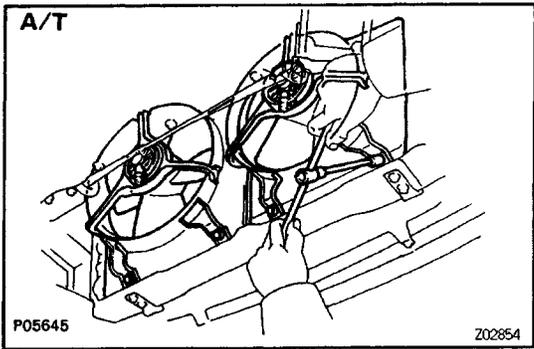

(c) (A/T)

Remove the three bolts and cooling fan. Remove the two cooling fans.

## COMPONENTS FOR DISASSEMBLY AND ASSEMBLY

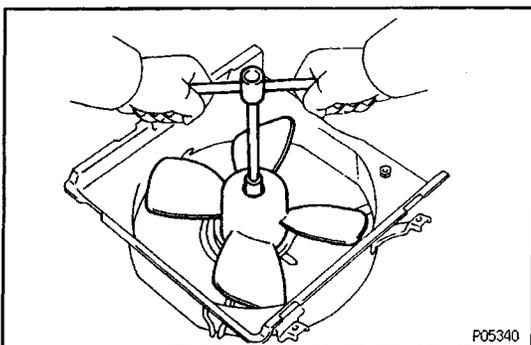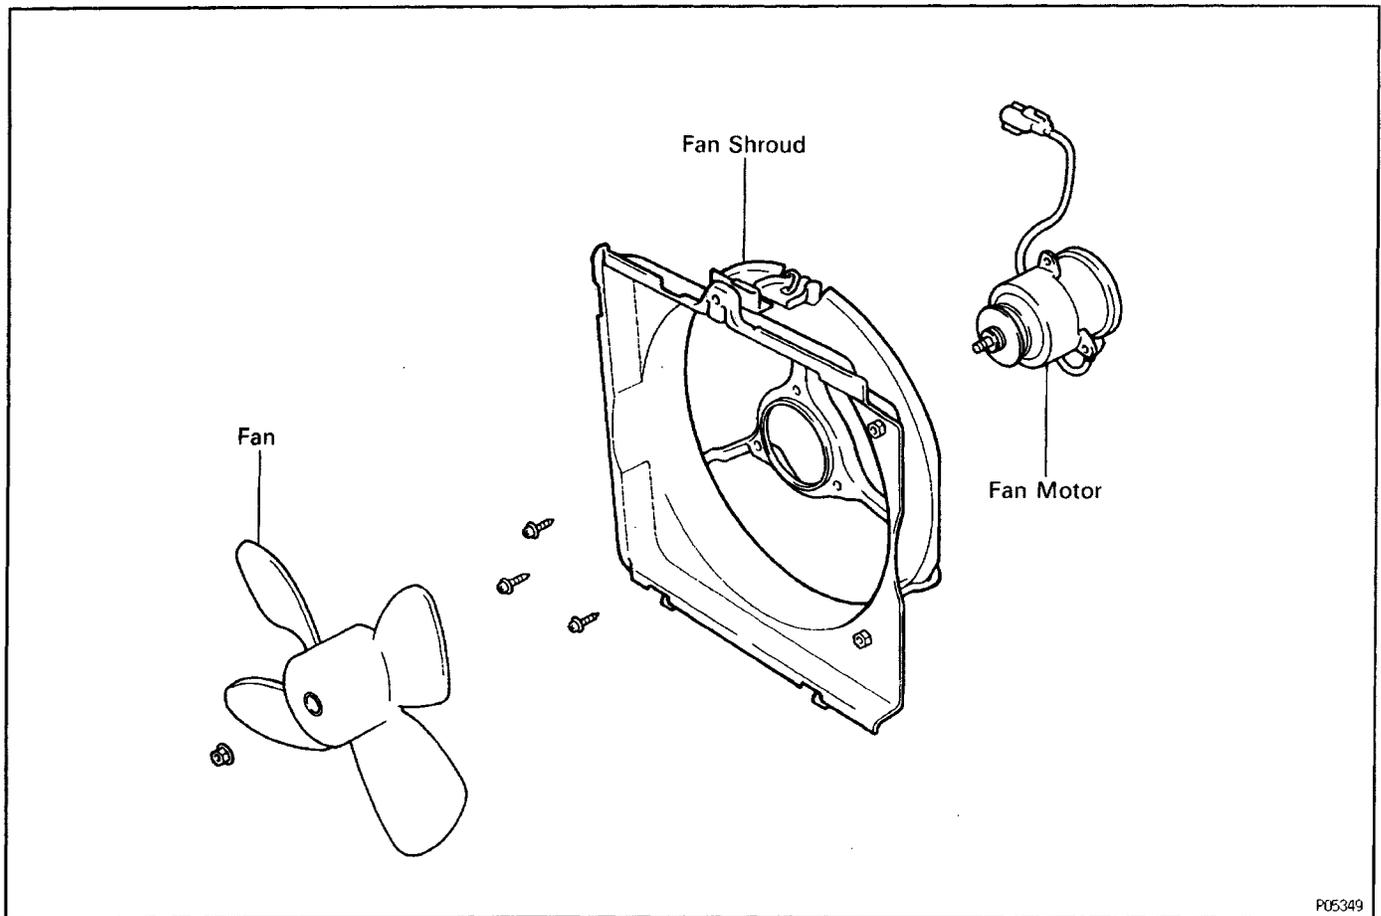


## COOLING FAN DISASSEMBLY

(See Components for Disassembly and Assembly)


### 1. REMOVE FAN

Remove the nut and fan.

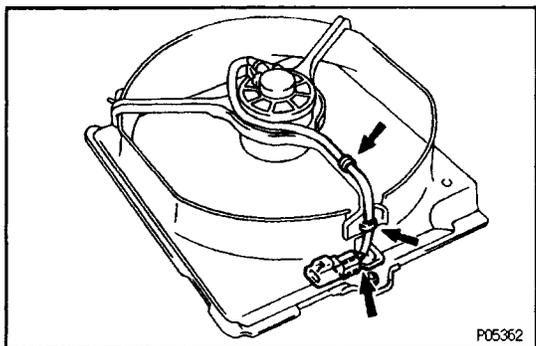


## 2. REMOVE FAN MOTOR

- (a) Disconnect the wire and connector from the fan shroud.

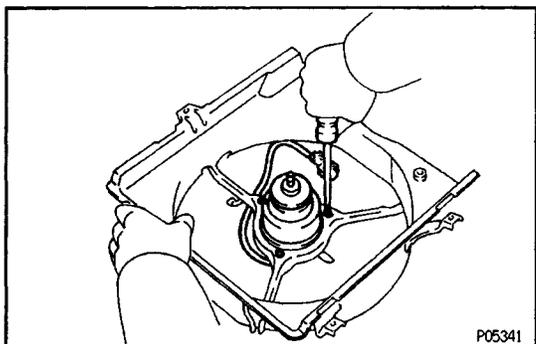

- (b) Remove the three screws and fan motor.

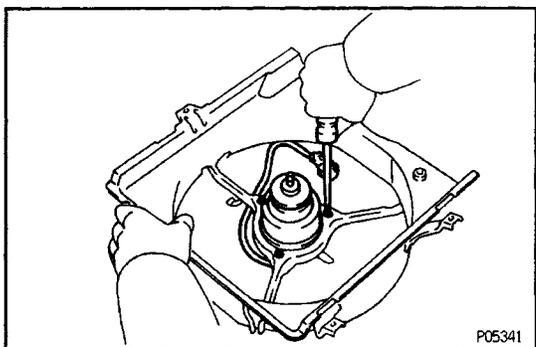


## COOLING FAN ASSEMBLY

0018V-01


(See Components for Disassembly and Assembly)

### 1. INSTALL FAN MOTOR

- (a) Install the fan motor with the nut.

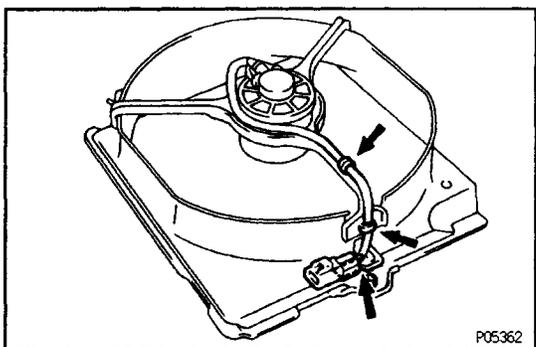


- (b) Install the wire and connector to the fan shroud.

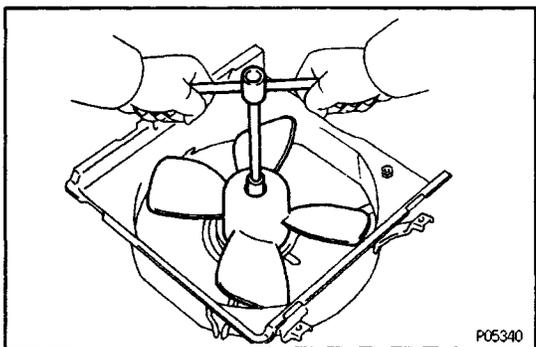

### 2. INSTALL FAN

Install the fan with the nut.

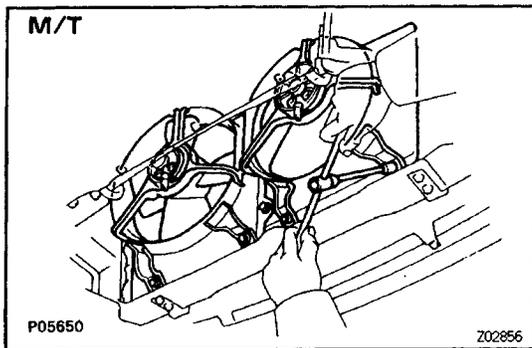


## COOLING FANS INSTALLATION

(See Components for Disassembly and Assembly)

### 1. INSTALL COOLING FANS


(a) (M/T)

Install the No. 1 cooling fan with the three bolts. Install the No.2 cooling fan with the five bolts.

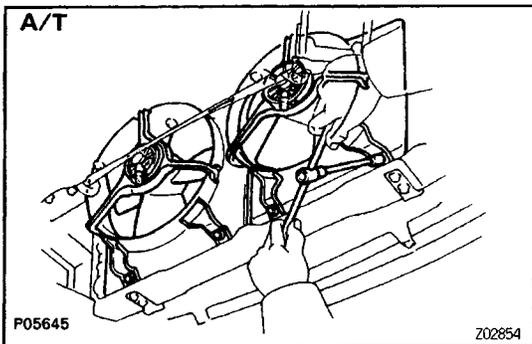


(b) (A/T)

Install the cooling fan with the three bolts. Install the two cooling fans.

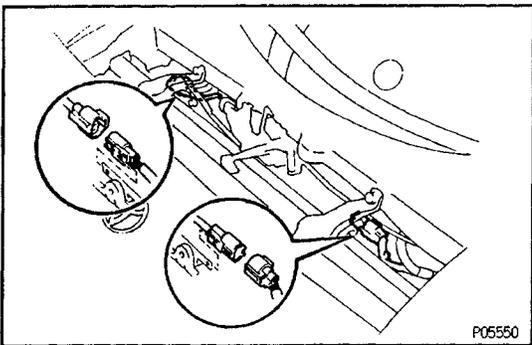

(c) Connect the two cooling fan connectors.

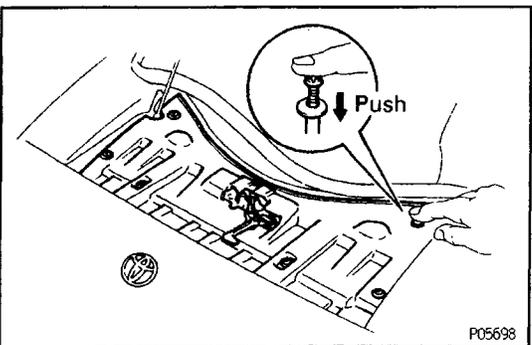


### 2. INSTALL UPPER RADIATOR SUPPORT SEAL

(a) Temporarily install the hood lock with the RH side bolt.

(b) Place the support seal in position.

(c) Install the hood lock with the two bolts.

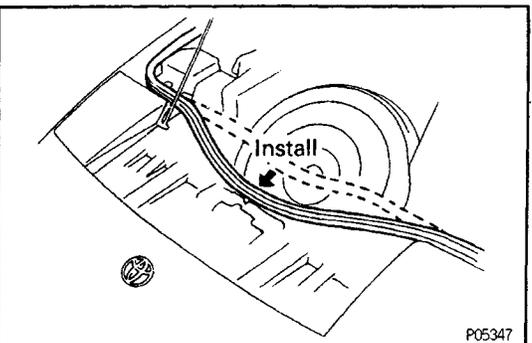


(d) Install the hood weatherstrip.


### 3. INSTALL RADIATOR LOWER AIR DEFLECTOR

### 4. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY

# A/C Amplifier COMPONENTS FOR REMOVAL AND INSTALLATION

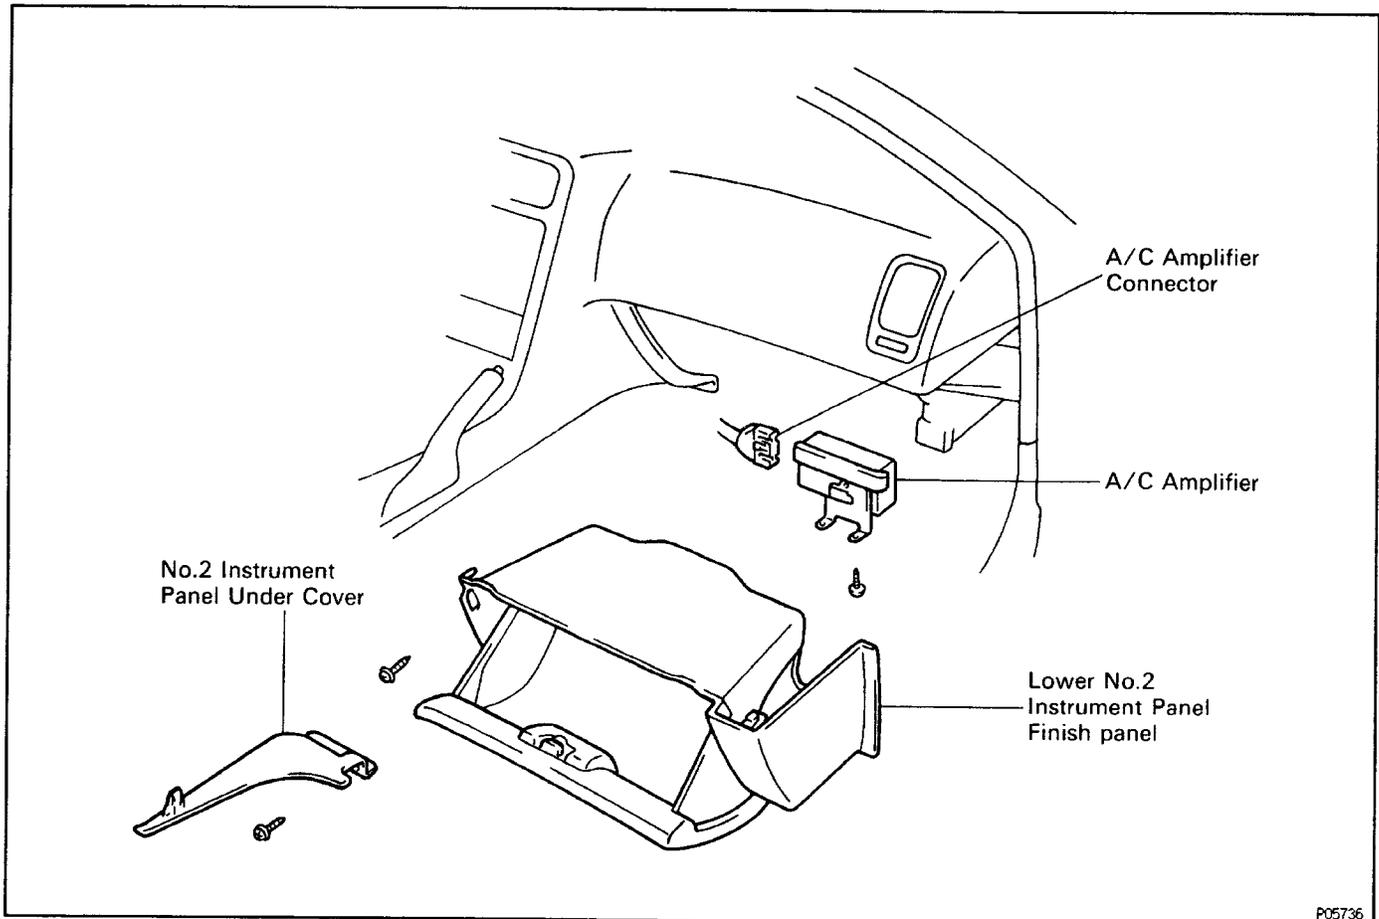

P05736

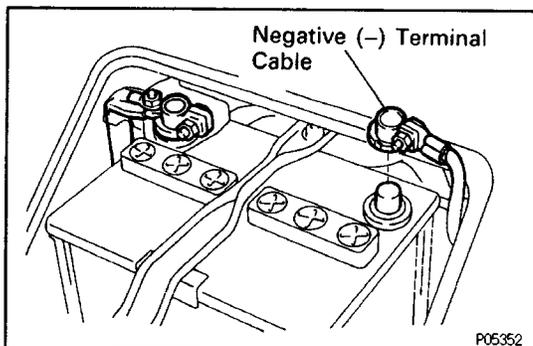

P05352


## A/C AMPLIFIER INSPECTION

E0141-01

(See Components for Removal and Installation)

### 1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY


**CAUTION:** Turn the ignition switch to 'LOCK'. Disconnect the negative terminal from the battery. Wait at least 20 seconds before proceeding with work.

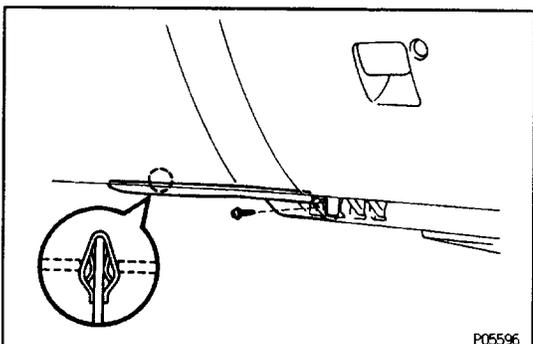

P05596


### 2. REMOVE NO.2 INSTRUMENT PANEL UNDER COVER

- (a) Remove the screw.
- (b) Remove the under cover by pulling it.

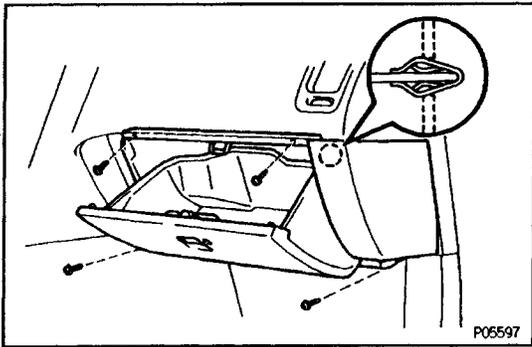


**3. REMOVE LOWER NO.2 INSTRUMENT FINISH PANEL**

- (a) Remove the four screws.
- (b) Remove the finish panel by pulling it.

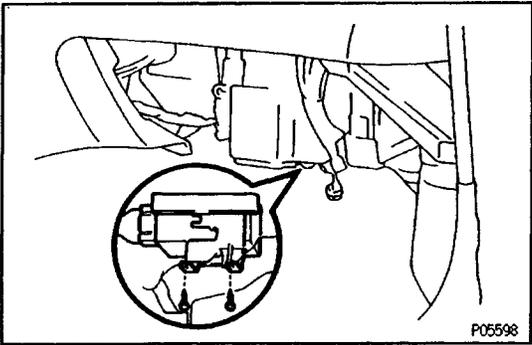


**4. INSPECT A/C AMPLIFIER**

- (a) Remove the two screws, and disconnect the A/C amplifier from the cooler unit.
- (b) Disconnect the A/C amplifier connector.

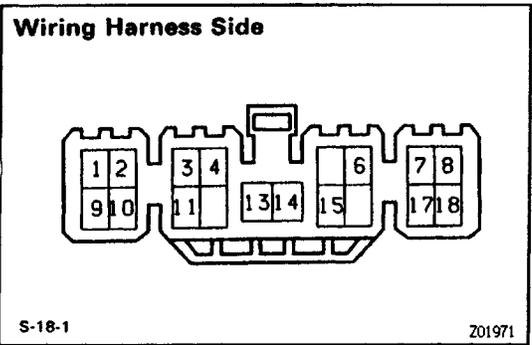


- (c) Check the connector on the wiring harness side as shown in the chart.

Check for	Tester connection	Condition	Specified valve	
Continuity	3 - Ground	-	Continuity	
Voltage	4 - Ground	Ignition switch ON	Battery voltage	
Resistance	9-15	Coolant temp.	85 °C (185 °F)	Approx. 1.35 kΩ
			90 °C (194 °F)	Approx. 1.19 kΩ
			95 °C (203 °F)	Approx. 1.05 kΩ
Voltage	10 - Ground	Ignition switch ON	Battery voltage	
Continuity	13 - Ground	-	Continuity	

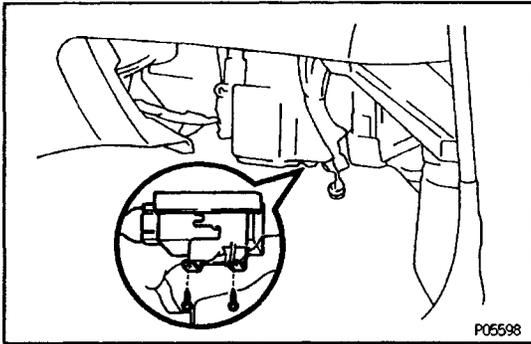


- (d) Reconnect the A/C amplifier connector.
- (e) Reinstall the A/C amplifier with the two screws.

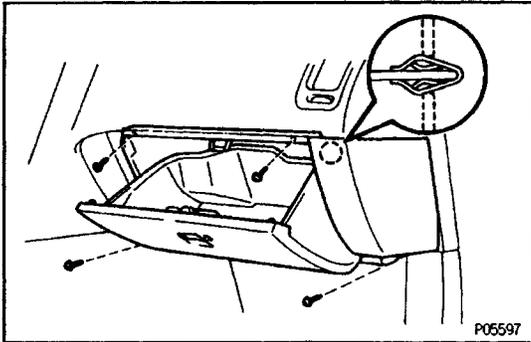

#### 5. REINSTALL LOWER NO. 2 INSTRUMENT FINISH PANEL


- (a) Attach the finish panel to the instrument panel with the clips.
- (b) Install the four screws.

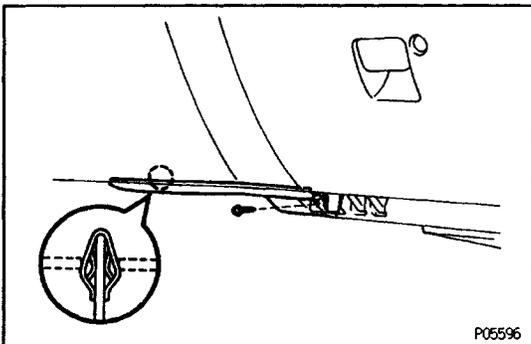

#### 6. REINSTALL NO. 2 INSTRUMENT PANEL UNDER COVER

- (a) Attach the finish panel to the instrument panel with the clips.
- (b) Install the screw.


#### 7. RECONNECT CABE TO NEGATIVE TERMINAL OF BATTERY

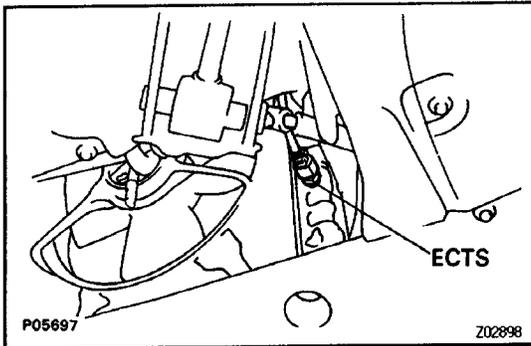

## Engine Coolant Temperature Sensor (ECTS) ECTS INSPECTION

1. DRAIN ENGINE COOLANT FROM RADIATOR
2. REMOVE ECTS

- (a) Disconnect the sensor connector.
- (b) Remove the ECTS.

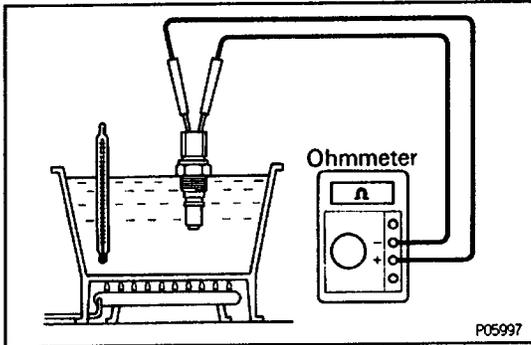

### 3. INSPECT ECTS

Using an ohmmeter, measure the resistance between the terminals.

#### Resistance:

Approx. 1.35 k $\Omega$  at 85° C (185° F)


Approx. 1.19 k $\Omega$  at 90° C (194° F)

Approx. 1.05 k $\Omega$  at 95° C (203° F)

If resistance is not as specified, replace the ECTS.

### 4. REINSTALL ECTS


### 5. REFILL WITH ENGINE COOLANT

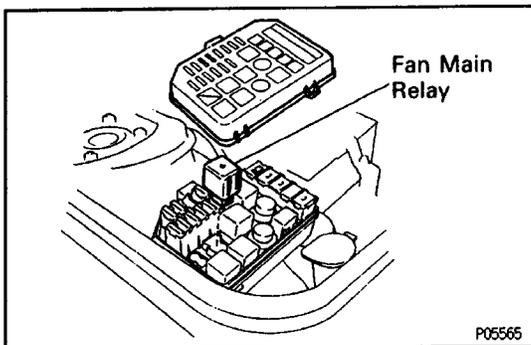

## Fan Main Relay ("FAN MAIN") FAN MAIN RELAY INSPECTION

EG148-01

### 1. REMOVE FAN MAIN RELAY

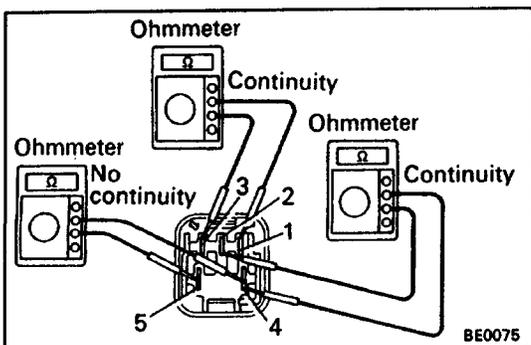


### 2. INSPECT FAN MAIN RELAY

#### A. Inspect relay continuity

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 3.
- (b) Check that there is continuity between terminals 2 and 4.
- (c) Check that there is no continuity between terminals 4 and 5.

If continuity is not as specified, replace the relay.

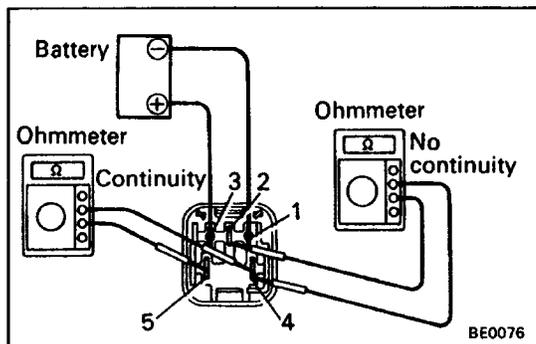


### B. Inspect relay operation

- Apply battery voltage across terminals 1 and 3.
- Using an ohmmeter, check that there is no continuity between terminals 2 and 4.
- Check that there is continuity between terminals 4 and 5.


If operation is not as specified, replace the relay.

### 3. REINSTALL FAN MAIN RELAY

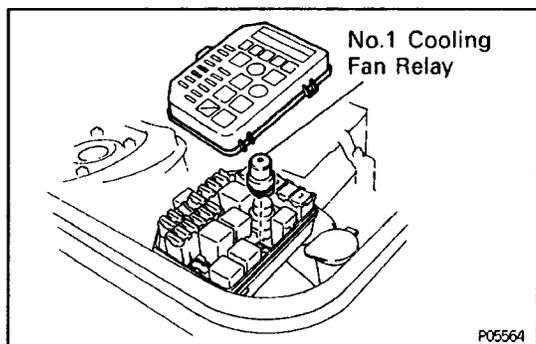

## No.1 Cooling Fan Relay ("FAN NO.1")<sup>EG144-01</sup> NO.1 COOLING FAN RELAY INSPECTION


### 7. REMOVE NO.1 COOLING FAN RELAY

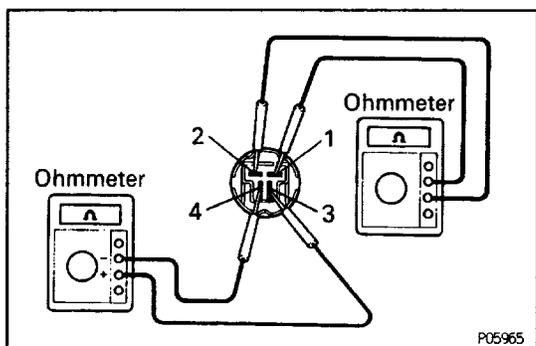

### 2. INSPECT NO.1 COOLING FAN RELAY

#### A. Inspect relay continuity

- Using an ohmmeter, check that there is continuity between terminals 1 and 2.
  - Check that there is continuity between terminals 3 and 4.
- If continuity is not as specified, replace the relay.

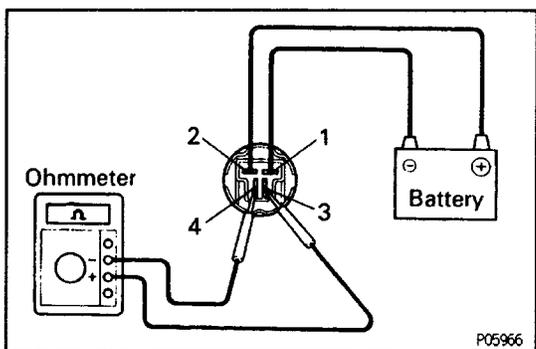


#### B. Inspect relay operation

- Apply battery voltage across terminals 1 and 2.
- Using an ohmmeter, check that there is no continuity between terminals 3 and 4.


If operation is not as specified, replace the relay.

### 3. REINSTALL NO.1 COOLING FAN RELAY

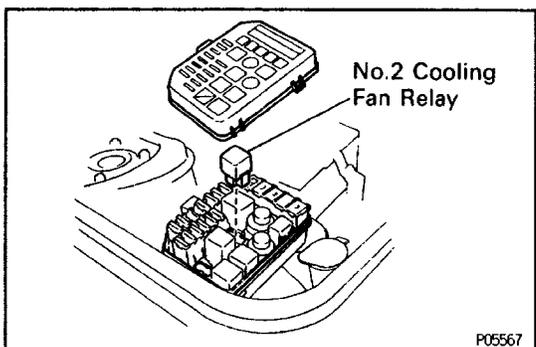

## No.2 Cooling Fan Relay ("FAN NO.2")<sup>EG146-01</sup> NO.2 COOLING FAN RELAY INSPECTION

### 1. REMOVE NO.2 COOLING FAN RELAY

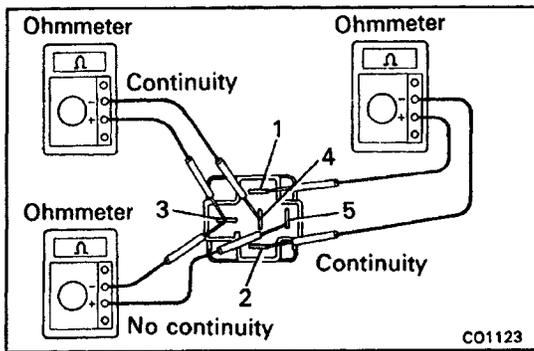

## 2. INSPECT NO.2 COOLING FAN RELAY

### A. Inspect relay continuity

- Using an ohmmeter, check that there is continuity between terminals 1 and 2.
- Check that there is continuity between terminals 3 and 4.
- Check that there is no continuity between terminals 3 and 5.



If continuity is not as specified, replace the relay.

### B. Inspect relay operation

- Apply battery voltage across terminals 1 and 2.
- Using an ohmmeter, check that there is no continuity between terminals 3 and 4.
- Using an ohmmeter, check that there is continuity between terminals 3 and 5.


If operation is not as specified, replace the relay.

## 3. REINSTALL NO.2 COOLING FAN RELAY

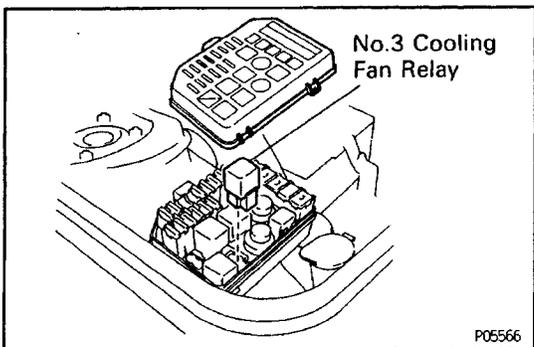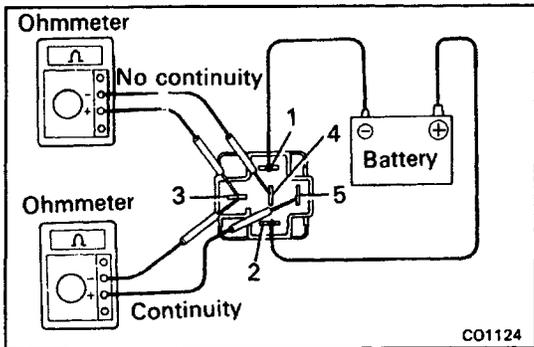

## No.3 Cooling Fan Relay ("FAN NO.3") NO.3 COOLING FAN RELAY INSPECTION

### 1. REMOVE NO.3 COOLING FAN RELAY

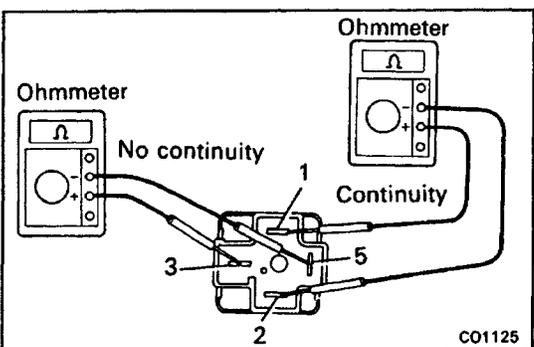

## 2. INSPECT NO.3 COOLING FAN RELAY

### A. Inspect relay continuity

- Using an ohmmeter, check that there is continuity between terminals 1 and 2.
- Check that there is no continuity between terminals 3 and 5.

If continuity is not as specified, replace the relay.

### B. Inspect relay operation

- Apply battery voltage across terminals 1 and 2.
- Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If operation is not as specified, replace the relay.

## 3. REINSTALL NO.3 COOLING FAN RELAY

